


# Cleaning

## Cleaning the remote controller

- Wipe it clean with soft, dry cloth.  
Do not use any water hotter than 40°C (104°F), or volatile liquids such as benzene, gasoline and thinner, polishing powder, or anything hard such as a scrub brush.

## When the unit is not used for a long time

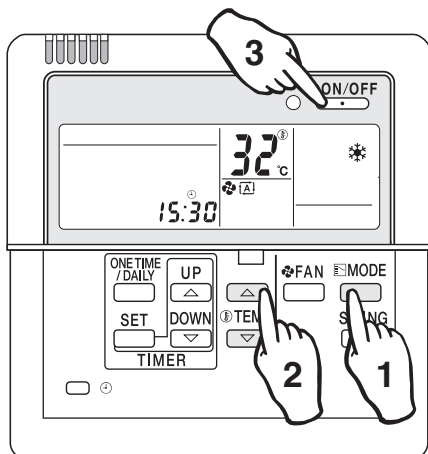

- ① On a sunny day, keep the system running for half a day in the FAN mode to dry it up inside.

### FAN mode

- 1 Press to select the cooling mode.
  - 2 Press to adjust the set temperature to 32°C (90°F).
  - 3 Press .
    - The airflow rate remains the same, and is not adjustable.
    - Run the system when the room temperature is below 28°C (82°F).
- ② Finally turn off the circuit breaker dedicated for the room air conditioner.
  - ③ Clean the air filter and place it back into position.