 


Coal Installation Step 1



Locate screws holding in the glass and remove

Coal Installation Step 3

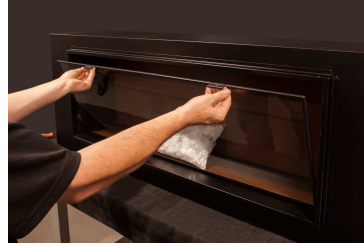

Carefully remove glass panel by pulling on the tabs located on the left and right side of the firebox.

Coal Installation Step 3



 
Locate Coal media, black paint, clear strip and orange strip inside the firebox before beginning installation.

Coal Installation Step 4



Insert clear strip in the center of the firebox covering the internal components. Place orange strip on top of clear strip. Place desired amount of stone on strip thoroughly covering the bottom.

Coal Installation Step 5

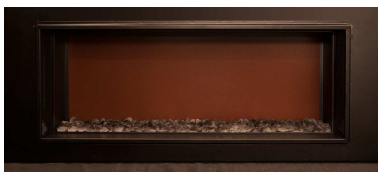

Place cardboard behind stones covering the orange back drop and then lightly dust the white stones with the black paint. Apply the desired amount of paint for coal look.

Coal Installation Step 6



Allow paint to dry and then replace glass over the front of the unit.