


AIR CONDITIONER OPTIONAL PARTS


P/N 9380247012-02

Auto Louver Grille OPERATING MANUAL

Safety Precautions

- The "SAFETY PRECAUTIONS" indicated in this operating manual contain important information pertaining to your safety. Be sure to observe them.
- For future use, such as relocating or repairing the unit, request the user to keep this manual together with the operating manual of the indoor unit.


 WARNING	This mark indicates procedures which, if improperly performed, might lead to the death or serious injury of the user.
<ul style="list-style-type: none">• This unit contains no user-serviceable parts. Always consult authorized service personnel for repairs.• When moving, consult authorized service personnel for disconnection and installation of this unit.• Do not repair or modify by yourself. It may cause failure or accident.• Never place fingers or foreign objects inside the outlet ports, and personal injury could be caused.	<ul style="list-style-type: none">• Be careful about the footing when handling or servicing the unit. Unstable footing may cause an injury due to toppling or falling of the unit.• When used in a room with infants, children, elderly or sick persons, the airflow direction and room temperature should be considered carefully when making settings.

 CAUTION	This mark indicates procedures which, if improperly performed, might possibly result in personal harm to the user or damage to property.
<ul style="list-style-type: none">• Do not wipe the unit with benzine, thinner or chemical cloths etc. Doing so may cause discoloration or malfunction. If the unit becomes extremely dirty, dampen a cloth with water-diluted neutral detergent and wipe the unit with it.	<ul style="list-style-type: none">• Do not hang objects from the grille.• Consult an authorized service personnel to remove the Grille from the wall.• Follow the Operating Manuals of the indoor units for usage precautions of air conditioners other than Grille.

- Perform the following operations after starting the unit.
- Stopping the unit would close the Up-down louvers.

Vertical Air Direction Adjustment

Vertical (up-down) airflow direction can be controlled by adjusting the Up-down louvers with remote controller of the indoor unit.

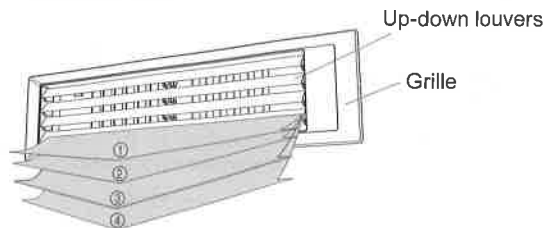


Cooling & Dry : ①* ② ③ ④
Heating : ① ② ③ ④*

* Initial position when changing the operation mode
Always use the remote controller to adjust the Up-down louvers. Attempting to move them manually could result in improper operation; in this case, stop operation and restart. The louvers should begin to operate properly again.

Horizontal Air Direction Adjustment

Horizontal (right-left) airflow direction can be manually set by adjusting Right-left louvers.

1. Whenever making horizontal airflow adjustments, start air conditioner operation and be sure that the Up-down louvers are stopped.
2. Move the Right-left louvers to adjust airflow in the direction you prefer.

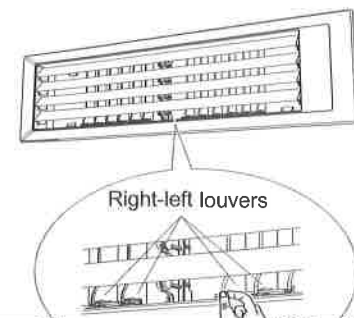

English

Deutsch

Français

Español

Italiano

Ελληνικά

Português

Русский

Türkçe