


## REMOTE CONTROLLER (WIRED TYPE)

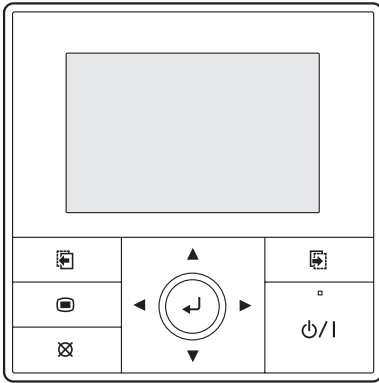

**UTY-RVNUM**

### INSTALLATION MANUAL

For authorized service personnel only.

English

### MANUEL D'INSTALLATION

Pour le personnel agréé uniquement.

Français

### MANUAL DE INSTALACIÓN

Sólo para personal de mantenimiento autorizado.

Español

# INSTALLATION MANUAL

PART No. 9380222057

## REMOTE CONTROLLER (WIRED TYPE)

### Contents

|  |    |
|--|----|
| 1. SAFETY PRECAUTIONS.....                               | 1  |
| 2. ACCESSORIES.....                                      | 2  |
| 3. ELECTRICAL REQUIREMENT.....                           | 2  |
| 4. SELECTING AN INSTALLATION LOCATION                    |    |
| 4.1. Dimensions.....                                     | 2  |
| 4.2. Name of parts.....                                  | 2  |
| 5. INSTALLING THE REMOTE CONTROLLER                      |    |
| 5.1. Wiring.....   | 3  |
| 5.2. Connection of remote controller cable.....          | 3  |
| 5.3. Installation.....                                   | 4  |
| 6. INSTALLATION METHODS                                  |    |
| 6.1. Group control.....                                  | 6  |
| 6.2. Dual remote controllers.....                        | 6  |
| 7. TURNING ON THE POWER.....                             | 6  |
| 8. INITIAL SETTING.....                                  | 6  |
| 9. SERVICE SCREEN SETTING                                |    |
| 9.1. Test run.....                                       | 7  |
| 9.2. Function setting.....                               | 7  |
| 9.3. Error history.....                                  | 8  |
| 9.4. I.U. address verification.....                      | 8  |
| 9.5. Version.....  | 8  |
| 10. SETTING THE ROOM TEMPERATURE DETECTION LOCATION..... | 8  |
| 11. MANAGEMENT FUNCTION                                  |    |
| 11.1. Password setting.....                              | 9  |
| 11.2. Management setting.....                            | 9  |
| 12. OTHERS   |    |
| 12.1. Error code.....                                    | 10 |

## 1. SAFETY PRECAUTIONS

- The "SAFETY PRECAUTIONS" indicated in the manual contain important information pertaining to your safety. Be sure to observe them.
- For details of the operation methods, refer to the operating manual.
- Request the user to keep the manual on hand for future use, such as for relocating or repairing the unit.

### ⚠ WARNING

This mark indicates procedures which, if improperly performed, might lead to the death or serious injury of the user.

### ⚠ CAUTION

This mark indicates procedures which, if improperly performed, might possibly result in personal harm to the user, or damage to property.

### ⚠ WARNING

For the air conditioner to operate satisfactorily, install it as outlined in this installation manual.

Do not turn on the power until all installation work is complete.

Perform electrical work by an authorized service personnel in accordance with the installation manual and the electrical wiring regulations or implementation regulations of the country. Improper electric work will cause electric shock or a fire.

Perform installation work in accordance with the installation manual. Request an authorized service personnel to perform installation work. Do not install this unit by yourself. Improper installation will cause injury, electric shock, fire, etc.

In the event of a malfunction (burning smell, etc.), immediately stop operation, turn off the electrical breaker, and consult authorized service personnel.

### ⚠ WARNING

Do not install the unit in the following areas:

- Do not install the unit near a source of heat, steam, or flammable gas.
- Area filled with mineral oil or containing a large amount of splashed oil or steam, such as a kitchen. It will deteriorate plastic parts, causing the parts to fall or the unit to leak water.
- Area that generates substances that adversely affect the equipment, such as sulfuric gas, chlorine gas, acid, or alkali. It will cause the copper pipes and brazed joints to corrode, which can cause refrigerant leakage.
- Area containing equipment that generates electromagnetic interference. It will cause the control system to malfunction, preventing the unit from operating normally.
- Area that can cause combustible gas to leak, contains suspended carbon fibers or flammable dust, or volatile inflammables such as paint thinner or gasoline. If gas leaks and settles around the unit, it can cause a fire.
- Install the unit in a well-ventilated place avoiding rains and direct sunlight.


Do not operate this unit when your hands are wet. Touching the unit with wet hands will cause an electric shock.

If children may approach the unit, take preventive measures so that they cannot reach the unit.

### ⚠ CAUTION

When detecting the room temperature using the remote controller, please set up the remote controller according to the following conditions. If the remote controller is not well set, the correct room temperature will not be detected, and thus the abnormal conditions like "not cooled" or "not heated" will occur even if the air-conditioner is running normally.

- Locate where is not be affected by inflow of outside air such as caused by opening and closing a door.
- Locate where an average temperature for the room being air-conditioned will be sensed.
- Do not locate directly exposed to the outlet air from the air conditioner.
- Locate out of direct sunlight.
- Locate away from the influence of other heat sources.

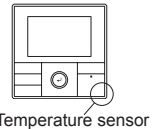

Do not touch the remote controller PC board and PC board parts directly with your hands.

Do not wire the remote controller cable and the bus wire together with or parallel to the connection cables, transmission cables, and power supply cables of the indoor and outdoor units. It may cause erroneous operation.

When installing the bus wire near a source of electromagnetic waves, use shielded wire.

Do not set the DIP switches, either on the air conditioner or the remote controller, in any way other than indicated in this manual or the manual that is supplied with the air conditioner. Doing so may result in an improper operation.

Do not touch the switches with sharp objects. Doing so will cause injury, trouble, or electric shock.









Do not expose this unit directly to water. Doing so will cause trouble, electric shock, or heating.

Do not set vessels containing a liquid on this unit. Doing so will cause heating, fire, or electric shock.

Dispose of the packing materials safely. Tear and dispose of the plastic packing bags so that children cannot play with them. There is the danger of suffocation if children play with the original plastic bags.

## 2. ACCESSORIES

The following installation parts are supplied. Use them as required.

| Name and Shape   | Q'ty | Application  |
|--|------|--|
| <br>Installation manual     | 1    | This manual  |
| <br>Operating manual        | 1    | Instruction book for operation   |
| <br>Remote controller cable | 1    | For connecting the remote controller   |
| <br>Connecting cable        | 1    | For connecting the remote controller cable to the wall mounted type and the floor type indoor unit |
| <br>Screw (M4 × 16 mm)      | 2    | For installing the remote controller   |
| <br>Cable tie               | 1    | For remote controller and remote controller cable binding  |
| <br>Screw (M4 × 14 mm)      | 1    | For installing the remote controller cable to the indoor unit                                      |
| <br>Cable clamber          | 1    | For installing the remote controller cable to the indoor unit                                      |

## 3. ELECTRICAL REQUIREMENT


When connecting the remote controller, use cable specified as follows:

|                         | Conductor size               | Type         | Remarks                |
|-------------------------|------------------------------|--------------|------------------------|
| Remote controller cable | 0.33 mm <sup>2</sup> (22AWG) | Polar 3 core | Use sheathed PVC cable |

\*We recommend that you purchase our service parts for the remote controller cable. Contact service personnel to purchase this.

## 4. SELECTING AN INSTALLATION LOCATION


### 4.1. Dimensions

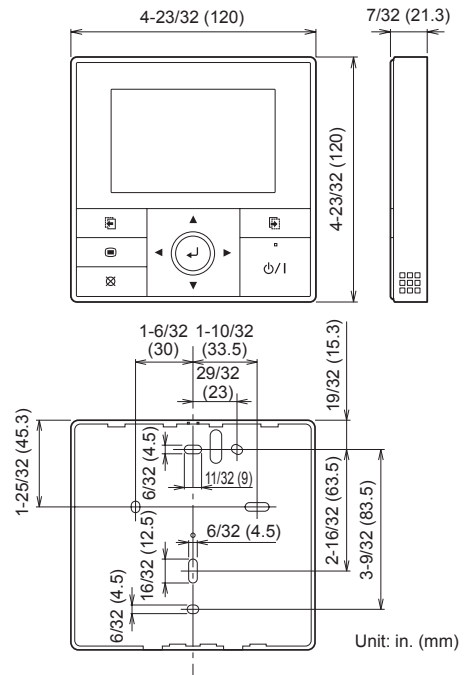

### 4.2. Name of parts

#### ⚠ CAUTION

Press the button lightly with a finger. It may cause a failure if pressed with excessive force.

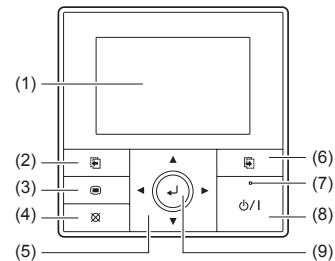

- (1) Display panel (with backlight)
- (2) Screen switch button (Left)
- (3) Menu button
- (4) Cancel button
- (5) Cursor button
- (6) Screen switch button (Right)
- (7) Power indicator
- (8) On/Off button
- (9) Enter button

#### -Note-

While the backlight is off by the automatic light off, the first button operation does not work, and the backlight illuminates. (The On/Off button is excluded.)

While the backlight is set to [Off], it is effective from the first button operation.

## 5. INSTALLING THE REMOTE CONTROLLER

### 5.1. Wiring

#### ⚠ WARNING

Before starting installation work, turn off the power of the connection destination. Do not turn on the power again until installation is completed. Otherwise, it will cause electric shock or fire.

Use the accessories or specified connection cables. Do not modify connection cables other than those specified, do not use extension cords, and do not use independent branch wiring. The allowable current will be exceeded and cause electric shock or fire.

Install the connection cables securely to the terminal block. Confirm that external force is not applied to the wire. Use connection cables made of the specified wire. If intermediate connection or insertion fixing are imperfect, it will cause electric shock, fire, etc.

Do not connect functional earthing to a telephone functional earthing, water pipe, or conductor rod.

Always fasten the outside covering of the connection cable with the cable clamp. (If the insulator is chafed, electric leakage may occur.)

When performing cable wiring work, be sure that it does not touch the user. Doing so will cause injury or electric shock.

If any cable is damaged, do not repair or modify it yourself. Improper work will cause electric shock or fire.

#### ⚠ CAUTION

Do not parallel to the remote controller cables, indoor and outdoor connection cable, and power supply cables. It may cause erroneous operation.

When performing wiring work, be careful not to damage the cable or injure yourself. Also, connect the connectors securely. Loose connectors will cause trouble, heating, fire, or electric shock.

Install the remote control cable 3ft. (1 m) away from television and radio to avoid distorted images and noise.

Perform wiring so that water does not enter this unit along the external wiring. Always install a trap to the wiring or take other countermeasures. Otherwise it will cause trouble or electric shock or fire.

Confirm the name of each unit and name of each terminal block of the unit and connect the wiring in accordance with the directions given in the manual so that there is no incorrect wiring. Incorrect wiring will damage the electric parts and cause smoke and fire.

When installing the connection cable near a source of electromagnetic waves, use shielded cable. Otherwise, a breakdown or malfunction could result.

### 5.2. Connection of remote controller cable

#### ⚠ CAUTION

When connecting the remote controller cable to the wall mounted type and the floor type indoor unit, do not connect it to the outdoor unit or the indoor unit power terminal block. It may cause a failure.

There are 2 methods to connect the remote controller cable to the indoor unit. One is the connection using contained connecting cable and the other is the connection the remote controller cable is connected to the exclusive terminal block of the indoor unit.


Exclusive terminal block for remote controller connection method is different depending on each model. Modify the remote controller cable as per below description and connect it.

(For the details, refer to the installation manual of the indoor unit to be used.)


#### 5.2.1 When connecting to the wall mounted type and the floor type connector

Connect the remote controller cable to the connecting cable and insert it to the connector.

Pattern 1

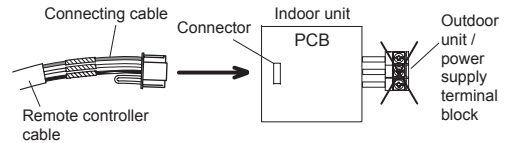

Pattern 2

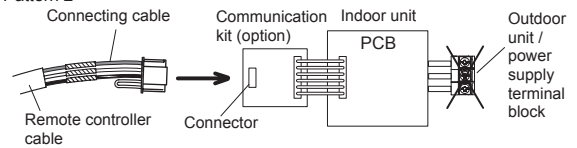

Modify the cable as per below methods.

- (1) Use a tool to cut off the terminal on the end of the remote controller cable and then remove the insulation from the cut end of the cable as shown in Fig. 1.
- (2) Connect the remote controller cable and connecting cable as shown in Fig. 2.
- (3) Be sure to insulate the connection between the cables.

Fig. 1



 



Fig. 2

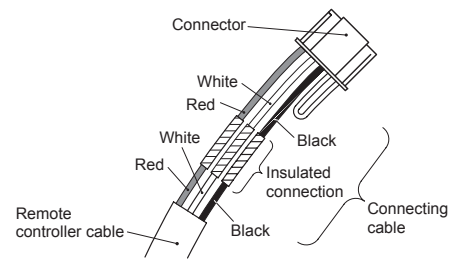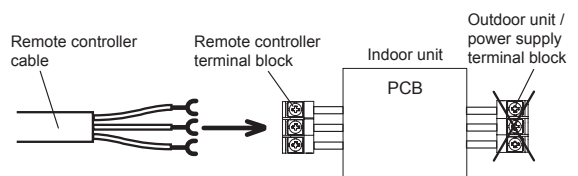

#### 5.2.2 When connecting to the exclusive terminal block

Connect the end of remote controller cable directly to the exclusive terminal block.

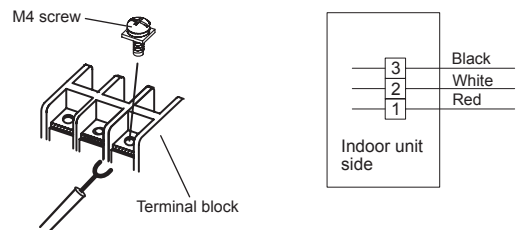

It may be failed if it is connected to the outdoor unit or the terminal block for power supply.

### 5.3. Installation

#### ⚠ WARNING

When installing this unit, make sure that there are no children nearby. Otherwise, injury or electric shock could result.

#### ⚠ CAUTION

Before opening the case of this unit, completely discharge static electricity charged on your body. Not doing so will cause trouble.

Do not touch the circuit board and circuit board parts directly with your hands. Otherwise, injury or electric shock could result.

Be careful so that the front case does not fall after the front case are removed. Otherwise, a damage of the front case could result.

To avoid incoming water or insects along the cable, always establish a trap and seal the wiring hole.


Overtighten of the screws may cause a distortion or a damage of the rear case.

Do not make any additional hole on the rear case to avoid a damage.

Do not use any other screws than the included ones. Using of other screws may cause a product malfunction or damage.


#### 5.3.1 Installation space

- This product cannot be installed in wall.
- Recommendation installation height of the remote controller is 4.6ft. (1.4 m) (from the floor surface to the bottom of the remote controller).
- Even when you install a remote controller to one of a switch box and the surface of a wall, secure the space shown in following figure. If spaces run short, it will become difficult to remove a remote controller.

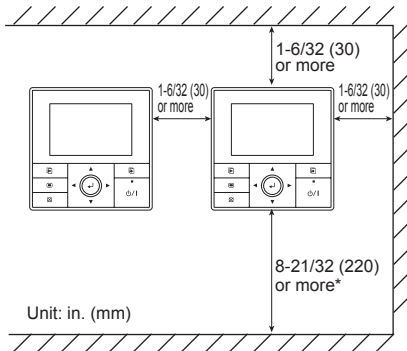


\* Please secure enough space where a flat screwdriver to take off a case can be inserted.

#### 5.3.2 Processing of the remote controller cable

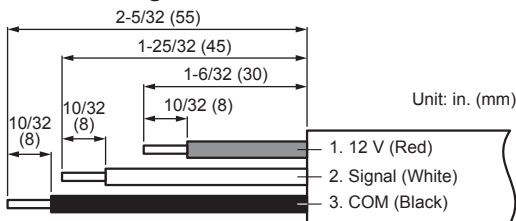

#### 5.3.3 Remove the front case


- Insert the flat screwdriver and remove the front case and rear case by twisting it slightly.

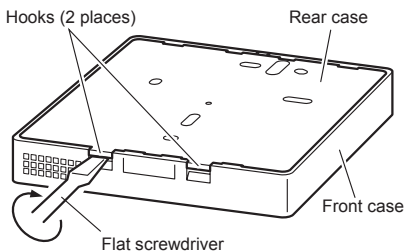

### 5.3.4 Installing the remote controller


#### A. When attaching to switch box:

- Seal the wiring hole of the remote controller cable.
- Put a remote controller cable through the hole of the rear case.
- Fix the rear case by securing it with attached screws (2 places).

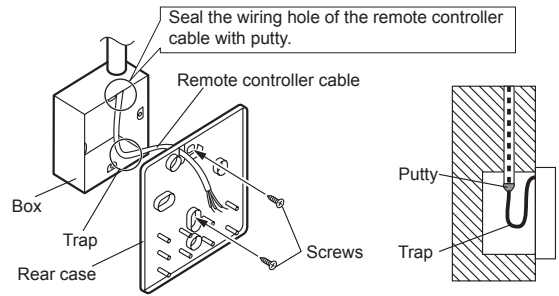


#### B. When attaching to the wall directly:

- Seal the wiring hole of the remote controller cable.
- Put a remote controller cable through the back hole of the rear case of the main body.
- Fix the rear case by securing it with attached screws (2 places).

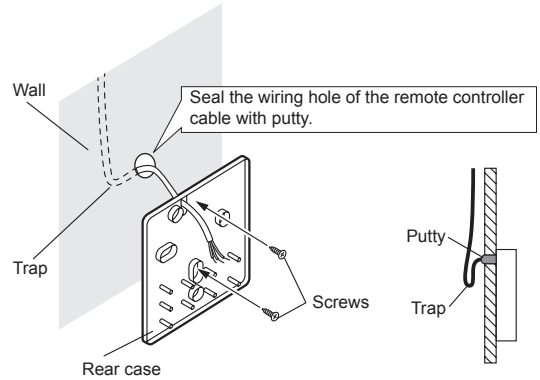


#### C. When routing the cable on-wall:

- Cut off the cable guide of the front case with using a knife or a nipper.
- Deburr the edge of the cable guide.


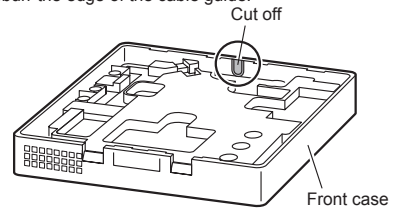


- Fix the rear case by securing it with attached screws (2 places).

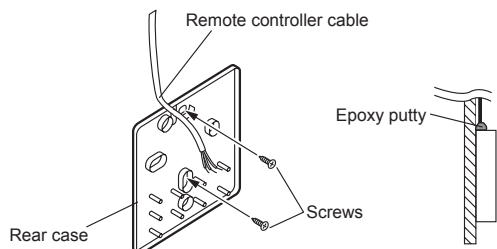

### 5.3.5 Connect the cable to the terminals

| Tightening torque |                                    |
|-------------------|------------------------------------|
| Terminal screw    | 7.1 to 10.6 lbf·in (0.8 to 1.2N·m) |

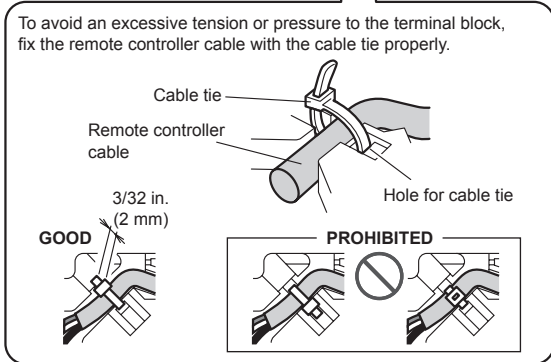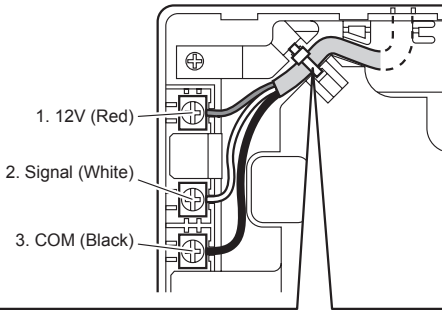

**CAUTION**

Be careful to avoid breaking the cable by over-tightening the cable tie.

When connecting the remote controller cables, do not over-tighten the screws.

### 5.3.6 Setting the DIP switch


**CAUTION**

Do not set the DIP switch of this unit except as specified in this installation manual or the operating manual supplied with the air conditioner. Please set DIP switch according to designation.

Use an insulated screwdriver to set the DIP switches.

Set DIP switch No. 1 to ON to enable the memory backup of the settings information.

- **Memory backup setting**  
If the DIP switch No. 1 is not set to ON, the settings information will be lost if there is a power failure.
- \* Registered information, such as that for the internal unit, is not erased even if the DIP switch is turned off.

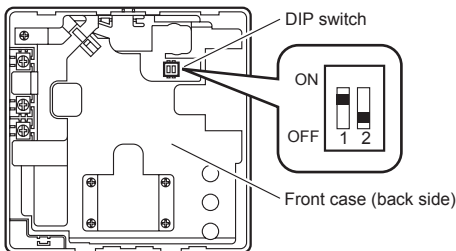


|            | No. | Switch state |          | Detail  |
|------------|-----|--------------|----------|---|
|            |     | OFF          | ON       |   |
| DIP switch | 1   | ★Invalidity  | Validity | Memory backup setting<br>* Set to ON to use batteries for the memory backup.<br>If batteries are not used, the settings information stored in memory will be deleted if there is a power failure. |
|            | 2   | ★            |          | Dual remote controller setting<br>* Refer to "6.2. Dual remote controllers".  |

(★Factory setting)

### 5.3.7 Attach the front case

- Insert after adjusting upper part of front case.
- When insert the front case, do not pinch the cable.

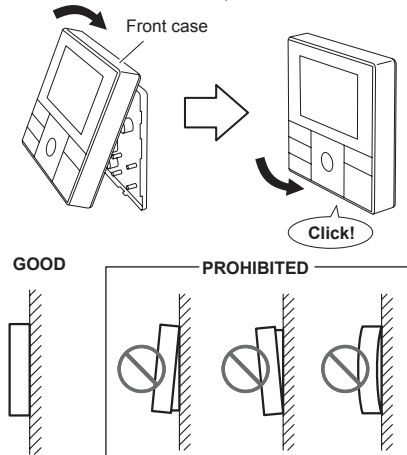


**CAUTION**

Insert the front case firmly. If improperly attached, it will cause the front case to fall off.

#### When routing the cable on top of the front case:

Seal the cable guide of the front case of the remote controller cable with an epoxy putty.

- Thickness of sheath of the remote controller cable should be thicker than 1/32 in. (1 mm) or more. Or insulate it with a cable cover thicker than 1/32 in. (1 mm) or more.

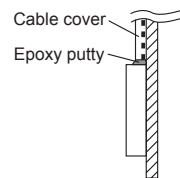


## 6. INSTALLATION METHODS

### 6.1. Group control

- A number of indoor units can be operated at the same time using a single remote controller.
- Depending on the model, some indoor units cannot be connected for group control. (Group control is available for the duct type, the cassette type, and the ceiling type indoor unit.)
- Some functions may become unusable, depending on the combination of the indoor units that are connected in a group.

#### (1) Wiring method (indoor unit to remote controller)

EXAMPLE: Single Type

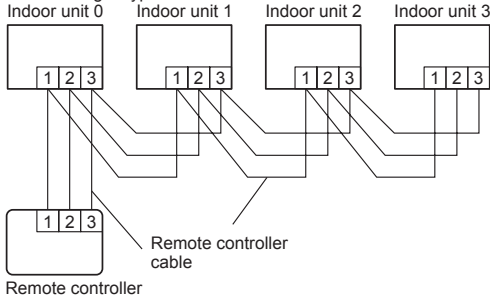


#### (2) Indoor unit address setting

Set each indoor unit address using the DIP switch of each indoor unit. (Refer to the installation manual for the indoor unit.)

### 6.2. Dual remote controllers

- Field setting can be performed only on the primary unit.
- Assignment of primary unit and secondary unit is necessary. No assignment will cause an error.
- Depending on the model, some indoor units cannot be connected for dual remote controllers. (Dual remote controllers are available for the duct type, the cassette type and the ceiling type indoor unit.)
- Two separate remote controllers can be used to operate the indoor units.
- The timer and functions cannot be used on the secondary units. (For the details, refer to the operating manual.)

#### (1) Wiring method (indoor unit to remote controller)

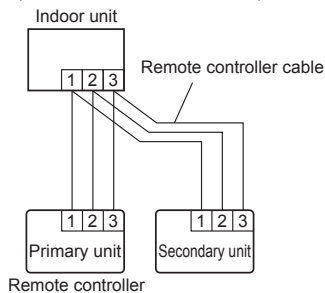

#### (2) Remote controller DIP switch 1 setting

Set the remote controller DIP switch No. 2 according to the following table.


| Number of remote controllers | Primary unit     | Secondary unit   |
|------------------------------|------------------|------------------|
|                              | DIP Switch No. 2 | DIP Switch No. 2 |
| 1 (Normal)                   | OFF              | —                |
| 2 (Dual)                     | OFF              | ON               |

## 7. TURNING ON THE POWER

### ⚠ CAUTION

Recheck the wiring. Incorrect wiring will cause trouble.


- (1) Check the remote controller wiring and DIP switch settings.
- (2) Install the front case.  
(in 5. INSTALLING THE REMOTE CONTROLLER).
- (3) Check the indoor and outdoor unit wiring and circuit board switch settings, and then turn on the indoor and outdoor units. After message "Please wait" is displayed on the remote controller display, "Language" screen is displayed.

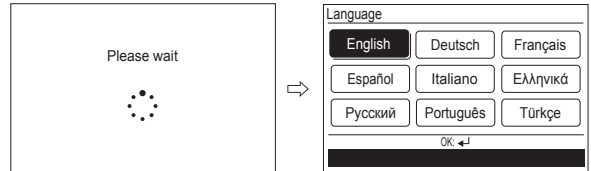

## 8. INITIAL SETTING


When "Language" screen is displayed, perform the initial setting as in the following procedure:

- 1 Select a language with the [Cursor button] on the "Language" screen displayed when the start-up is completed.

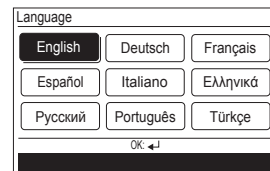

When confirmed by pressing the [Enter button], the "Temp. unit" screen is displayed.


- 2 Switch the unit for temperature "°C" or "°F" with [Cursor button (Up/Down)].  
When [Cancel button] is pressed, it returns to the "Language" screen.

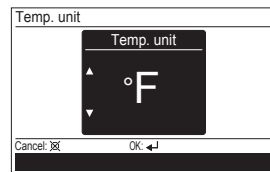

(Temp. unit : Temperature unit)

When [Enter button] is pressed, the "Change display format" screen is displayed.

- 3 Set the display format of "Date format" and "Time format".  
Switch the setting item with [Cursor button (Left/Right)] and confirm with the [Cursor button (Up/Down)].  
When [Cancel button] is pressed, it returns to the "Temp. unit" screen.

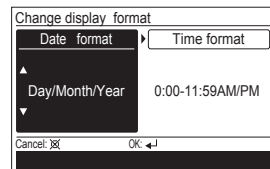

#### -Note-

Following display formats are available for setting.

| Date format :    | Time format:        |
|------------------|---------------------|
| • Day/Month/Year | • 0:00-23:59        |
| • Month/Day/Year | • 0:00-11:59 AM/PM  |
| • Year/Month/Day | • 12:00-11:59 AM/PM |


When [Enter button] is pressed, the "Date" screen is displayed.

- 4 Set the "Day", "Month", and "Year".  
Switch the setting item with [Cursor button (Left/Right)], and adjust with [Cursor button (Up/Down)].  
When [Cancel button] is pressed, it returns to the "Change display format" screen.




When [Enter button] is pressed, the "Time" screen is displayed.

- 5 Set the "hour" and "min".  
Switch the setting item by [Cursor button (Left/Right)], and adjust with [Cursor button (Up/Down)].  
"Min" can be set quickly if the button is pressed continuously.  
When [Cancel button] is pressed, it returns to the "Date" screen.

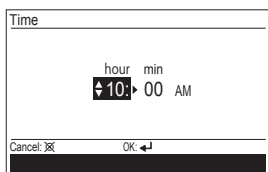


When [Enter button] is pressed, the "Confirmation" screen is displayed.

- 6 When setting is completed, select "Yes" with [Cursor button (Left/Right)], and press [Enter button].  
When correcting a setting, set it again as it returns to the "Language" screen when "No" is selected and press [Enter button].

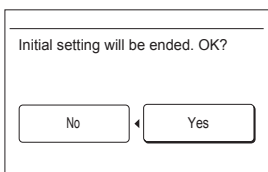

## 9. SERVICE SCREEN SETTING

When [Menu button] is pressed twice while "Monitor" screen is displayed, it switches to the "Submenu" screen.  
Press the [Screen switch button (Left)] and [Screen switch button (Right)] simultaneously for 5 seconds to switch to "Service" screen.

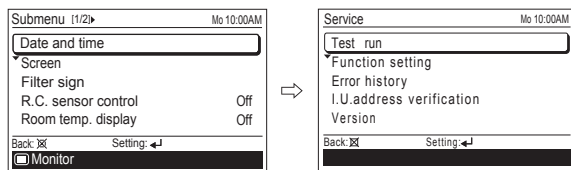

(R.C. Sensor control : Remote Controller sensor control)  
(I.U.address verification : Indoor Unit address verification)


### Service screen

| Function name            | Setting      |                |
|--------------------------|--------------|----------------|
|                          | Primary unit | Secondary unit |
| Test run                 | ○            | ○              |
| Function setting         | ○            | ×              |
| Error history            | ○            | ×              |
| I.U.address verification | ○            | ×              |
| Version                  | ○            | ○              |


## 9.1. Test run

- If the unit is operating, turn it off.
- Test run stops in 60 minutes. When the [On/Off button] is pressed during the test run, the test run will be canceled.
- After completing the test run, wait enough until starting the operation.

- 1 When [Menu button] is pressed twice while "Monitor" screen is displayed, it switches to the "Submenu" screen.  
If [Menu button] is pressed while the "Submenu" screen is displayed, the display returns to the "Monitor" screen.

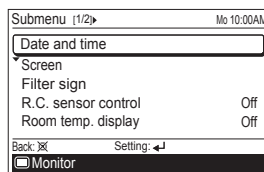


- 2 Press the [Screen switch button (Left)] and [Screen switch button (Right)] simultaneously for 5 seconds to switch to "Service" screen.

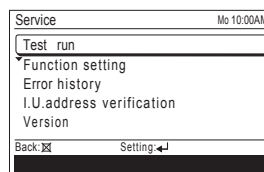

When you select [Test run] with the [Cursor button (Up/Down)] and press the [Enter button], following confirmation screen is displayed.

To start the test run, select "Yes" with the [Cursor button (Left/Right)], and press the [Enter button].

In Set temp, test run is displayed.

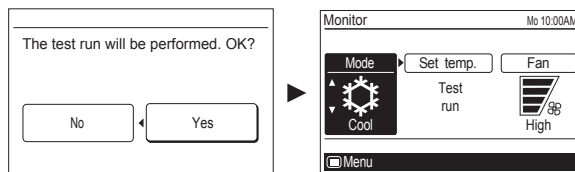


## 9.2. Function setting

This procedure changes the function settings used to control the indoor unit according to the installation conditions. Incorrect settings can cause the indoor unit to malfunction. This procedure should be performed by authorized installation or service personnel only.


Perform the "FUNCTION SETTING" according to the installation conditions using the remote controller. (Refer to the indoor unit installation manual for details on the function numbers and setting values.)

Perform the setting during the operation is stopped.

- 1 When [Menu button] is pressed twice while "Monitor" screen is displayed, it switches to the "Submenu" screen.  
If [Menu button] is pressed while the "Submenu" screen is displayed, the display returns to the "Monitor" screen.

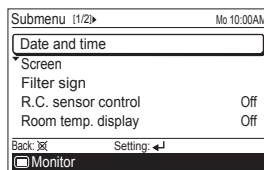


- 2 Press the [Screen switch button (Left)] and [Screen switch button (Right)] simultaneously for 5 seconds to switch to "Service" screen.

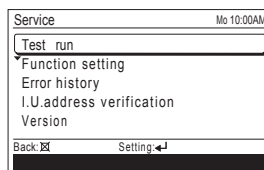





- 3 Select [Function setting] with pressing the [Cursor button (Up/Down)], and press the [Enter button].

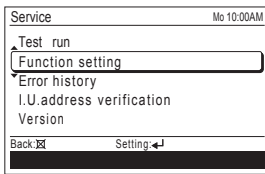


- 4 Select [R.C. address] of the target indoor unit with pressing the [Cursor button (Up/Down)]. (R.C. Address : Remote Controller Address)

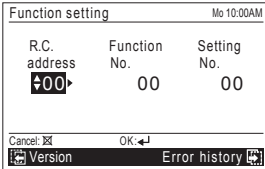

- 5 Select the [Function No.] with pressing the [Cursor button (Left/Right)], and select the Function No. to be set with pressing the [Cursor button (Up/Down)].

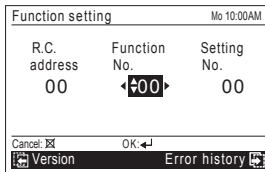

- 6 Select the [Setting No.] with pressing the [Cursor button (Left/Right)], and select the Setting No. to be set with pressing the [Cursor button (Up/Down)], and press the [Enter button].

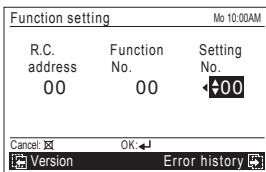


**-Note-**

"Service" screen or "Function setting" screen return to the "Submenu" screen if there is no button operation for 1 minute.


### 9.3. Error history

The error history can be displayed. Select [Error history] with the [Cursor button (Up/Down)], and press the [Enter button].

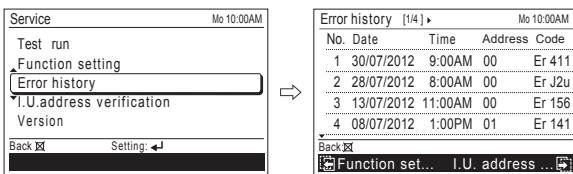


### 9.4. I.U. address verification

The refrigerant address and the indoor unit address can be displayed. Select [I.U. address verification] with the [Cursor button (Up/Down)], and press the [Enter button].

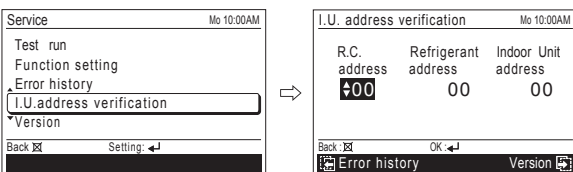

### 9.5. Version

Software version of the remote controller can be displayed. Select [Version] with the [Cursor button (Up/Down)], and press the [Enter button].

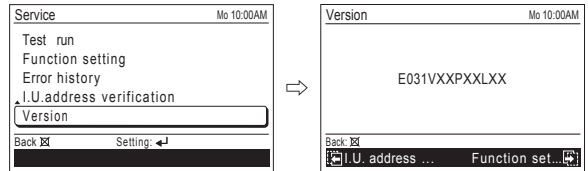


### 10. SETTING THE ROOM TEMPERATURE DETECTION LOCATION

The detection location of the room temperature can be selected from the following 2 examples. Choose the detection location that is best for the installation location.

Refer to "9.2. Function setting".

#### A. Indoor unit setting (factory setting)

The room temperature is detected by the indoor unit temperature sensor. When use this function, set "Indoor room temperature sensor switching function (Function Number:42)" of "9.2. Function setting" to "No(00)".

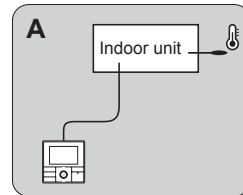


#### B. Indoor unit/remote controller setting (room temperature sensor selection)

The temperature sensor of the indoor unit or the remote controller can be used to detect the room temperature.

When use this function, set "Indoor room temperature sensor switching function (Function Number:42)" of "9.2. Function setting" to "Yes(01)".

- (1) Enable the room temperature sensor selection in function setting, which will be described later.
- (2) Select either of the temperature sensor on the indoor unit or on the remote controller for temperature detection. (For how to configure the setting, refer to "5-5. R.C. sensor control" in the operating manual.)

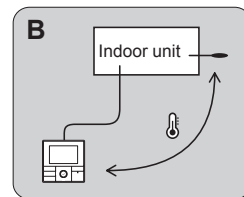

### CAUTION

When select the "Remote controller setting", if the detected temperature value between the temperature sensor of the indoor unit and the temperature sensor of the remote controller varies significantly, it is likely to return to the control status of temperature sensor of the indoor unit temporarily.

As the temperature sensor of remote controller detects the temperature near the wall, when there is a certain difference between the room temperature and the wall temperature, the sensor will not detect the room temperature correctly sometimes. Especially when the outer side of the wall on which the sensor is positioned is exposed to the open air, it is recommended to use the temperature sensor of the indoor unit to detect the room temperature when the indoor and outdoor temperature difference is significant.

The temperature sensor of the remote controller is not only used when there is a problem in the detection of the temperature sensor of the indoor unit.

### 1) Indoor room temperature sensor switching function

(Only for Wired remote controller)

The following settings are needed when use the control by Wired remote controller temperature sensor.

(★...Factory setting)

| Setting Description | Function No. | Setting No. |
|---------------------|--------------|-------------|
| No                  | 42           | 00          |
| Yes                 |              | 01          |

★ If setting No. is "00" :

Room temperature is controlled by the indoor unit temperature sensor.

★ If setting No. is "01" :

Room temperature is controlled by either indoor unit temperature sensor or remote controller unit sensor.

### 2) Setting record

Record the setting change in the following table.

| Setting Description               | Setting No. |
|-----------------------------------|-------------|
| Room temperature sensor switching |             |

After completing the FUNCTION SETTING, be sure to turn off the power and turn it on again.

## 11. MANAGEMENT FUNCTION

Restricts the operations of following power-saving functions by non-authorized person, and helps more energy-efficient operation of the system.

With the password control, only the administrator can get access to the function setting.

For the controlled functions, perform the setting change in "Management function" screen.

#### Settings Items:

|                         |                  |
|-------------------------|------------------|
| Function                | Timer            |
| • Economy               | • On timer       |
| • Set temp. auto return | • Off timer      |
| • Set temp. range       | • Weekly timer   |
|                         | • Auto-off timer |

(Set temp. auto return : Set temperature auto return)

(Set temp. range : Set temperature range)

For the details on each function, refer to "2-2. Setting items in Menu" in the operating manual.


### 11.1. Password setting

Preset value of password is "0000"


Change the password as necessary so that the setting change cannot be done by other than the administrator.

The changed password should be managed properly by the administrator. A password (4-digit) required when setting up a Management function can be changed.


- When [Menu button] is pressed twice while "Monitor" screen is displayed, it switches to the "Submenu" screen.  
If [Menu button] is pressed while the "Submenu" screen is displayed, the display returns to the "Monitor" screen.

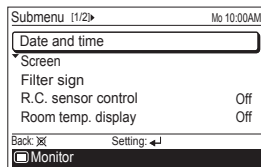


- When [Initial] is selected in [Submenu] screen, "Initial" screen is displayed. Enter current password with the [Cursor button], and press the [Enter button].

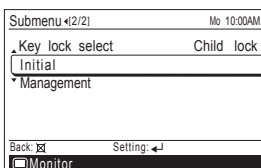

- Select [Password setting (Management)] in the "Initial" screen, and press the [Enter button].

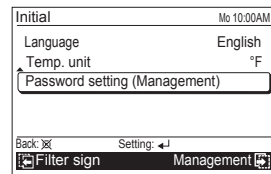



- Enter current password.  
With pressing the [Cursor button (Up/Down)], enter the number. When you press the [Cursor button (Right)], the cursor moves to next digit. After you enter the 4 digits, press the [Enter button].

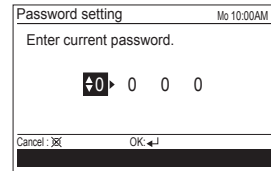

#### -Note-

When you forget a password, please push a [Menu button] and the [Cancel button] at the same time for 3 seconds. Screen switches to "Enter new password" screen.

- Enter new password with same procedure in step 4.

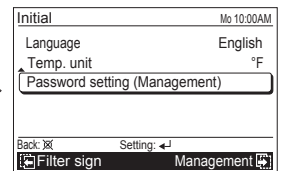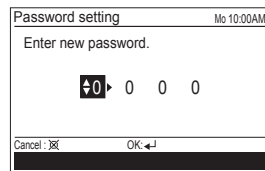

### 11.2. Management setting


Management setting is a function that restricts the operation of some functions on this remote controller.

The functions to be restricted are set in this setting, but not in each functional setting.



Example: To restrict Economy setting to [ON]

Set to [ON] on all the other signal source except this remote controller.

- When [Menu button] is pressed twice while "Monitor" screen is displayed, it switches to the "Submenu" screen.  
If [Menu button] is pressed while the "Submenu" screen is displayed, the display returns to the "Monitor" screen.

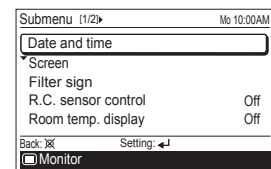

- When [Management] is selected in [Submenu] screen, "Management" screen is displayed. Enter current password with the [Cursor button], and press the [Enter button].

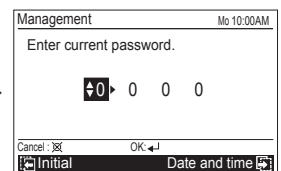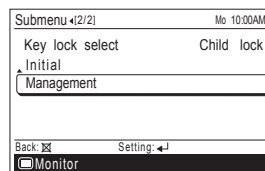


#### -Note-

If the entered password is not correct, message "Password is not correct" is displayed. Enter correct password.


**3** When correct password is entered, "Management function" screen is displayed.

To select the function to be controlled by [Management], select [Edit] with pressing the [Cursor button (Up/Down)], and press the [Enter button].


"Management select" screen is displayed.

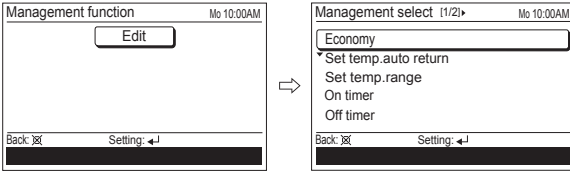


**4** Select the target function with the [Cursor button (Up/Down)] and press the [Enter button]. Then the setting field for the restriction setting is displayed.

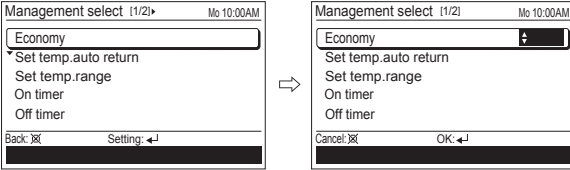

Select the setting with the [Cursor button (Up/Down)], and press the [Enter button].

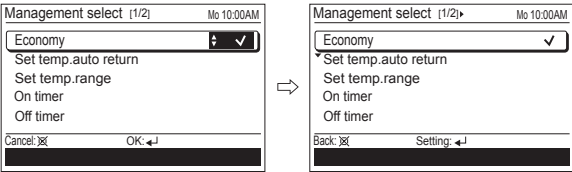


If there is another setting to be changed, you can continue the configuration.

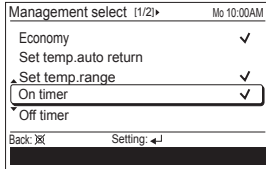


To complete the setting, press the [Cancel button].

Functions marked check in "Management select" screen are listed in "Management function" screen.

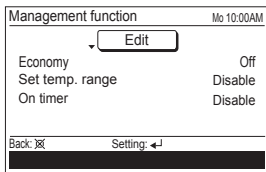


**5** In "Management function" screen, you can change the detailed setting on each function.

For how change the setting, refer to each function setting in "3. FUNCTION SETTING" in the operating manual.

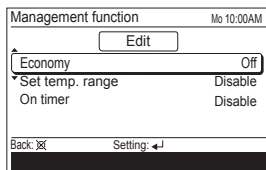

**-Note-**

 If the function you are selecting is restricted by [Management] function, following message is displayed in the operation guidance display. The message is displayed constantly during the management function is enabled.




## 12. OTHERS

### 12.1. Error code

If an error occurs, the power indicator (green) blinks and the following display will be shown.

If "Error" is displayed, immediately stop the air conditioner operation, and consult authorized service personnel.

• When there is an error on this remote controller:

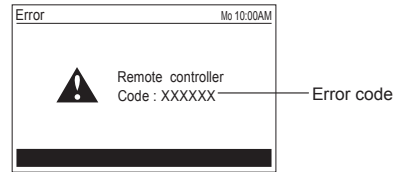

| Error code         | Contents   |
|--------------------|--|
| Er 12.1<br>EE 1c   | • Wired remote controller communication error  |
| Er 15.4<br>EE 1d   | • Incompatible indoor unit is connected<br>• Indoor unit date acquisition error<br>• Primary unit / Secondary unit setting error |
| Er CC.1<br>EE CC.1 | • Remote controller sensor error   |

• When there is an error on the indoor unit:

