


# REAR GRILLE OF PTAC INSTALLATION INSTRUCTIONS

## SLEEVE HARDWARE


ITEM	DESCRIPTION	QTY	REMARK
1	WALL SLEEVE subassembly(optional)	1	
2	SEAL A	1	26.4" LONG
3	SEAL B	2	1.6" LONG
4	REAR GRILLE	1	MODEL A,MODEL B
5	INSULATION STRIP	2	
6	SCREW ST3.9*14	2	Only for MODEL A

**NOTE: REAR GRILLE has MODEL A and MODEL B for choice.**




## INSTALL THE REAR GRILLE

- Attach the SEAL A and SEAL B to the SLEEVE at proper position as shown below.

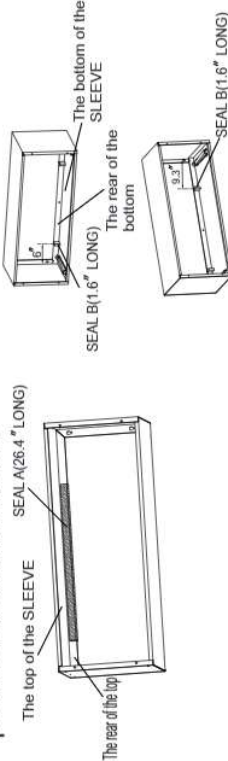


- Attach two insulation strips to the rear grille at proper position as shown below.

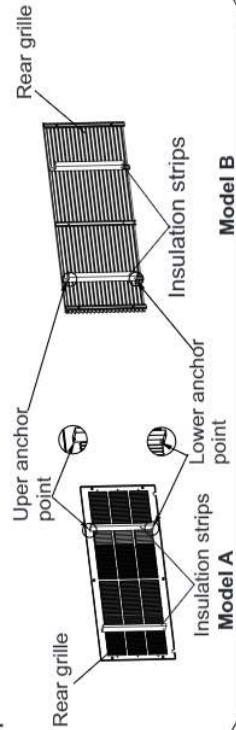


## INSTALL THE REAR GRILLE(CONTINUED)


- Insert the four screws installed in the rear grille into the relevant four round holes of the sleeve as shown below.

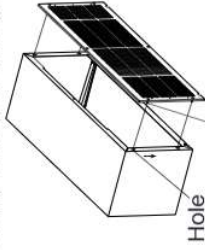

- When the screws insert into the round holes, pull down the rear grille to let the screws slide into the "U" holes as shown below.

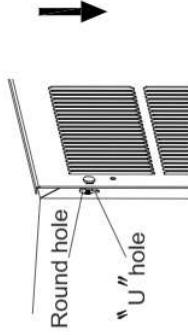

- When the screws slide into the bottom of the "U" holes the rear grille can be installed to the sleeve firmly as shown below.

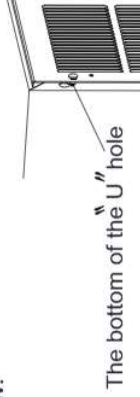

- For MODEL A rear grille must be installed two screws more through the sleeve and rear grille for securely and firmly as shown below. (NOTE: For MODEL B is not necessary.)



CWO34I-PTAC(GS)  
2020001A8141  
20140820