

**SPLIT TYPE
ROOM AIR CONDITIONER
WALL MOUNTED^{type}
INVERTER**

SERVICE INSTRUCTION

Models	Indoor unit	Outdoor unit
	ASU9RLS3Y	AOU9RLS3
	ASU12RLS3Y	AOU12RLS3
	ASU15RLS3Y	AOU15RLS3

Refrigerant

R410A

TENTATIVE

CONTENTS

1. DESCRIPTION OF EACH CONTROL OPERATION

1. COOLING OPERATION.....	01-01
2. HEATING OPERATION.....	01-02
3. DRY OPERATION.....	01-02
4. AUTO CHANGEOVER OPERATION.....	01-03
5. INDOOR FAN CONTROL.....	01-05
6. OUTDOOR FAN CONTROL.....	01-07
7. LOUVER CONTROL.....	01-08
8. COMPRESSOR CONTROL.....	01-09
9. TIMER OPERATION CONTROL.....	01-10
10. ELECTRONIC EXPANSION VALVE CONTROL.....	01-12
11. TEST OPERATION CONTROL.....	01-12
12. PREVENT TO RESTART FOR 3 MINUTES (3 MINUTES ST).....	01-13
13. FOUR-WAY VALVE EXTENSION SELECT.....	01-13
14. AUTO RESTART.....	01-14
15. MANUAL AUTO OPERATION (INDOOR UNIT BODY OPERATION).....	01-14
16. FORCED COOLING OPERATION.....	01-14
17. COMPRESSOR PREHEATING.....	01-15
18. MINIMUM HEAT OPERATION.....	01-15
19. ECONOMY OPERATION.....	01-15
20. HUMAN SENSOR CONTROL.....	01-15
21. OUTDOOR UNIT LOW NOISE OPERATION.....	01-16
22. POWERFUL OPERATION.....	01-16
24. HEAT INSULATION CONDITION (BUILDING INSULATION).....	01-17
25. THERMO CONTROL (FOR INDOOR UNIT SENSOR).....	01-17
26. THERMO CONTROL (FOR WIRED REMOTE SENSOR).....	01-17
27. DEFROST OPERATION CONTROL.....	01-18
28. OFF DEFROST OPERATION CONTROL.....	01-20
29. VARIOUS PROTECTIONS.....	01-21

2. TROUBLE SHOOTING

2-1 ERROR DISPLAY.....	02-01
2-1-1 INDOOR UNIT AND WIRED REMOTE CONTROLLER DISPLAY.....	02-01
2-1-2 WIRED REMOTE CONTROLLER DISPLAY (OPTION).....	02-02
2-1-3 WIRELESS LAN INDICATOR DISPLAY.....	02-03
2-1-4 MOBILE APP DISPLAY (For AIR CONDITINER).....	02-04
2-1-5 MOBILE APP DISPLAY (In WIRELESS LAN CONTROL SYSTEM).....	02-05
2-2 TROUBLE SHOOTING WITH ERROR CODE.....	02-06
2-3 TROUBLE SHOOTING WITH NO ERROR CODE.....	02-30
2-4 TROUBLE SHOOTING WITH ERROR CODE (For WIRELESS LAN ADAPTER).....	02-39
2-5 SERVICE PARTS INFORMATION.....	02-48

3. APPENDING DATA

3-1 FUNCTION SETTING.....	03-01
3-1-1 INDOOR UNIT.....	03-01
3-1-2 PROCEDURES TO CHANGE THE FUNCTION SETTING FOR WIRELESS RC..	03-05
3-2 THERMISTOR RESISTANCE VALUES.....	03-07
3-2-1 INDOOR UNIT.....	03-07
3-2-2 OUTDOOR UNIT.....	03-07

WALL MOUNTED type INVERTER

1 . DESCRIPTION OF EACH
CONTROL OPERATION

1. COOLING OPERATION

A sensor (room temperature thermistor) built in the indoor unit body will usually perceive difference or variation between a set temperature and present room temperature, and controls the operation frequency of the compressor.

* If the room temperature is 11°F(6.0°C) higher than a set temperature, the compressor operation frequency will attain to maximum performance.

* If the room temperature is 2°F(1.0°C) lower than a set temperature, the compressor will be stopped.


* When the room temperature is between +11°F(+6.0°C) to -2°F(-1.0°C) of the setting temperature, the compressor frequency is controlled within the range shown in Table1. However, the maximum frequency is limited in the range shown in Figure1 based on the fan speed mode and the outdoor temperature.

(Table 1 : Compressor frequency range)

	Minimum frequency	Maximum frequency I	Maximum frequency II
AOU9RLS3 AOU12RLS3	10rps	80rps	63rps
AOU15RLS3	12rps	91rps	63rps

When the compressor operates for 30 minutes continuously at over the maximum frequency II , the maximum frequency is changed from the maximum frequency I to the maximum frequency II .

(Fig. 1 : Outdoor temperature zone)

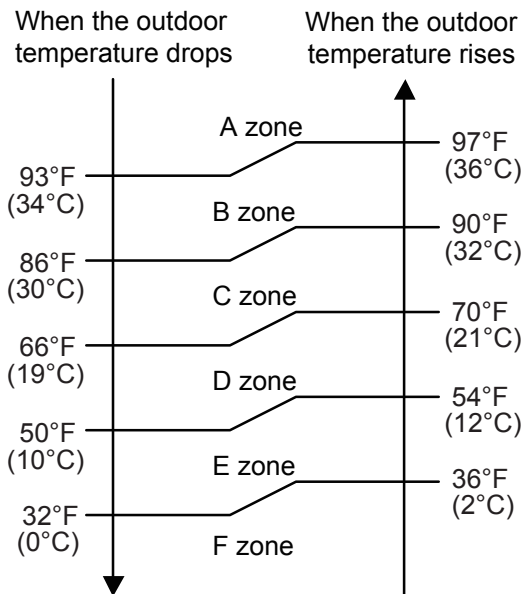

(Table 2 : Limit of maximum speed based on outdoor temperature)

	Outdoor temp. zone	Indoor fan mode			
		Hi	Me	Lo	Quiet
AOU9RLS3 AOU12RLS3	A zone	80rps	51rps	43rps	26rps
	B zone	80rps	51rps	43rps	26rps
	C zone	80rps	51rps	43rps	26rps
	D zone	47rps	35rps	29rps	20rps
	E zone	47rps	35rps	29rps	20rps
	F zone	47rps	35rps	29rps	20rps
AOU15RLS3	A zone	91rps	44rps	34rps	24rps
	B zone	91rps	44rps	34rps	24rps
	C zone	72rps	44rps	34rps	24rps
	D zone	52rps	30rps	21rps	18rps
	E zone	63rps	34rps	27rps	19rps
	F zone	63rps	34rps	27rps	19rps

2. HEATING OPERATION

A sensor (room temperature thermistor) built in the indoor unit body will usually perceive difference or variation between a set temperature and present room temperature, and controls the operation frequency of the compressor.

- * If the room temperature is lower by 11°F(6.0°C) than a set temperature, the compressor operation frequency will attain to maximum performance.
- * If the room temperature is 2°F(1.0°C) higher than a set temperature, the compressor will be stopped.
- * When the room temperature is between +2°F(+1.0°C) to -11°F(-6.0°C) of the setting temperature, the compressor frequency is controlled within the range shown in Table 3.

(Table 3 : Compressor frequency range)

	Minimum frequency	Maximum frequency
AOU9RLS3 AOU12RLS3	10rps	119rps
AOU15RLS3	16rps	130rps

3. DRY OPERATION


The compressor frequency shall change according to the temperature, set temperature, and room temperature variation which the room temperature sensor of the indoor unit body has detected as shown in the Table 4 .

However, after the compressor is driven, the indoor unit shall run at operation frequency of 40rps (AOU9RLS3), 40rps (AOU12RLS3), 40rps (AOU15RLS3) for 80 seconds.

(Table 4 : Compressor frequency in Dry mode)

		Operating frequency			Operating frequency
AOU9RLS3 AOU12RLS3	X zone	26rps	AOU15RLS3	X zone	24rps
	J zone	18rps		J zone	16rps
	Y zone	0rps		Y zone	0rps

(Fig.2 : Compressor control based on room temperature)

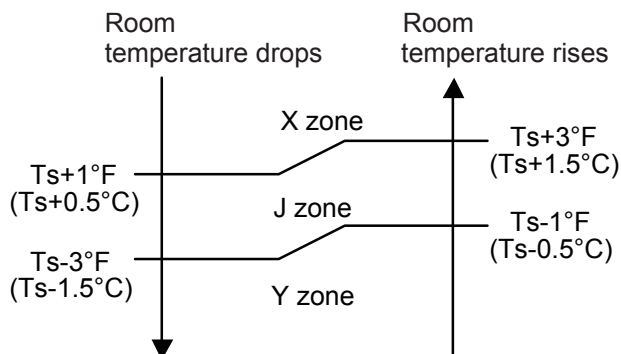

4. AUTO CHANGEOVER OPERATION

When the air conditioner is set to the Auto mode by remote controller, operation starts in the optimum mode from among the Heating, Cooling, and Monitoring mode. During operation, the optimum mode is automatically switched in accordance with temperature changes. The temperature can be set between 64°F(18°C) and 86°F(30°C) in 2°F(1°C) steps.

- ① When operation starts, indoor fan and outdoor fan are operated for around 1 minutes. Room temperature and outdoor temperature are sensed, and the operation mode is selected in accordance with the table below. <Monitoring mode>

(Table 4 : Operation mode selection table)

Room temperature (TR)	Operation mode
$TR > Ts + 4^{\circ}\text{F}(2^{\circ}\text{C})$	Cooling
$Ts + 4^{\circ}\text{F}(2^{\circ}\text{C}) \geq TR \geq Ts - 4^{\circ}\text{F}(-2^{\circ}\text{C})$	*Middle zone
$TR < Ts - 4^{\circ}\text{F}(-2^{\circ}\text{C})$	Heating

TR : Room temperature
Ts : Setting temperature

* If it's Middle zone, operation mode of indoor unit is selected as below.

- (1). Same operation mode is selected as outdoor unit.

If outdoor unit is operating in Cooling and Heating mode, indoor unit will be operated by the same operation mode.

- (2). Selected by the outdoor temperature.

If outdoor unit is operating in other than Cooling and Heating mode, indoor unit will be operated according to the outdoor temperature as below.


(Fig.3 : Outdoor temperature zone selection)

Temperature	Mode
77°F(25°C) and over	Cooling
77°F(25°C) under	Heating

- ② When the compressor was stopped for 6 consecutive minutes by the temperature control function after the Cooling or Heating mode was selected at ① above, operation is switched to Monitoring and the operation mode is selected again.
- ③ When the middle zone is selected on the predetermining of the operation mode, the operation mode before the changing to the monitor mode is selected.

■ AUTO CHANGEOVER operation flow chart

T_s : Setting temperature

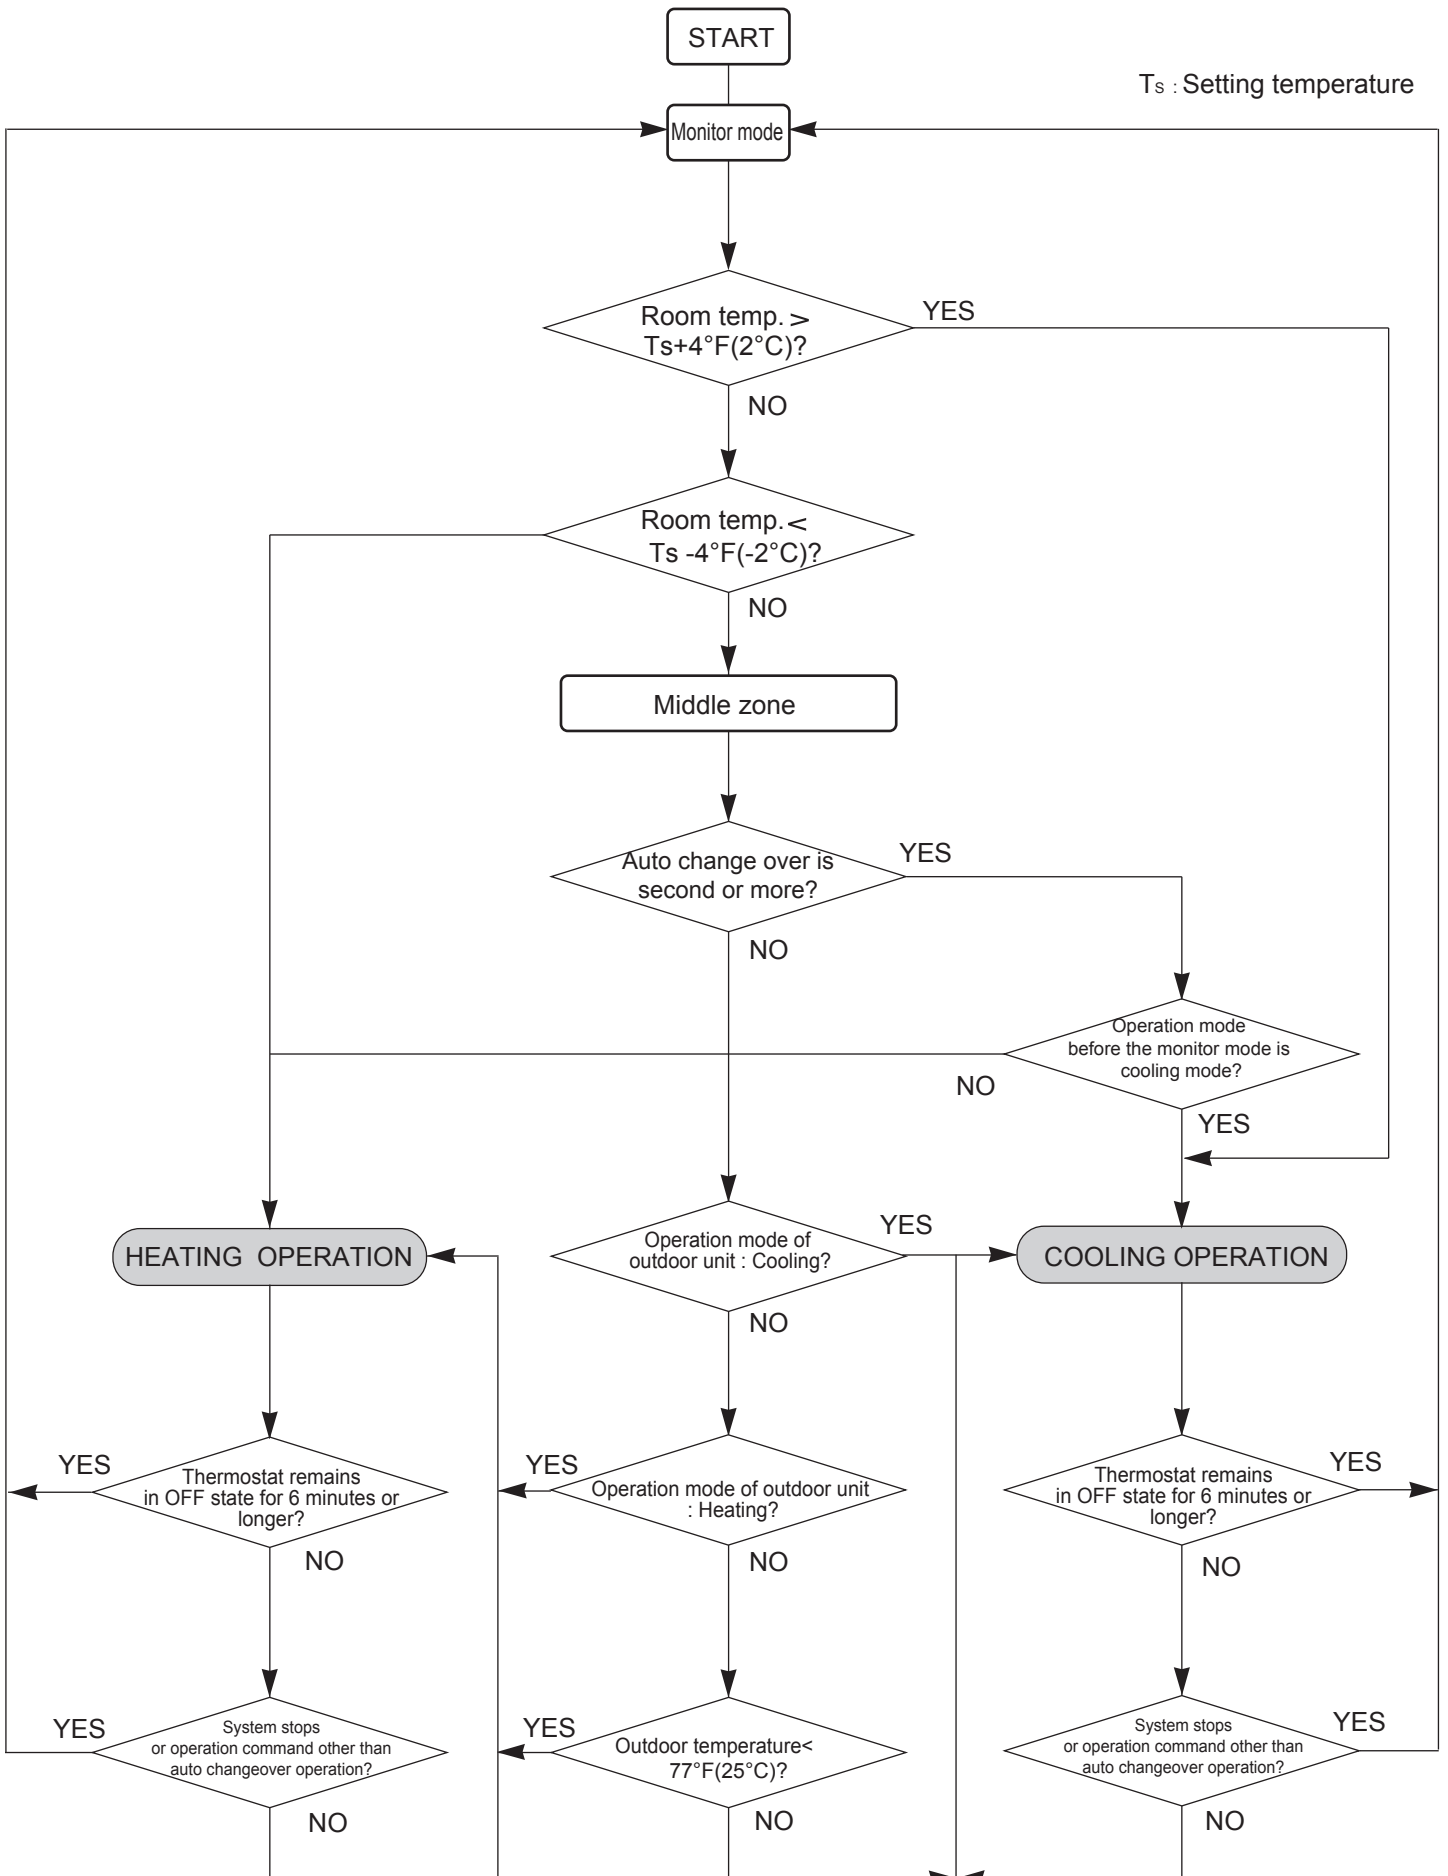

5. INDOOR FAN CONTROL

1. Fan speed

(Table 5 : Indoor fan speed)

Operation mode	Air flow mode	Speed (rpm)		
		ASU9RLS3Y	ASU12RLS3Y	ASU15RLS3Y
Heating	Powerful	1320	1320	1370
	Hi	1100	1100	1240
	Me+	1040	1040	1140
	Me	940	940	1040
	Lo	820	820	880
	Quiet	600	600	740
	Cool air prevention	600	600	600
	S-Lo	540	540	540
Cooling/ Fan	Powerful	1320	1320	1370
	Hi	1100	1100	1240
	Me	940	940	1040
	Lo	820	820	880
	Quiet	600	600	680
Dry		X zone: 600 J zone: 600	X zone: 600 J zone: 600	X zone: 680 J zone: 640

2. FAN OPERATION


The airflow can be switched in 5 steps such as Auto, Quiet, Lo, Me, Hi, while the indoor fan only runs. When fan mode is set at [Auto], it operates on [Me] fan Speed.

3. COOLING OPERATION

Switch the airflow [Auto], and the indoor fan motor will run according to a room temperature, as shown in Fig. 4 .

On the other hand, if switched in [Hi] [Quiet], the indoor motor will run at a constant airflow of [Cool] operation modes Quiet, Lo, Me, Hi, as shown in Table 5 .

(Fig. 4 : Airflow change - over (Cooling : Auto))

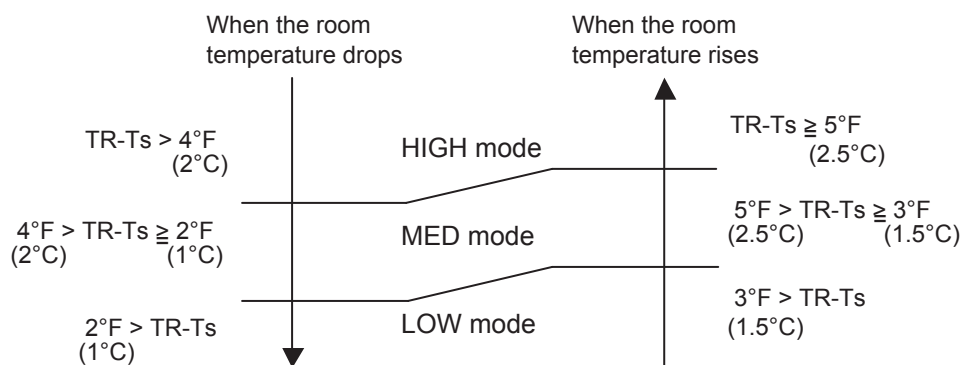

TR : Room temperature
Ts : Setting temperature

4. DRY OPERATION


Refer to the Table 5 .

During the dry mode operation, the fan speed setting can not be changed.

5. HEATING OPERATION

Switch the airflow [Auto], and the indoor fan motor will run according to a room temperature, as shown in Fig. 5. On the other hand, if switched in [Hi] ~ [Quiet], the indoor motor will run at a constant airflow of [Heat] operation modes Quiet, Lo, Me, High, as shown in Table 5.


(Fig. 5 : Airflow change - over (Heating : Auto))

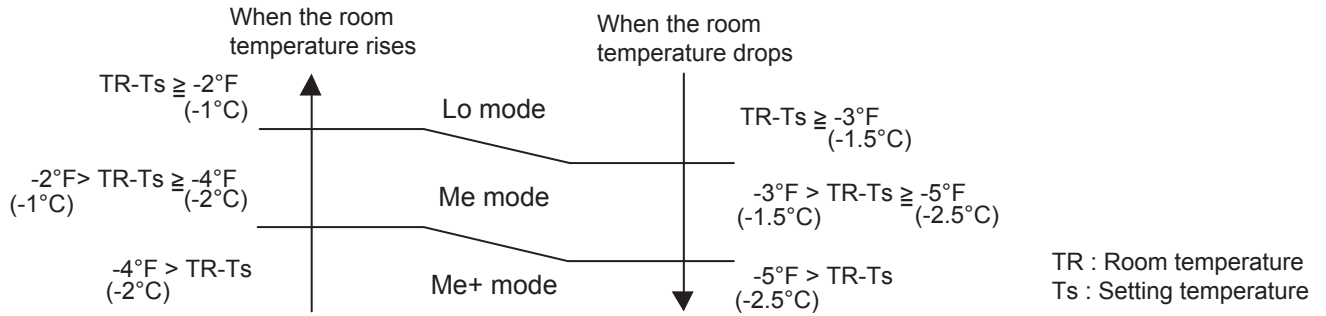

6. COOL AIR PREVENTION CONTROL (Heating mode)

The maximum value of the indoor fan speed is set as shown in Fig. 6 based on the detected temperature by the indoor heat-exchanger sensor on heating mode.


(Fig. 6 : Cool air prevention control)

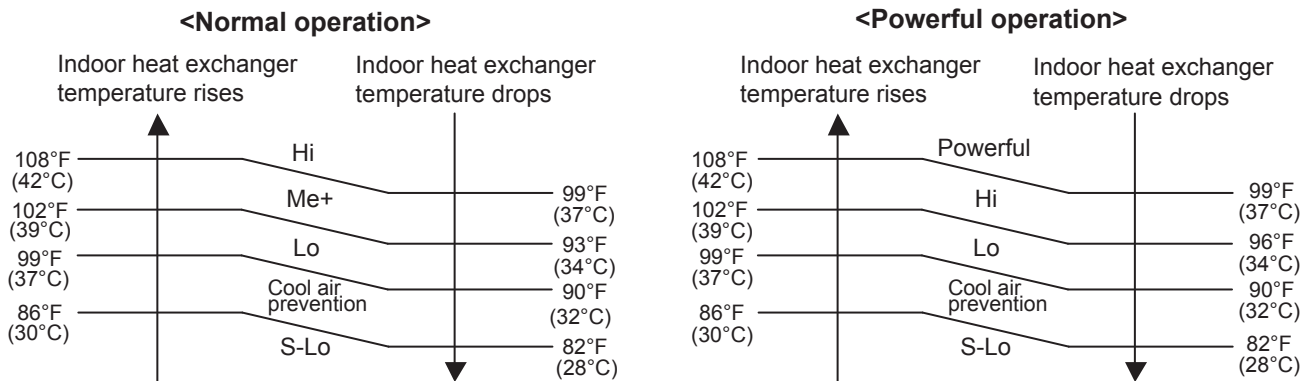

7. FAN CONTROL FOR ENERGY SAVING (Cooling and Dry mode)

When air flow is Auto in cooling or dry operation, this function starts. Otherwise energy saving operation is enable, this function starts.

(Fig. 7 : Indoor fan control)

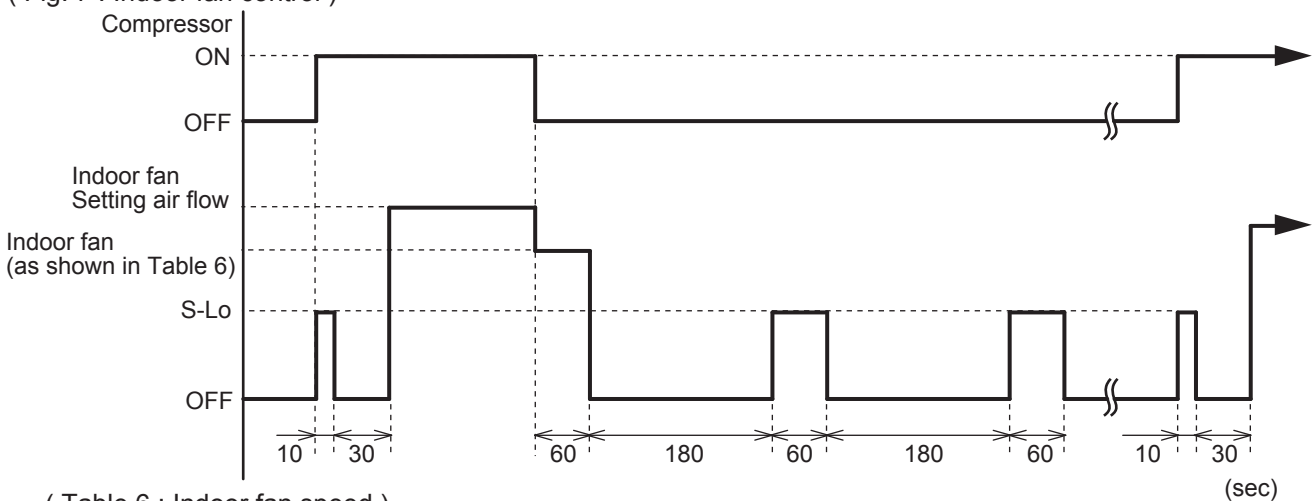

(Table 6 : Indoor fan speed)

	Dry			Cooling
	X zone	J zone	Y zone	
ASU9RLS3Y ASU12RLS3Y	600rpm	600rpm	0 ⇔ 540rpm	600rpm
ASU15RLS3Y	680rpm	640rpm	0 ⇔ 540rpm	680rpm

6. OUTDOOR FAN CONTROL

1. Outdoor Fan Motor

The Table 7 shows the type of the outdoor fan motor.
The control method is different between AC motor and DC motor.

(Table 7 : Type of Motor)

	AC Motor	DC Motor
AOU9RLS3 AOU12RLS3 AOU15RLS3		○


2. Fan Speed

(Table 8 : Outdoor fan speed)

	Zone ※	Cooling	Heating	Dry (rpm)
AOU9RLS3	Y	1050/ 870/ 720/ 590/ 530	1100/ 870/ 780/ 720/ 590/ 480	530
	Z	870/ 300		
	F	300/ 250		
	G	250/ 200		
AOU12RLS3	Y	1050/ 870/ 720/ 590/ 530	1100/ 870/ 780/ 720/ 590/ 480	530
	Z	870/ 530/ 300		
	F	300/ 250		
	G	250/ 200		
AOU15RLS3	Y	1050/ 870/ 720/ 530	1100/ 1000/ 780/ 720/ 590/ 480	530
	Z	870/ 530/ 300		
	F	300		
	G	250/ 200		

※ Refer to Fig. 8

(Fig. 8 : Outside air temperature zone selection)

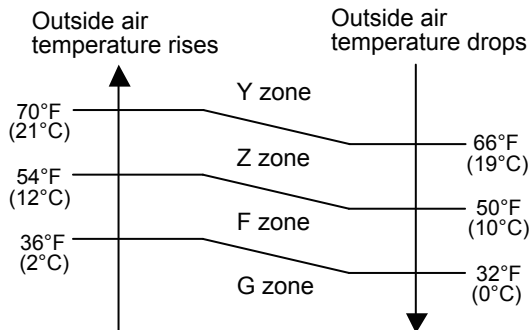

- * The outdoor fan speed mentioned above depends on the compressor frequency.
(When the compressor frequency increases, the outdoor fan speed also changes to the higher speed. When the compressor frequency decreases, the outdoor fan speed also changes to the lower speed.)
- * After the defrost control is operated on the heating mode, the fan speed keeps at the higher speed as Table 9 without relating to the compressor frequency.

(Table 9 : Outdoor fan speed after the defrost)

	Fan speed
AOU9RLS3 AOU12RLS3 AOU15RLS3	1100rpm

7. LOUVER CONTROL

For air direction does not move for 1 minutes after the power supply.

1. VERTICAL LOUVER CONTROL

(Function Range)

Each time the button is pressed, the air direction range will change as follows:

① ↔ ② ↔ ③ ↔ ④ ↔ ⑤ ↔ ⑥ ↔ ⑦ ↔ ⑧

(Fig. 9 : Vertical air direction range)


The Remote Controller's display does not change.

- Use the air direction adjustments within the ranges shown above.
- The vertical airflow direction is set automatically as shown, in accordance with the type of operation selected.

Cooling / Dry mode : Horizontal flow ①

Heating mode : Downward flow ⑦

- After beginning of Auto/ Heat mode operated and automatic defrosting operation time, the airflow will be horizontal ① .
However, the Airflow direction cannot be adjusted at beginning Auto operation mode.

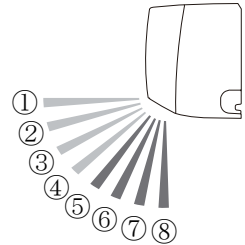


2. HORIZONTAL LOUVER CONTROL

(Function Range)

Each time the button is pressed, the air direction range will change as follows.

⑤ ↔ ④ ↔ ① ↔ ② ↔ ③

(Fig. 10 : Horizontal air direction range)

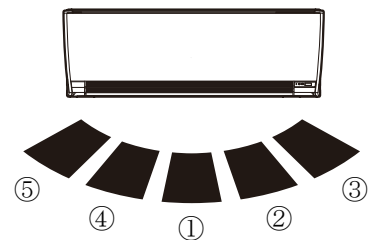

3. SWING OPERATION

To select Vertical Airflow Swing Operation

When the swing signal is received from the remote controller, the vertical louver starts to swing.

(Table 10 : Vertical swinging range)

	Range
Cooling / Dry mode Fan mode (①~⑤)	① ↔ ⑤
Heating mode Fan mode (⑥~⑧)	⑤ ↔ ⑧

- The SWING operation may stop temporarily when the air conditioner's fan is not operating, or when operating at very low speeds.

To select Horizontal Airflow Swing Operation

When the swing signal is received from the remote controller, the horizontal louver starts to swing.

(Table 11 : Horizontal swinging range)

	Range
Cooling/ Dry/ Heating/ Fan mode	① ↔ ⑤

- The SWING operation may stop temporarily when the air conditioner's fan is not operating, or when operating at very low speeds.

8. COMPRESSOR CONTROL

1. OPERATION FREQUENCY RANGE

The operation frequency of the compressor is different based on the operation mode as shown in the Table 12 .


(Table 12 : Compressor frequency range)

	Cooling		Heating		Dry	
	Minimum	Maximum	Minimum	Maximum	Minimum	Maximum
AOU9RLS3 AOU12RLS3	10rps	80rps	10rps	119rps	18rps	26rps
AOU15RLS3	12rps	91rps	16rps	130rps	16rps	24rps

2. OPERATION FREQUENCY CONTROL AT NORMAL START UP

The compressor frequency soon after the start-up is controlled as shown in the Fig.11 .

(Fig. 11 : Compressor control at start-up)

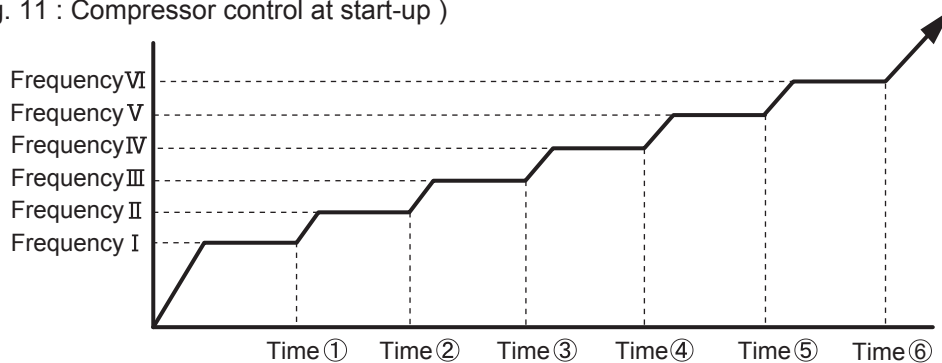

(Frequency)

	Frequency I	Frequency II	Frequency III	Frequency IV	Frequency V	Frequency VI
AOU9RLS3 AOU12RLS3	40rps	57rps	72rps	80rps	101rps	110rps
AOU15RLS3	40rps	59rps	72rps	80rps	101rps	110rps

(Time)

	Time ①	Time ②	Time ③	Time ④	Time ⑤	Time ⑥
AOU9RLS3 AOU12RLS3 AOU15RLS3	80sec	110sec	140sec	200sec	350sec	410sec

3. LIMITATION OF COMPRESSOR FREQUENCY BY OUTDOOR TEMPERATURE

The minimum compressor frequency is limited by outdoor temperature as shown in the Table 13 .

(Table 13 : Limitation of compressor frequency)

[Cooling/ Dry]

	50°F (10°C)		57°F (14°C)		104°F (40°C)	
	Under	Over	Under	Over	Under	Over
AOU9RLS3 AOU12RLS3	35rps	18rps	10rps	15rps		

	32°F (0°C)		50°F (10°C)		104°F (40°C)	
	Under	Over	Under	Over	Under	Over
AOU15RLS3	24rps	18rps	12rps	16rps		

[Heating]

	23°F (-5°C)		37°F (3°C)		45°F (7°C)		64°F (18°C)	
	Under	Over	Under	Over	Under	Over	Under	Over
AOU9RLS3 AOU12RLS3	35rps	29rps	18rps	10rps	16rps			

	23°F (-5°C)		37°F (3°C)		45°F (7°C)	
	Under	Over	Under	Over	Under	Over
AOU15RLS3	24rps	24rps	18rps	16rps		

9. TIMER OPERATION CONTROL

9-1 WIRELESS REMOTE CONTROLLER


The Table 14 shows the available timer setting based on the product model.

(Table 14 : Timer setting)


	ON TIMER / OFF TIMER	PROGRAM TIMER	SLEEP TIMER	WEEKLY TIMER
ASU9RLS3Y ASU12RLS3Y ASU15RLS3Y	○	○	○	○

1. ON TIMER / OFF TIMER

- OFF timer : When the clock reaches the set time, the air conditioner will be turned off.

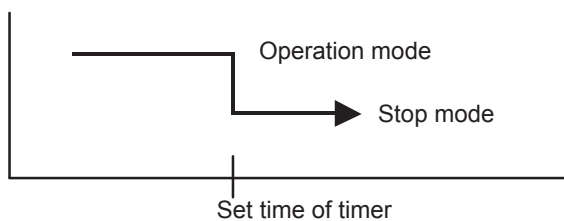


- ON timer : When the clock reaches the set time, the air conditioner will be turned on.

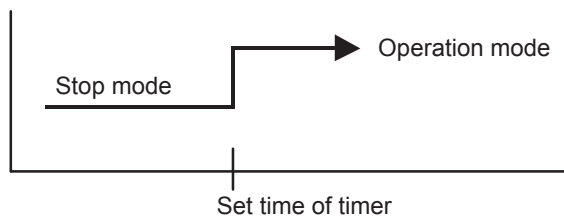

2. PROGRAM TIMER

- The program timer allows the OFF timer and ON timer to be used in combination one time.

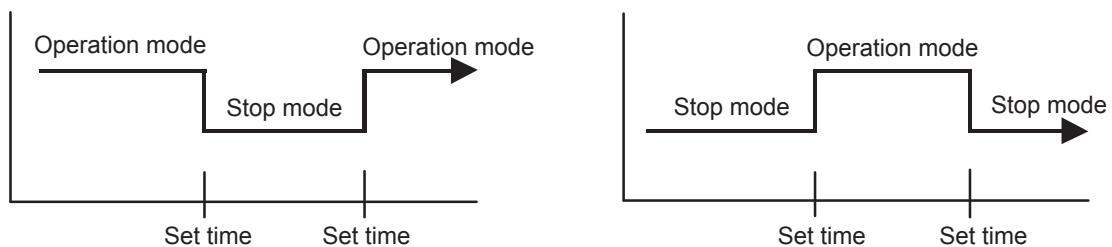

- Operation will start from the timer setting (either OFF timer or ON timer) whichever is closest to the clock's current timer setting.
The order of operations is indicated by the arrow in the remote control unit's display.
- SLEEP timer operation cannot be combined with ON timer operation.

3. SLEEP TIMER


If the sleep is set, the room temperature is monitored and the operation is stopped automatically. If the operation mode or the set temperature is change after the sleep timer is set, the operation is continued according to the changed setting of the sleep timer from that time ON.

In the cooling operation mode

When the sleep timer is set, the setting temperature is increased 2°F (1°C)

It increases the setting temperature another 2°F (1°C) after 1 hour.

After that, the setting temperature is not changed and the operation is stopped at the time of timer setting.

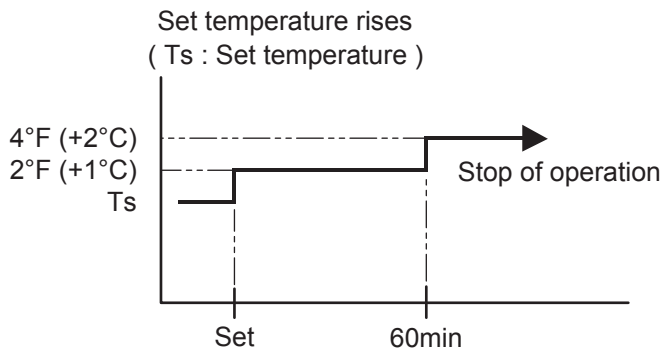


In the heating operation mode

When the sleep timer is set, the setting temperature is decreased 2°F (1°C)

It decreases the setting temperature another 2°F (1°C) every 30 minutes.

Upon lowering 8°F (4°C), the setting temperature is not changed and the operation stops at the time of timer setting.

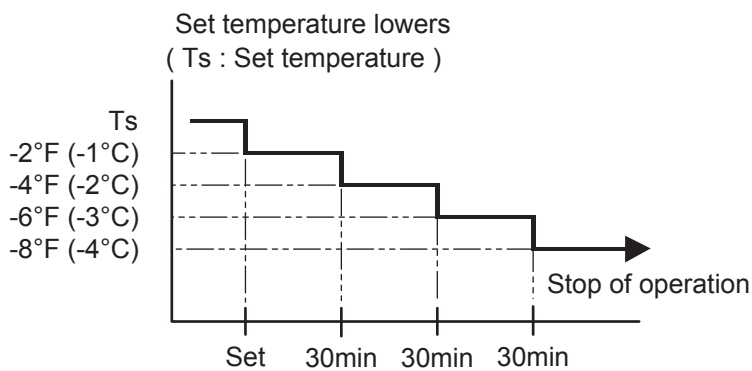

4. WEEKLY TIMER

ON and OFF timer can be combined, and up to 4 reservations per day and 28 reservations per week.

Before setting the program, please set the week and time of the air conditioner first.

If the week and time are not set, the weekly timer will not operate correctly at the set time.

10. ELECTRONIC EXPANSION VALVE CONTROL

The most proper opening of the electronic expansion valve is calculated and controlled under the present operating condition based on the Table 16 .

The compressor frequency, the detected temperature by the discharge temperature sensor, the indoor heat exchanger sensor, the outdoor heat exchanger sensor, and the outdoor temperature sensor.

(Table 16 : The pulse range of the electronic expansion valve control)

	Operation mode	Pulse range
AOU9RLS3 AOU12RLS3 AOU15RLS3	Cooling / Dry mode	Between 32 to 480 pulses.
	Heating mode	

- * The expansion valve is set at 480 pulses 110seconds after the compressor had stopped.
- * Initialization will start after 24 hours pass from the last initialization, and the compressor stops
- * At the time of supplying the power to the outdoor unit, the initialization of the electronic expansion valve is operated (528 pulses are input to the closing direction).

11. TEST OPERATION CONTROL

Before starting the test run wait for 1 minutes after connecting the power supply.

[Operation method]

- The Wireless remote controller

To start the test run, press the START/STOP button, the TEST RUN button on the remote controller with a by using the tip of a ballpoint pen or other small object.

- The Indoor unit

To start the test run, keep on pressing the MANUAL AUTO button of the indoor unit for more than 10 seconds.

To end the test operation, press the remote controller START/STOP button.


(When the air conditioner is running by pressing the TEST RUN button, the OPERATION Lamp and TIMER Lamp will simultaneously flash slowly.)

[Using the Wired remote control (Option) (UTY-RNNUM)]

If the Operation lamp is on, press the START/STOP button to turn it off.

Press the MODE and the FAN CONTROL buttons at the same time for more than two seconds to start the test operation.

The operation lamp will light up and "o1" will be displayed on the set temperature display.

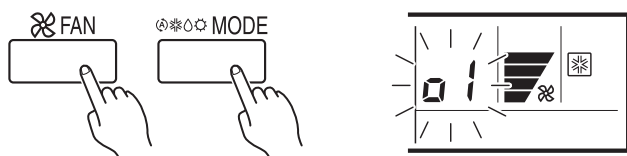

Test operation display

[Release]


Perform the test operation for 60 minutes.

Pressing the START/STOP button will stop the test operation.


[Using the Wired remote control (Option) (UTY-RZNUM)]

- If the unit is operating, turn it off.
- Test run stops in 60 minutes.
When the [On/Off button] is pressed during the test run, the test run will be canceled.
- After completing the test run, wait enough until starting the operation.

When [Menu button] is pressed twice while “Monitor” screen is displayed, it switches to the “Submenu” screen.
If [Menu button] is pressed while the “Submenu” screen is displayed, the display returns to the “Monitor” screen.

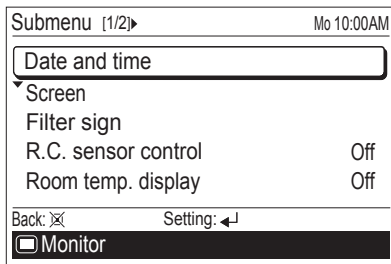


Press the [Screen switch button (Left)] and [Screen switch button (Right)] simultaneously for 5 seconds to switch to “Service” screen.

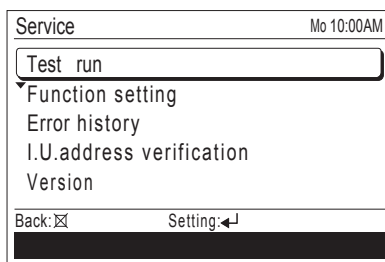

When you select [Test run] with the [Cursor button (Up/Down)] and press the [Enter button], following confirmation screen is displayed.

To start the test run, select “Yes” with the [Cursor button (Left/Right)], and press the [Enter button].
In Set temp, test run is displayed.

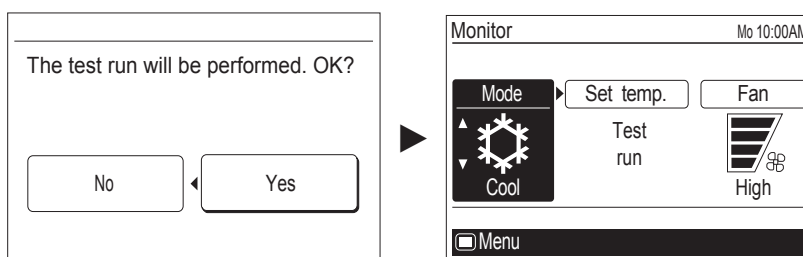

12. PREVENT TO RESTART FOR 3 MINUTES (3 MINUTES ST)

The compressor won't enter operation status for 2 minutes and 20 seconds after the compressor is stopped, even if any operation is given.

13. FOUR-WAY VALVE EXTENSION SELECT

At the time when the air conditioner is switched from the cooling mode to heating mode, the compressor is stopped, and the four-way valve is switched in 2 minutes and 20 seconds later after the compressor stopped.

14. AUTO RESTART

When the power was interrupted by a power failure, etc. during operation, the operation contents at that time are memorized and when power is recovered, operation is automatically started with the memorized operation contents.

When the power is interrupted and recovered during timer operation, since the timer operation time is shifted by the time the power was interrupted, an alarm is given by blinking (7 sec ON/2 sec OFF) the indoor unit body timer lamp.

[Operation contents memorized when the power is interrupted]


- Operation mode • Fan control energy saving
- Set temperature • Each central setting
- Set air flow
- Timer mode and set time (set by wireless remote controller)
- Set air flow Direction
- Swing
- ECONOMY operation
- MINIMUM HEAT operation
- Outdoor low noise operation
- Human sensor

15. MANUAL AUTO OPERATION (INDOOR UNIT BODY OPERATION)

When the remote control is lost or battery power dissipated, this function will work without the remote control. When MANUAL AUTO button is set more than 3seconds and less than 10seconds, MANUAL AUTO OPERATION will be started as shown in Table 17 . To stop operation, press the MANUAL AUTO button for 3seconds.

(Table 17 : Manual auto operation)

	Manual auto operation
OPERATION MODE	Auto changeover
FAN CONT. MODE	Auto
TIMER MODE	Continuous (No timer setting available)
SETTING TEMP.	75°F (24°C)
SETTING LOUVER	Standard
SWING	OFF
ECONOMY	OFF

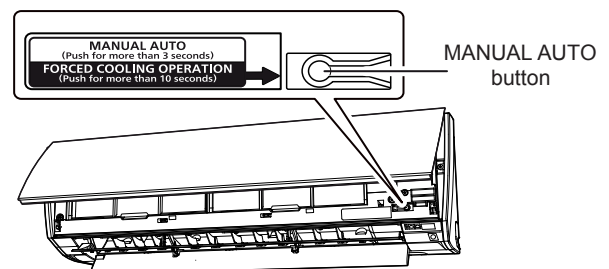

16. FORCED COOLING OPERATION (TEST OPERATION)

When FORCED COOLING OPERATION is set, the operation is controlled as shown in Table 18 .

(Table 18 : Forced cooling operation)

	Forced cooling operation
OPERATION MODE	Cooling
FAN CONT. MODE	Hi
TIMER MODE	-
SETTING TEMP.	Room Temp is not controlled
SETTING LOUVER	Horizontal (It is changed follow as setting of remote controller)
SWING	OFF
ECONOMY	-

- Forced cooling operation is started when press MANUAL AUTO button for 10 seconds or more.
- During the forced cooling operation, it operates regardless of room temperature sensor.
- Operation LED and timer LED blink at the same time during the forced cooling operation. They blink for 1 second ON and 1 second OFF on both operation LED and timer LED (same as test operation).
- Forced cooling operation is released after 60 minutes of starting operation or pressing MANUAL AUTO button for 3 seconds.

17. COMPRESSOR PREHEATING

When the outdoor heat exchanger temperature is lower than 41°F(5°C) and the all operation has been stopped for 30 minutes, power is applied to the compressor and the compressor is heated. (By heating the compressor, warm air is quickly discharged when operation is started.)
When operation was started, and when the outdoor heat exchanger temperature rises to 44.6°F(7°C) or greater, preheating is ended.

18. MINIMUM HEAT OPERATION

The MINIMUM HEAT operation performs as below when pressing MIN. HEAT button or Weekly timer setting on the remote controller.

(Table 19 : Minimum heat operation)

Mode	Heating
Setting temperature	50°F (10°C)
Fan mode	Auto
LED display	Economy
Defrost operation	Operate as normal

19. ECONOMY OPERATION

The ECONOMY operation functions by pressing ECONOMY button on the remote controller. At the maximum output, ECONOMY Operation is approximately 70% of normal air conditioner operation for cooling and heating.

The ECONOMY operation is almost the same operation as below settings.

(Table 20 : Economy operation)

Mode	Cooling/ Dry	Heating
Target temperature	Setting temp.+2°F (+1°C)	Setting temp.-2°F (-1°C)

20. HUMAN SENSOR CONTROL

The HUMAN SENSOR functions by pressing SENSOR button on the remote controller.

When the sensor detects that there is no one in the room for 20 minutes or more, it automatically changes the operation as below settings.


When someone comes back into the room, the human sensor will detect this, and automatically revert to the original settings.

(Table 21 : Human sensor control)


Mode	Cooling/ Dry	Heating
Target temperature	Setting temp.+4°F (+2°C)	Setting temp.-8°F (-4°C)

(Application range)

Vertical angle 90°(Side view)

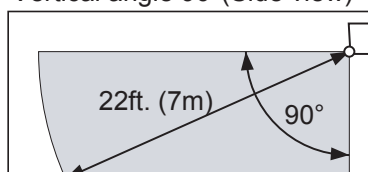

Horizontal angle 100°(Top view)

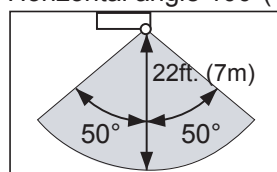

※ The sensor unit should detect when the human body (estimate: 150cmX30cm) or the object which has more than 8°F (4°C) temp, difference from the background and are crossed with 1.0m/s speed in front of the sensor unit.

21. OUTDOOR UNIT LOW NOISE OPERATION

The OUTDOOR UNIT LOW NOISE Operation functions by pressing OUTDOOR UNIT LOW NOISE button on the remote controller.

This operation stops the PFC control, and changes the Current release operation/release value.

OUTDOOR UNIT LOW NOISE Operation mode can be used during cooling, dry ,heating and automatic operation. It can not be used in Fan mode.

(Table 22 : Outdoor unit low noise operation)

	Control / Release
Current release operation/release value	3.5A / 3.0A

22. POWERFUL OPERATION

The POWERFUL OPERATION functions by pressing POWERFUL button on the remote controller.

The indoor unit & outdoor unit will operate at maximum power as shown in Table 23 .

(Table 23 : Powerful operation)

	Powerful operation
COMPRESSOR FREQUENCY	Maximum
FAN CONT. MODE	Powerful
SETTING LOUVER	Cooling/ Dry : 4, Heating : 7

Release Condition is as follows.

[Cooling / Dry]

- Room temperature \leq Setting temperature -1°F (-0.5°C) or Operation time has passed 20 minutes.

[Heating]

- Room temperature \geq Setting temperature +1°F (+0.5°C) or Operation time has passed 20 minutes.

24. HEAT INSULATION CONDITION (BUILDING INSULATION)

This setting can make the room temperature control more suitable for homes or buildings with high insulation (Function Number 95).


When the thermo sensor is turned ON it controls the compressor frequency at initial start to prevent overshoot in heating or cooling.

25. THERMO CONTROL (FOR INDOOR UNIT SENSOR)


When room temperature is controlled by the Indoor unit sensor, compressor operation is as shown in Fig. 13 and 14 .

But, adjustment is possible by the room temperature correction function setting. (Function Number 30 or 31)

(Fig. 13 : For cooling operation)

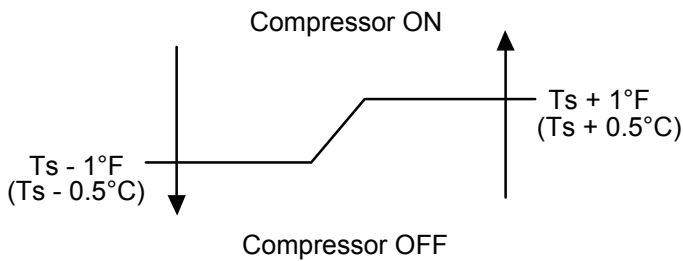

(Fig. 14 : For heating operation)

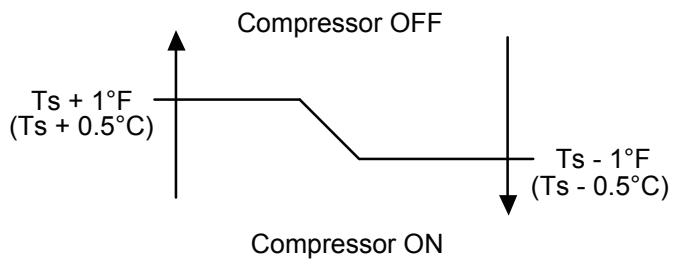


• T_s : Setting temperature

26. THERMO CONTROL (FOR WIRED REMOTE SENSOR)


When room temperature is controlled by the Wired remote sensor, compressor operation is as shown in Fig. 15 and 16 .

But, adjustment is possible by the room temperature correction function setting. (Function Number 35 or 36)

(Fig. 15 : For cooling operation)

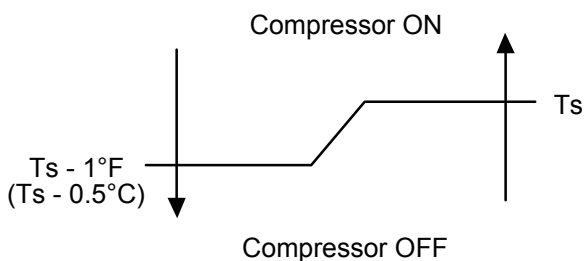

(Fig. 16 : For heating operation)

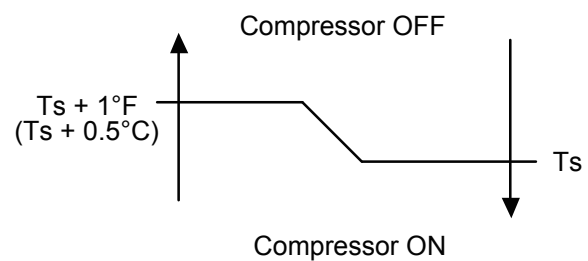

• T_s : Setting temperature

27. DEFROST OPERATION CONTROL

1. CONDITION OF STARTING THE DEFROST OPERATION

The defrost operation starts as shown in the following Table 24 .

(Table 24 : Condition of starting Defrost Operation)

Normal defrost	Compressor integrating operation time	
	Less than 25 minutes (9/ 12RLS3H) Less than 40 minutes (15RLS3H)	More than 25 minutes (9/ 12RLS3H) More than 40 minutes (15RLS3H)
Does not operate	Outdoor heat exchanger temp. $\leq 1.4^{\circ}\text{F}(-17^{\circ}\text{C})$ (at outside air temp. $\geq 14^{\circ}\text{F}(-10^{\circ}\text{C})$)	
	Outdoor heat exchanger temp. \leq Outside air temp. $-(12.6^{\circ}\text{F} (7^{\circ}\text{C}))$ or Outdoor heat exchanger temp. $\leq -13^{\circ}\text{F} (-25^{\circ}\text{C})$ (at $-4^{\circ}\text{F} (-20^{\circ}\text{C}) \leq$ Outdoor air temp. $< 14^{\circ}\text{F} (-10^{\circ}\text{C})$)	
	Outdoor heat exchanger temp. \leq Outside air temp. $-(12.6^{\circ}\text{F} (7^{\circ}\text{C}))$ or Outdoor heat exchanger temp. $\leq -22^{\circ}\text{F}(-30^{\circ}\text{C})$ (at outside air temp. $< -4^{\circ}\text{F}(-20^{\circ}\text{C})$)	

Integrating defrost	Compressor integrating operation time		
	More than 240 minutes (For continuous operation)	More than 213 minutes (For continuous operation)	Less than 10 minutes* (For intermittent operation)
	Outdoor heat exchanger temperature below $26.6^{\circ}\text{F}(-3^{\circ}\text{C})$	Outdoor heat exchanger temperature below $23^{\circ}\text{F}(-5^{\circ}\text{C})$	OFF count of the compressor 40 times

*If the compressor continuous operation time is less than 10 minutes,
the OFF number of the compressor is counted.

If any defrost operated, the compressor OFF count is cleared.

2. CONDITION OF THE DEFROST OPERATION COMPLETION


Defrost operation is released when the conditions become as shown in Table 25 .

(Table 25 : Defrost release condition)

Release Condition
Outdoor heat exchanger temperature sensor value is higher than $60.8^{\circ}\text{F}(16^{\circ}\text{C})$ or Compressor operation time has passed 15 minutes.

3. Defrost Flow Chart

The defrosting shall proceed by the integrating operation time, outdoor temperature and outdoor heat exchanger temperature as follows.

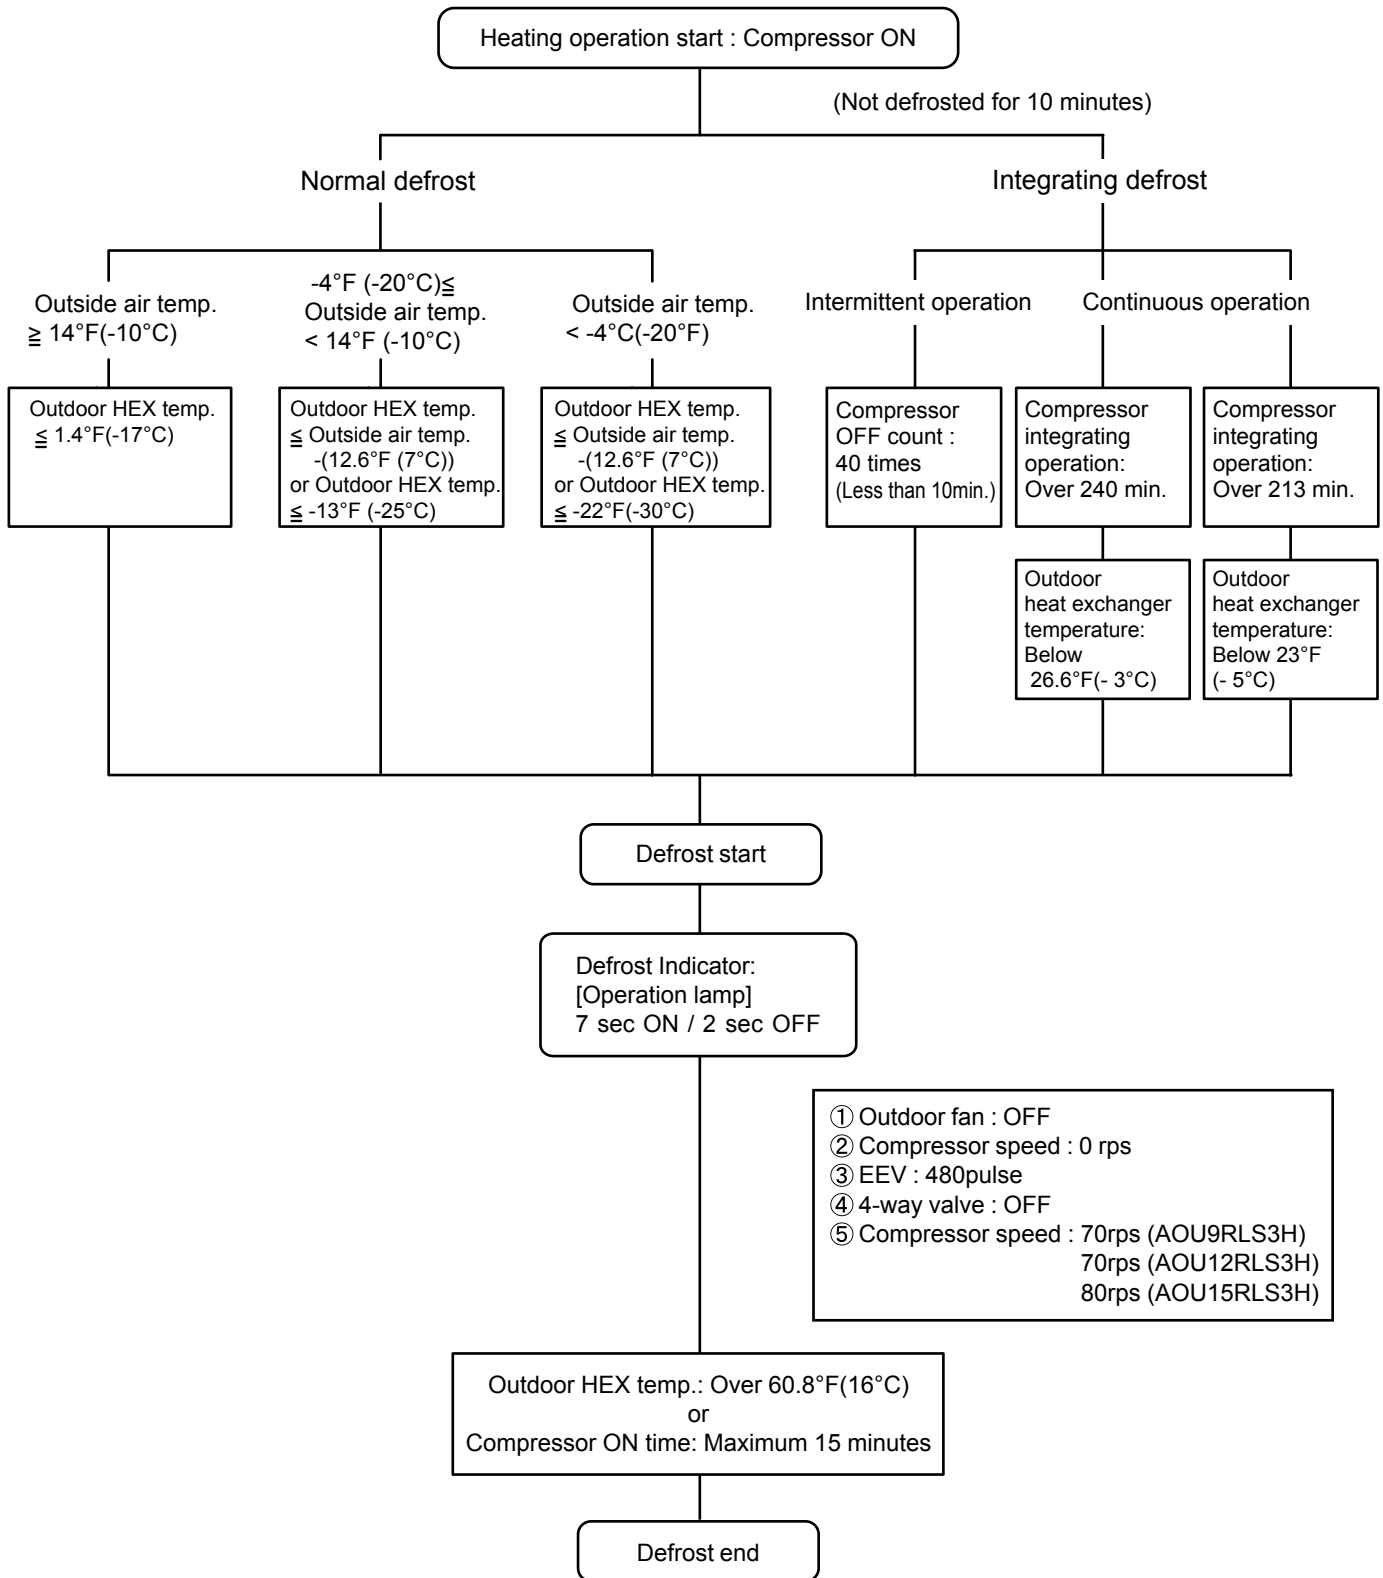

28. OFF DEFROST OPERATION CONTROL

When operation stops in the [Heating operation] mode, if frost is adhered to the outdoor unit heat exchanger, the defrost operation will proceed automatically. In this time, if indoor unit operation lamp flashes slowly (7 sec ON / 2 sec OFF), the outdoor unit will allow the heat exchanger to defrost, and then stop.

1. OFF DEFROST OPERATION CONDITION


In heating operation, the outdoor heat exchanger temperature is less than 24.8°F (- 4°C), compressor continuous operation more than 10 minutes, and compressor operation integrating time lasts for more than 30 minutes.

2. OFF DEFROST END CONDITION

(Table 26 : OFF defrost release condition)

Release Condition
Outdoor heat exchanger temperature sensor value is higher than 60.8°F (16°C) or Compressor operation time has passed 15 minutes.

OFF Defrost Flow Chart

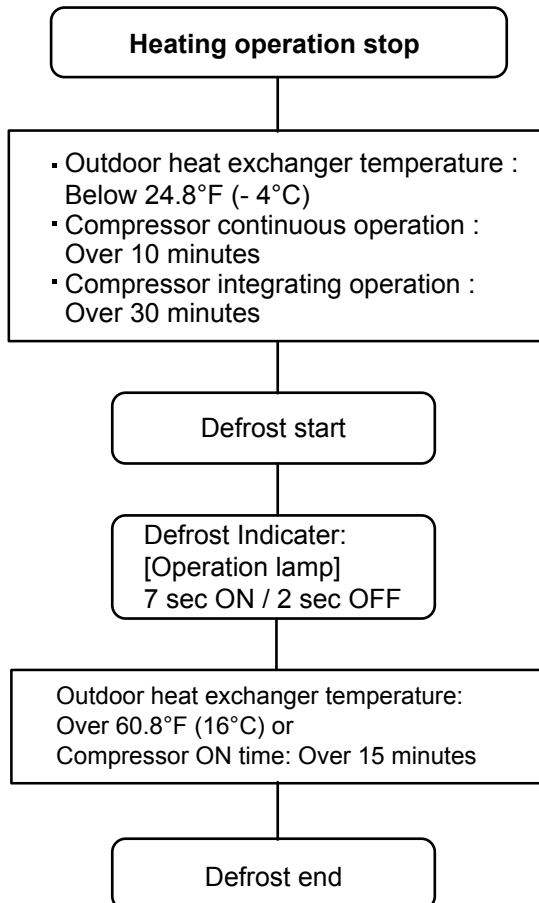

29. VARIOUS PROTECTIONS

1. DISCHARGE GAS TEMPERATURE OVERRISE PREVENION CONTROL

The discharge gas thermosensor (discharge thermistor : Outdoor side) will detect discharge gas temperature.

When the discharge temperature becomes higher than Temperature I, the compressor frequency is decreased 20rps, and it continues to decrease the frequency for 20rps every 120 seconds until the temperature becomes lower than Temperature I .

When the discharge temperature becomes lower than Temperature II, the protection control of the compressor frequency will be released.

When the discharge temperature becomes higher than Temperature III, the compressor is stopped and the indoor unit LED starts blinking.

(Table 27 : Discharge temperature over rise prevention control / Release temperature)

Temperature I	Temperature II	Temperature III
219.2°F (104°C)	213.8°F (101°C)	230°F (110°C)

2. CURRENT RELEASE CONTROL

The compressor frequency is controlled so that the outdoor unit input current does not exceed the current limit value that was set up with the outdoor temperature.

The compressor frequency returns to the designated frequency of the indoor unit at the time when the frequency becomes lower than the release value.

(Table 28 : Current release operation value / Release value)

[Heating]

AOU9 / 12RLS3	
OT (Control / Release)	
62.6°F (17°C)	7.0A / 6.5A
53.6°F (12°C)	9.0A / 8.5A
41°F (5°C)	10.0A / 9.5A

OT : Outdoor Temperature

[Heating]

AOU15RLS3	
OT (Control / Release)	
62.6°F (17°C)	7.0A / 6.5A
53.6°F (12°C)	9.0A / 8.5A
41°F (5°C)	11.0A / 10.5A
	13.0A / 12.5A

OT : Outdoor Temperature

[Cooling]

AOU9 / 12RLS3	
OT (Control / Release)	
114.8°F (46°C)	4.5A / 4.0A
	6.0A / 5.5A
104°F (40°C)	8.5A / 8.0A

OT : Outdoor Temperature

[Cooling]

AOU15RLS3	
OT (Control / Release)	
114.8°F (46°C)	4.5A / 4.0A
	6.0A / 5.5A
104°F (40°C)	9.0A / 8.5A

OT : Outdoor Temperature

3. ANTIFREEZING CONTROL (Cooling and Dry mode)

The compressor frequency is decrease on cooling & dry mode when the indoor heat exchanger temperature sensor detects the temperature lower than Temperature I .
Then, the anti-freezing control is released when it becomes higher than Temperature II .

(Table 29 : Anti-freezing protection operation / Release temperature)

Outdoor temperature	Temperature I	Temperature II
Over than 50°F (10°C) *1 or 54°F (12°C) *2	39.2°F (4°C)	44.6°F (7°C)
Less than 50°F (10°C) *1 or 54°F (12°C) *2		55.4°F (13°C)

*1. When the temperature drops.

*2. When the temperature rises.


4. COOLING PRESSURE OVERRISE PROTECTION

When the outdoor unit heat exchange sensor temperature rises to 152.6°F (67°C) or greater, the compressor and the outdoor fan motor are stopped and trouble display is performed.

5. HIGH TEMPERATURE RELEASE CONTROL (Heating mode)

On heating mode, the compressor frequency is controlled as following based on the detection value of the indoor heat exchanger temperature sensor.

[Control System]

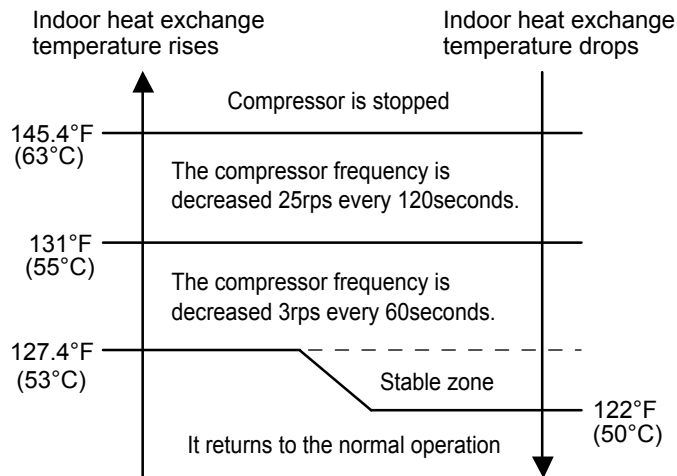

WALL MOUNTED type INVERTER

2 . TROUBLE SHOOTING

2-1 ERROR DISPLAY

2-1-1 INDOOR UNIT AND WIRED REMOTE CONTROLLER DISPLAY

Please refer the flashing pattern as follows.

Indoor Unit : ASU9 / 12 / 15RLS3Y


The OPERATION, TIMER and ECONOMY lamps operate as follows according to the error contents.

Error Contents	Indoor Unit Display			Wired Remote Controller Display	Trouble shooting
	OPERATION [I] (Green)	TIMER [⊕] (Orange)	ECONOMY [⊞] (Green)		
Serial Communication Error	1 times	1 times	Continuous	11	1
Wired Remote Controller Communication Error	1 times	2 times	Continuous	12	2
External Communication Error	1 times	8 times	Continuous	18	3
Indoor Unit Model Information Error EEPROM Access Abnormal	3 times	2 times	Continuous	32	4
Manual Auto Switch Error	3 times	5 times	Continuous	35	5
Indoor Room Thermistor Error	4 times	1 times	Continuous	41	6
Indoor Heat Ex.(Pipe) Thermistor Error	4 times	2 times	Continuous	42	7
Indoor Unit Fan Motor Error	5 times	1 times	Continuous	51	8
Outdoor Unit Main PCB Error	6 times	2 times	Continuous	62	9
Inverter Error	6 times	3 times	Continuous	63	10-1, 10-2
PFC Circuit Error (9 / 12RLS3H) Active Filter Error (15RLS3H)	6 times	4 times	Continuous	64	11-1, 11-2
IPM Error	6 times	5 times	Continuous	65	12
Discharge Thermistor Error	7 times	1 times	Continuous	71	13
Heat Ex. (Pipe) Thermistor Error	7 times	3 times	Continuous	73	14
Outdoor Thermistor Error	7 times	4 times	Continuous	74	15
Current Sensor Error	8 times	4 times	Continuous	84	16
Over Current Error	9 times	4 times	Continuous	94	17
Compressor Control Error	9 times	5 times	Continuous	95	18
Outdoor Unit Fan Motor Error	9 times	7 times	Continuous	97	19
4 Way Valve Error	9 times	9 times	Continuous	99	20
Discharge Temp. Error	10 times	1 times	Continuous	A1	21

2-1-2 WIRED REMOTE CONTROLLER DISPLAY (OPTION)

1. SELF - DIAGNOSIS

When " Er " in Temperature Display is displayed, inspection of the air conditioning system is necessary. Please consult authorized service personnel.

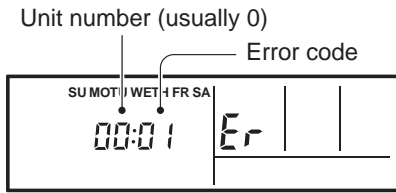



ex. Self-diagnosis check

2. ERROR CODE HISTORY DISPLAY


Up to 16 memorized error codes may be displayed for the indoor unit connected to the remote controller.

1. Stop the air conditioner operation.

2. Press the SET TEMPERATURE buttons ∇ , \blacktriangle simultaneously for 3 seconds or more to start the self-diagnosis.

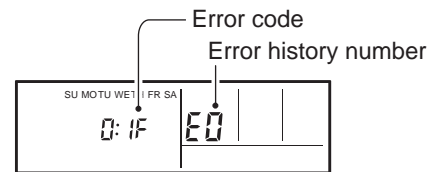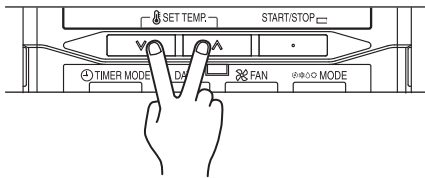

3. Press the SET TEMPERATURE button to select the error history number.

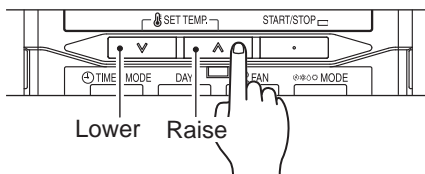


$\left[\begin{array}{cccccccccccc} 0 & \leftrightarrow & 1 & \leftrightarrow & 2 & \leftrightarrow & 3 & \leftrightarrow & 4 & \leftrightarrow & 5 & \leftrightarrow & 6 & \leftrightarrow & 7 \\ F & \leftrightarrow & E & \leftrightarrow & d & \leftrightarrow & c & \leftrightarrow & b & \leftrightarrow & A & \leftrightarrow & 9 & \leftrightarrow & 8 \end{array} \right]$


4. Press the SET TEMPERATURE buttons ∇ , \blacktriangle simultaneously for 3 seconds or more or there is no key input for 60 seconds to stop the display.

2-1-3 WIRELESS LAN INDICATOR DISPLAY

1. WIRELESS LAN CONTROL system layout

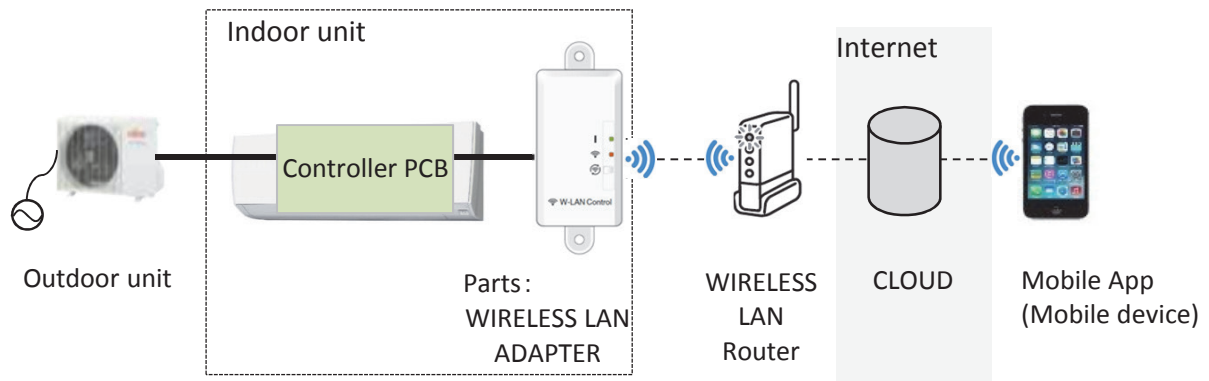

2. NAME OF PARTS

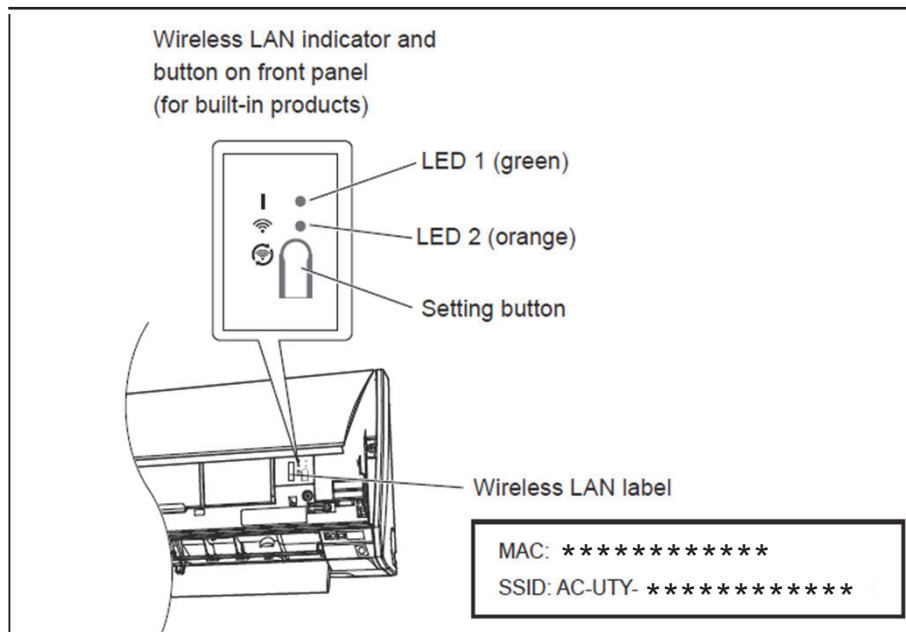

3. WIRELESS LAN ADAPTER INDICATOR

Please refer the flashing pattern as follows.

LED 1 (green) and LED 2 (orange) operate as follows according to the error contents.

Error Contents	Wireless LAN adapter Indicator		Error Code	Trouble shooting
	LED 1 (Green)	LED 2 (Orange)		
External Communication Error (Communication Error of between Indoor Unit to Wireless LAN adapter)	Flashing Fast	ON	18	30
Wireless LAN adapter Error	Flashing Fast	Flashing Fast	No Error	31
Network Communication Error (Communication Error of between Wireless LAN Router to Wireless LAN adapter)	ON	Flashing Fast	No Error	32
Communication Error (“Trou. 30” and “Trou. 32” are simultaneous Error)	Flashing Fast	Flashing Fast	18	33
Wireless LAN adapter Non-Energized	OFF	OFF	18	34
Wireless LAN adapter Sleep mode	OFF	OFF	No Error	35

Flashing Fast : Repeating 0.5 seconds ON / 0.5 seconds OFF

2-1-4 MOBILE APP DISPLAY (For AIR CONDITIONER)

1. ERROR DISPLAY

If there is an abnormality on the air conditioning, you will see ⚠ as follows.

When you tap the "Error button" ⚠ on the home screen, Error Code and Error Name is displayed.

For Android



For iOS



2. ERROR CODE


Error message	Error Code	Trouble shooting
Serial communication error between indoor/outdoor units	11.1	1-1
	11.2	
	11.3	1-2
	11.4	
Remote controller communication error	12.1	2
External communication error	18.1	3
Indoor unit main PCB error	32.1	4
Indoor unit manual auto switch error	35.1	5
Indoor unit room temp. thermistor error	41.1	6
Indoor unit heat ex. temp. thermistor error	42.2	7
Indoor unit fan motor 1 error	51.1	8
	51.2	
Outdoor unit main PCB error	62.1	9
	62.2	
Outdoor unit inverter PCB error	63.1	10
	63.2	
Outdoor unit active filter/PFC circuit error	64.1	11
	64.3	
	64.4	
	64.8	
Outdoor unit IPM error	65.3	12
Outdoor unit discharge temp. thermistor error	71.1	13
Outdoor unit heat ex. temp. thermistor error	73.3	14
Outside air temp. thermistor error	74.1	15
Outdoor unit current sensor error	84.1	16
Outdoor unit trip detection	94.1	17
Outdoor unit compressor motor control error	95.1	18
	95.3	
Outdoor unit fan motor 1 error	97.3	19
Outdoor unit 4-way valve error	99.1	20
Outdoor unit discharge temperature 1 error	A1.1	21

2-1-5 MOBILE APP DISPLAY (In Wireless LAN Control system)


1. ERROR DISPLAY

If there is an abnormality on the Wireless LAN control system, you will see is as follows.
Error notification will disappear at 5 seconds. Then return to normal display.


For Android

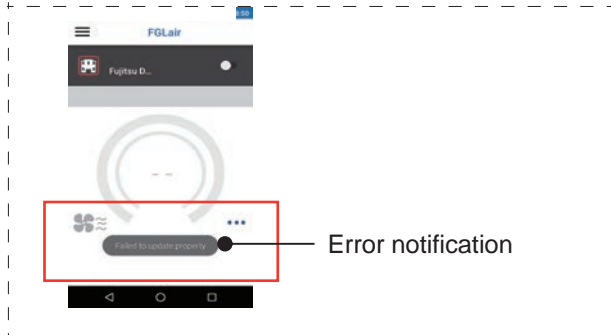

For iOS

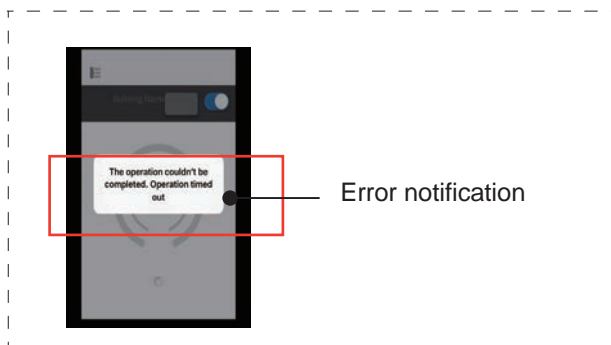

2. ERROR MESSAGES



2-2 TROUBLE SHOOTING WITH ERROR CODE

Trouble shooting 1-1
OUTDOOR UNIT Error Method:
Serial Communication Error
(Serial Reverse Transfer Error)

Indicate or Display:

Outdoor Unit : No indication
 Indoor Unit : Operation lamp: 1 time Flash, Timer lamp: 1 time Flash
 Economy lamp: Continuous flash.
 ERROR CODE : [E : 11]

Detective Actuators:

Outdoor unit Main PCB
 Outdoor unit fan motor

Detective details:

When the indoor unit cannot receive the serial signal from Outdoor unit more than 2minutes after power ON, or the indoor unit cannot receive the serial signal more than 15seconds during normal operation.

Forecast of Cause:

1. Connection failure
2. External cause
3. Main PCB failure
4. Outdoor unit fan motor failure

Check Point 1-1 : Reset the power and operate

- Does Error indication show again?

YES

Check Point 2 : Check Connection

- Check any loose or removed connection line of Indoor unit and Outdoor unit.
- >> **If there is an abnormal condition, correct it by referring to Installation Manual or Data & Technical Manual.**

OK


Check Point 3 : Check the voltage of power supply

- Check the voltage of power supply
- >> **Check if AC187V (AC208V -10%) - 253V (AC230V +10%) appears at Outdoor Unit Terminal L - N.**

OK

Check Point 4 : Check Serial Signal (Reverse Transfer Signal)


- Check Serial Signal (Reverse Transfer Signal)
- >> **Check if Indicated value swings between AC90V and AC270V at Outdoor Unit Terminal 1 - 3.**
- >> **If it is abnormal, Check Outdoor unit fan motor. (PARTS INFORMATION 5)**
- >> **If Outdoor fan motor is abnormal, replace Outdoor unit fan motor and Main PCB.**
- >> **If Outdoor fan motor is normal, replace Main PCB.**

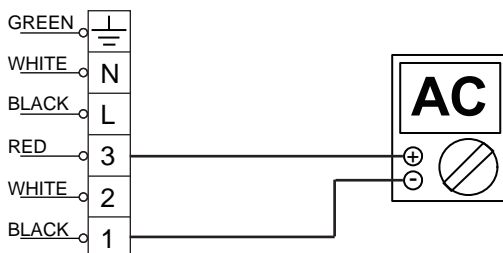

<p>Trouble shooting 1-2 INDOOR UNIT Error Method: Serial Communication Error (Serial Forward Transfer Error)</p>	<p>Indicate or Display: Outdoor Unit : No indication Indoor Unit : Operation lamp: 1 time Flash, Timer lamp: 1 time Flash Economy lamp: Continuous flash. ERROR CODE : [E : 11]</p>
---	---

<p>Detective Actuators: Indoor unit Controller PCB Indoor unit Fan motor</p>	<p>Detective details: When the outdoor unit cannot receive the serial signal from Indoor unit more than 10seconds.</p>
---	--

Forecast of Cause:
1. Connection failure 2. External cause 3. Controller PCB failure 4. Indoor unit fan motor failure

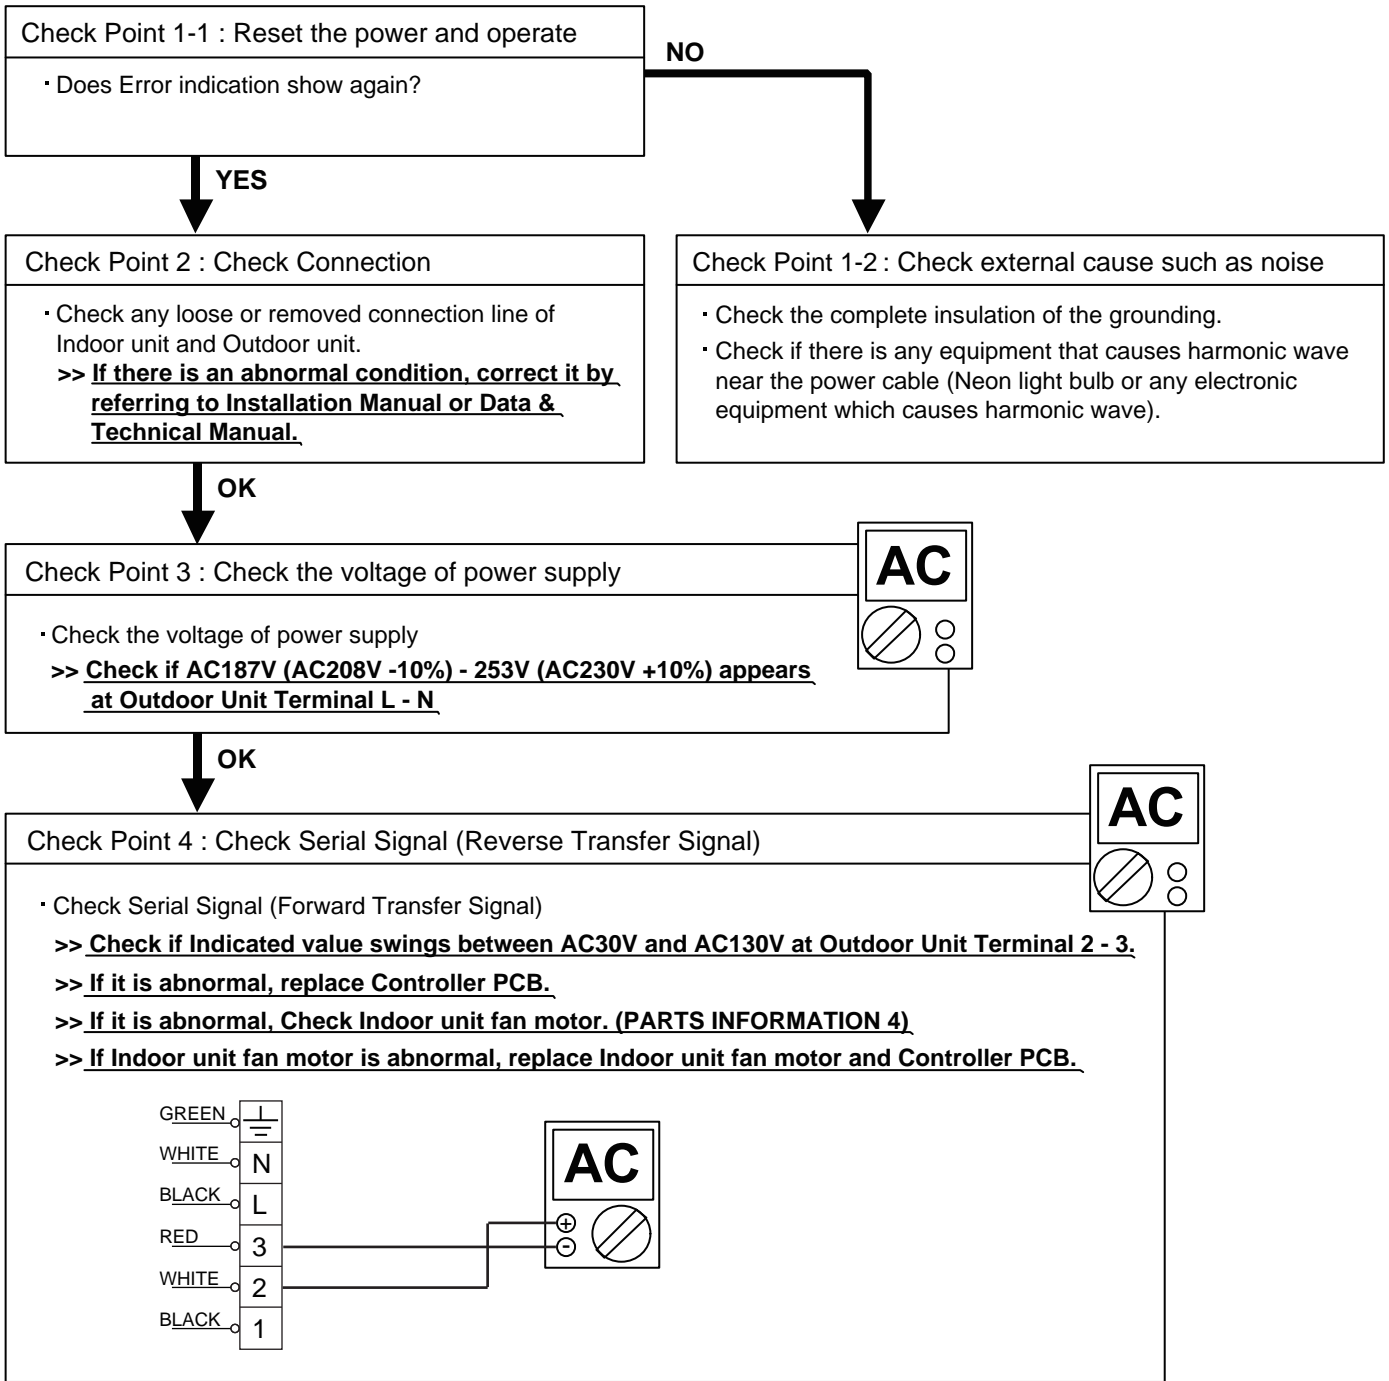


<p>Trouble shooting 2 <u>INDOOR UNIT Error Method:</u> Wired Remote Controller Communication Error</p>	<p><u>Indicate or Display:</u> Outdoor Unit : No indication Indoor Unit : Operation lamp: 1 time Flash, Timer lamp: 2 time Flash Economy lamp: Continuous flash. ERROR CODE : [E : 12]</p>
---	---

<p><u>Detective Actuators:</u> Indoor unit Controller PCB Wired remote control</p>	<p><u>Detective details:</u> When the indoor unit cannot receive the signal from Wired Remote Control more than 1minute during normal operation.</p>
---	--

<p><u>Forecast of Cause:</u> 1. Terminal connection abnormal 2. Wired remote control failure 3. Controller PCB failure</p>
--

<p>Check Point 1 : Check the connection of terminal</p>
<p><u>After turning off the power, check & correct the followings.</u> • Check the connection of terminal between remote control and Indoor unit, and check if there is a disconnection of the cable.</p>



<p>Check Point 2 : Check Remote Control and Controller PCB</p>	
<p>• Check Voltage at CN2 (terminal 1-3) of UTY-TWBXF1(Communication kit). (Power supply to Remote Control)</p> <p>>> If it is DC 5V, Remote Control is failure. (Controller PCB is normal) >> Replace Remote Control >> If it is DC 0V, Controller PCB is failure. (Check Remote Control once again) >> Replace Controller PCB</p> <p>▶ <u>Upon correcting the removed connector or miss-wiring, reset the power.</u></p>	

<p>Trouble shooting 3 INDOOR UNIT Error Method: External Communication Error or Communication Error ("Trou. A" and "Trou. B" are simultaneous Error)</p>	<p>Indicate of Display: Indoor Unit : Operation lamp: 1 times Flash, Timer lamp : 8 times Flash ERROR CODE : [18]</p>	<p>Wireless LAN adapter : LED 1 (Green) : Flashing Fast LED 2 (Orange) : ON or LED 1 (Green) : Flashing Fast LED 2 (Orange) : Flashing Fast</p>
---	---	---

<p>Detective Actuators: Wireless LAN adapter PCB Indoor unit Controller PCB Wireless LAN router</p>	<p>Detective details: After receiving a signal from the wireless LAN adapter, the same a signal has not been received for 15sec. or When the "External Communication Error" and "Network Communication Error" has occurred at the same time.</p>
---	--


<p>Forecast of Cause:</p> <ol style="list-style-type: none"> 1. Connection between A/C and Wireless LAN adapter failure 2. Wireless LAN adapter PCB failure 3. Controller PCB failure

<p>Check Point 1 : Check the LED flashing pattan of Wireless LAN adapter</p> <ul style="list-style-type: none"> · When the flashing pattern of the LED is below, <div style="border: 1px solid black; padding: 2px; display: inline-block; margin: 5px 0;"> Wireless LAN adapter : LED 1 (Green) : Flashing Fast , LED 2 (Orange) :ON </div> >> Refer to "Trouble shooting 30" · When the flashing pattern of the LED is below, <div style="border: 1px solid black; padding: 2px; display: inline-block; margin: 5px 0;"> Wireless LAN adapter : LED 1 (Green) : Flashing Fast , LED 2 (Orange) :Flashing Fast </div> >> Refer to "Trouble shooting 33"

<p>Trouble shooting 4 INDOOR UNIT Error Method: Indoor Unit Model Information Error EEPROM Access Abnormal</p>	<p>Indicate or Display: Outdoor Unit : No indication Indoor Unit : Operation lamp: 3 time Flash, Timer lamp: 2 time Flash Economy lamp: Continuous flash. ERROR CODE : [E : 32]</p>
---	---

<p>Detective Actuators: Indoor unit Controller PCB</p>	<p>Detective details: When power is on and there is some below case. 1. When model information of EEPROM is incorrect. 2. When the access to EEPROM failed.</p>
--	---

Forecast of Cause:
1. External cause 2. Defective connection of electric components 3. Controller PCB failure

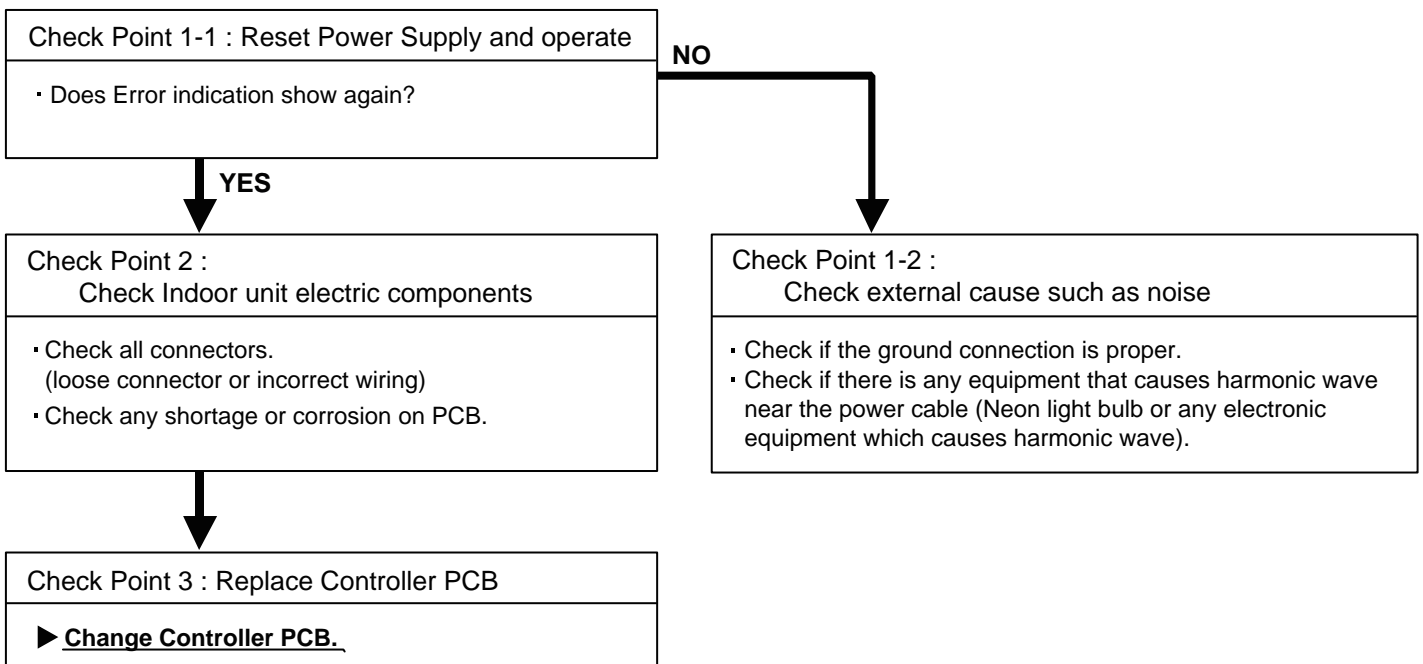

Note : EEPROM
EEPROM(Electronically Erasable and Programmable Read Only Memory) is a non-volatile memory which keeps memorized information even if power is turned off. It can change the contents electronically. To change the contents, it uses higher voltage than normal, and it can not change a partial contents. (Rewriting shall be done upon erasing the all contents.) There is a limit in a number of rewriting.

<p>Trouble shooting 5 <u>INDOOR UNIT Error Method:</u> Manual Auto Switch Error</p>	<p><u>Indicate or Display:</u> Outdoor Unit : No indication Indoor Unit : Operation lamp: 3 time Flash, Timer lamp: 5 time Flash Economy lamp: Continuous flash. ERROR CODE : [E : 35]</p>
--	--


<p><u>Detective Actuators:</u> Indoor unit Controller PCB Indicator PCB Manual auto switch</p>	<p><u>Detective details:</u> When the Manual Auto Switch becomes ON for consecutive 60 or more seconds.</p>
--	---

Forecast of Cause :
1. Manual auto switch failure 2.Controller PCB and Indicator PCB failure

Check Point 1 : Check the Manual auto switch

- Check if Manual auto switch is kept pressed.
- Check ON/OFF switching operation by using a meter.

>>If Manual Auto Switch is disabled (on/off switching), replace it.




Check Point 2 : Replace Controller PCB

► If Check Point 1 do not improve the symptom, change Controller PCB and Indicator PCB.

Trouble shooting 6 INDOOR UNIT Error Method: Indoor Room Thermistor Error	Indicate or Display: Outdoor Unit : No indication Indoor Unit : Operation lamp: 4 time Flash, Timer lamp: 1 time Flash Economy lamp: Continuous flash. ERROR CODE : [E : 41]
--	--

Detective Actuators: Indoor unit Controller PCB Room temperature thermistor	Detective details: When Room Temperature Thermistor open or short-circuit is detected.
--	--

Forecast of Cause :
1. Connector connection failure 2. Thermistor failure 3. Controller PCB failure

Check Point 1 : Check connection of Connector

- Check if connector is removed.
- Check erroneous connection.
- Check if thermistor cable is open.

>>Upon correcting the removed connector or miss-wiring, reset the power.



Check Point 2 : Remove connector and check Thermistor resistance value

Thermistor Characteristics (Approx. value)

Temperature (°F)	14°F	23°F	32°F	41°F	50°F	59°F	68°F	77°F
Resistance Value (kΩ)	58.2	44.0	33.6	25.9	20.2	15.8	12.5	10.0

Temperature (°F)	86°F	95°F	104°F	113°F
Resistance Value (kΩ)	8.0	6.5	5.3	4.4

► If Thermistor is either open or shorted, replace it and reset the power.



Check Point 3 : Check voltage of Controller PCB (DC5.0V)

Make sure circuit diagram of indoor unit and check terminal voltage at Thermistor (DC5.0V)

THERMISTOR (PIPE)								
	BLACK	1	1	CN4				
	BLACK	2	2					
	BLACK	3	3					
	BLACK	4	4					
THERMISTOR (ROOM TEMP.)								

► If the voltage does not appear, replace Controller PCB.

Trouble shooting 7 INDOOR UNIT Error Method: Indoor Heat Ex.(Pipe) Thermistor Error	Indicate or Display: Outdoor Unit : No indication Indoor Unit : Operation lamp: 4 time Flash, Timer lamp: 2 time Flash Economy lamp: Continuous flash. ERROR CODE : [E : 42]
--	---

Detective Actuators: Indoor unit Controller PCB Heat Ex. temperature thermistor	Detective details: When Heat Ex. Temperature Thermistor open or short-circuit is detected.
--	--

Forecast of Cause :
 1. Connector connection failure 2. Thermistor failure 3. Controller PCB failure

Check Point 1 : Check connection of Connector

- Check if connector is removed.
- Check erroneous connection.
- Check if thermistor cable is open.

>>Upon correcting the removed connector or miss-wiring, reset the power.



Check Point 2 : Remove connector and check Thermistor resistance value

Thermistor Characteristics (Approx. value)

Temperature (°F)	14°F	23°F	32°F	41°F	50°F	68°F
Resistance Value (kΩ)	312.3	233.2	176.0	134.2	103.3	62.9

Temperature (°F)	86°F	104°F	122°F	140°F	149°F
Resistance Value (kΩ)	39.6	25.6	17.1	11.6	10.4

► **If Thermistor is either open or shorted, replace it and reset the power.**



Check Point 3 : Check voltage of Controller PCB (DC5.0V)

Make sure circuit diagram of indoor unit and check terminal voltage at Thermistor (DC5.0V)

THERMISTOR (PIPE)

THERMISTOR (ROOM TEMP.)

► **If the voltage does not appear, replace Controller PCB.**

<p>Trouble shooting 8 <u>INDOOR UNIT Error Method:</u> Indoor Unit Fan Motor Error</p>	<p><u>Indicate or Display:</u> Outdoor Unit : No indication Indoor Unit : Operation lamp: 5 time Flash, Timer lamp: 1 time Flash Economy lamp: Continuous flash. ERROR CODE : [E : 51]</p>
---	---

<p><u>Detective Actuators:</u> Indoor unit Controller PCB Indoor unit Fan motor</p>	<p><u>Detective details:</u> When the condition that actual frequency of Indoor Fan is below 1/3 of target frequency is continued more than 56 seconds.</p>
--	---

<p><u>Forecast of Cause:</u> 1. Fan rotation failure 2. Fan motor winding open 3. Motor protection by surrounding temperature rise 4. Control PCB failure 5. Indoor unit fan motor failure</p>
--

<p>Check Point 1 : Check rotation of Fan</p>
<p>· Rotate the fan by hand when operation is off. (Check if fan is caught, dropped off or locked motor) >><u>If Fan or Bearing is abnormal, replace it.</u></p>

↓ OK

<p>Check Point 2 : Check ambient temp. around motor</p>
<p>· Check excessively high temperature around the motor. (If there is any surrounding equipment that causes heat) >><u>Upon the temperature coming down, restart operation.</u></p>

↓ OK

<p>Check Point 3 : Check Indoor unit fan motor</p>
<p>· Check Indoor unit fan motor. (PARTS INFORMATION 4) >><u>If Indoor unit fan motor is abnormal, replace Indoor unit fan motor.</u></p>


↓ OK

<p>Check Point 4 : Replace Controller PCB</p>
<p>▶ <u>If Check Point 1- 3 do not improve the symptom, replace Controller PCB.</u></p>

Trouble shooting 9 <u>OUTDOOR UNIT Error Method:</u> Outdoor Unit Main PCB Error	<u>Indicate or Display:</u> Outdoor Unit : No indication Indoor Unit : Operation lamp: 6 time Flash, Timer lamp: 2 time Flash Economy lamp: Continuous flash. ERROR CODE : [E : 62]
---	---

<u>Detective Actuators:</u> Outdoor unit Main PCB	<u>Detective details:</u> Access to EEPROM failed due to some cause after outdoor unit started.
---	---

<u>Forecast of Cause:</u> 1. External cause (Noise, temporary open, voltage drop) 2. Main PCB failure
--

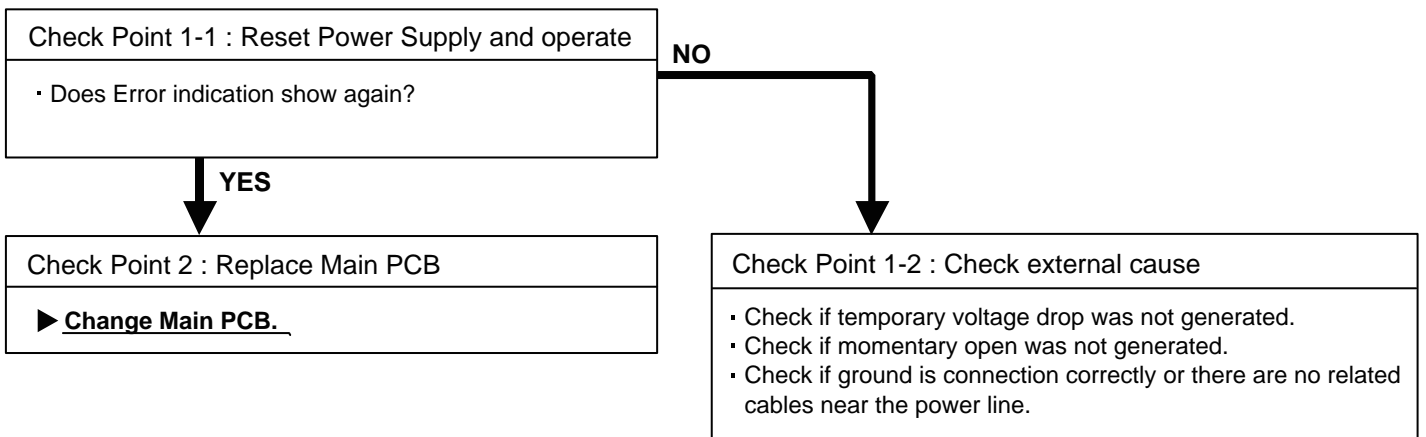


For AOU9 / 12RLS3 (H)

<p>Trouble shooting 10-1 <u>OUTDOOR UNIT Error Method:</u> Inverter Error</p>	<p><u>Indicate or Display:</u> Outdoor Unit : No indication Indoor Unit : Operation lamp: 6 time Flash, Timer lamp: 3 time Flash Economy lamp: Continuous flash. ERROR CODE : [E : 63]</p>
--	---

<p><u>Detective Actuators:</u> Outdoor unit main PCB</p>	<p><u>Detective details:</u> Error information received from outdoor unit main PCB.</p>
--	---

<p><u>Forecast of Cause :</u></p> <ol style="list-style-type: none"> 1. External cause. 2. Power supply to Main PCB wiring disconnection, open 3. Outdoor unit Main PCB failure

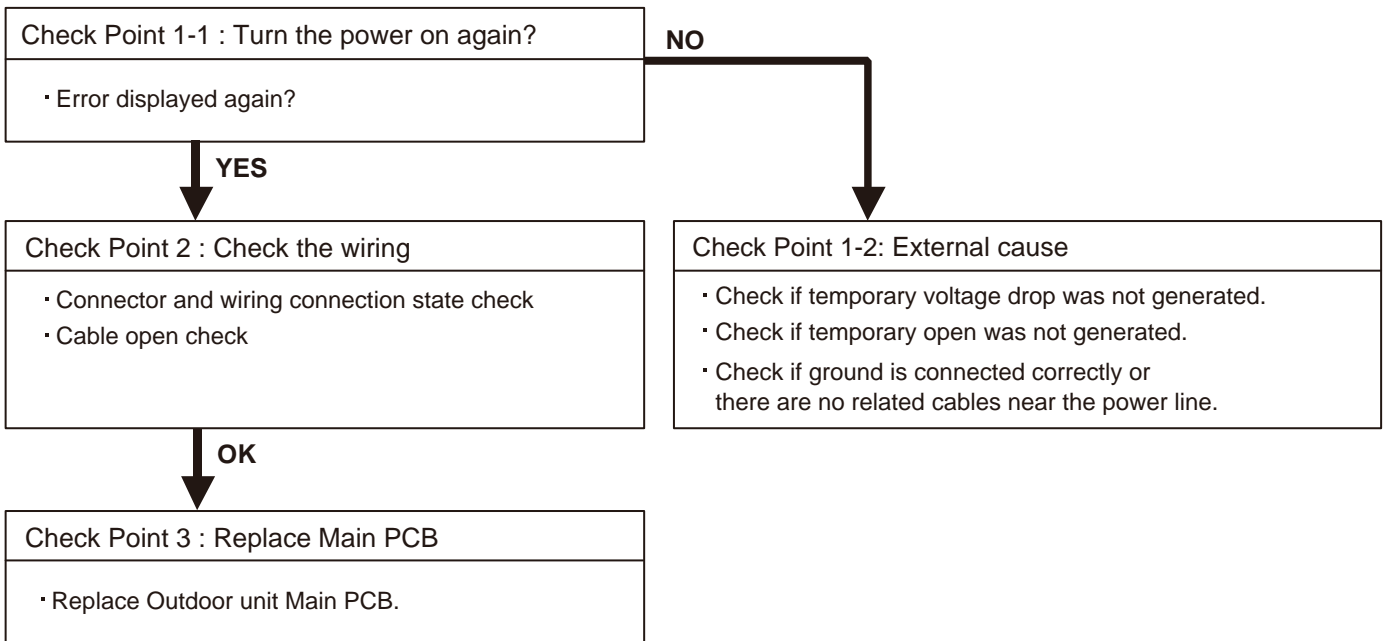


For AOU15RLS3 (H)

<p>Trouble shooting 10-2 OUTDOOR UNIT Error Method: Inverter Error</p>	<p>Indicate or Display: Outdoor Unit : No indication Indoor Unit : Operation lamp: 6 time Flash, Timer lamp: 3 time Flash Economy lamp: Continuous flash. ERROR CODE : [E : 63]</p>
---	--

<p>Detective Actuators: Inverter PCB</p>	<p>Detective details: Error information received from Inverter PCB.</p>
--	---

<p>Forecast of Cause : 1. External cause. 2. Power supply to Filter PCB to Inverter PCB wiring disconnection, open 3. Filter PCB failure 4. Inverter PCB failure</p>
--

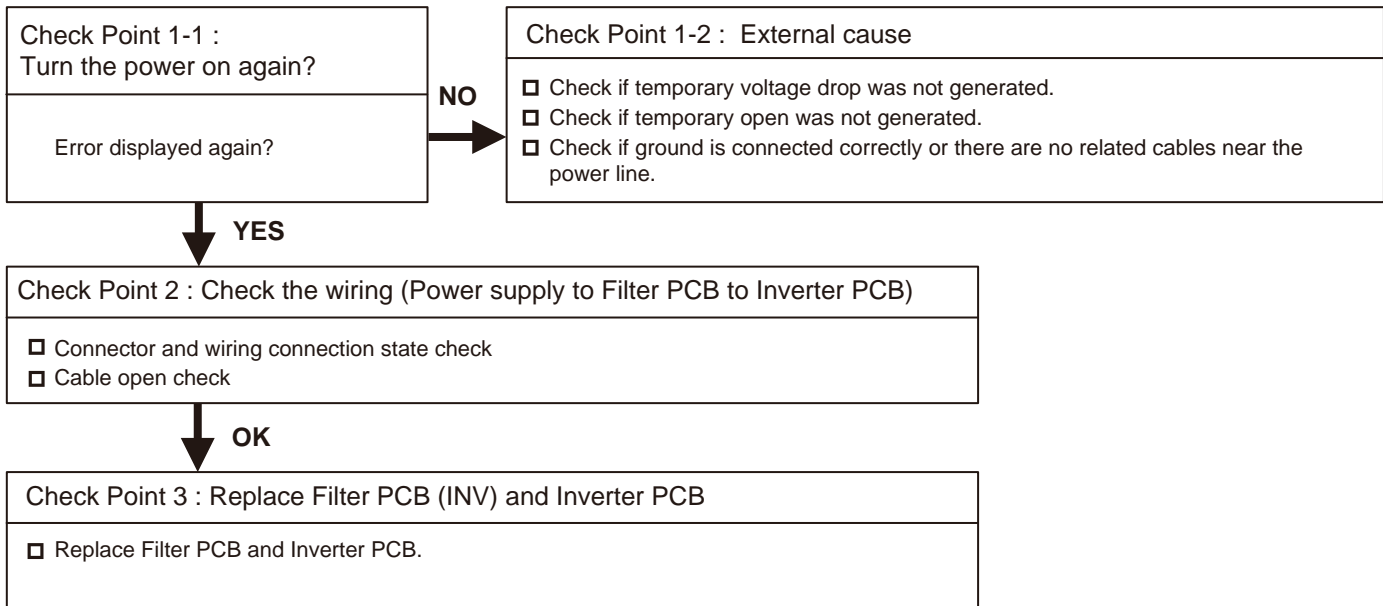

For AOU9 / 12RLS3 (H)

Trouble shooting 11-1 <u>OUTDOOR UNIT Error Method:</u> PFC Circuit Error	<u>Indicate or Display:</u> Outdoor Unit : No indication Indoor Unit : Operation lamp: 6 time Flash, Timer lamp: 4 time Flash Economy lamp: Continuous flash. ERROR CODE : [E : 64]
--	--

<u>Detective Actuators:</u> Outdoor unit Main PCB	<u>Detective details:</u> When inverter output DC voltage is higher than 415V for over 3 seconds, the compressor stops. If the same operation is repeated 5 times, the compressor stops permanently.
---	---

<u>Forecast of Cause :</u> 1. External cause 2. Connector connection failure 3. Main PCB failure
--

Check Point 1 : Check external cause at Indoor and Outdoor (Voltage drop or Noise)
<ul style="list-style-type: none">• Instant drop : Check if there is a large load electric apparatus in the same circuit.• Momentary power failure : Check if there is a defective contact or leak current in the power supply circuit.• Noise : Check if there is any equipment causing harmonic wave near electric line. (Neon bulb or electric equipment that may cause harmonic wave) Check the complete insulation of grounding.



Check Point 2 : Check connection of Connector
<ul style="list-style-type: none">• Check if connector is removed.• Check erroneous connection.• Check if cable is open. <p>>>Upon correcting the removed connector or miss-wiring, reset the power.</p>



Check Point 3 : Replace Main PCB
<p>▶ <u>If Check Point 1, 2 do not improve the symptom, change Main PCB.</u></p>

For AOU15RLS3 (H)

<p>Trouble shooting 11-2 OUTDOOR UNIT Error Method: Active Filter Error</p>	<p>Indicate or Display: Outdoor Unit : No indication Indoor Unit : Operation lamp: 6 time Flash, Timer lamp: 4 time Flash Economy lamp: Continuous flash. ERROR CODE : [E : 64]</p>
--	---

<p>Detective Actuators: Outdoor unit Main PCB Active filter module</p>	<p>Detective details: When inverter input DC voltage is higher than 425V or lower than 80V. When a momentary power cut off occurred on low voltage</p>
---	---

<p><u>Forecast of Cause :</u> 1. External cause 2. Connector connection failure 3. Main PCB failure 4. Active filter module failure</p>

<p>Check Point 1 : Check external cause at Indoor and Outdoor (Voltage drop or Noise)</p>
<ul style="list-style-type: none"> ▪ Instant drop : Check if there is a large load electric apparatus in the same circuit. ▪ Momentary power failure : Check if there is a defective contact or leak current in the power supply circuit. ▪ Noise : Check if there is any equipment causing harmonic wave near electric line. (Neon bulb or electric equipment that may cause harmonic wave) Check the complete insulation of grounding.



<p>Check Point 2 : Check connection of Connector</p>
<ul style="list-style-type: none"> ▪ Check if connector is removed. ▪ Check erroneous connection. ▪ Check if cable is open. <p>>>Upon correcting the removed connector or miss-wiring, reset the power.</p>



<p>Check Point 3 : Check Active filter module</p>
<ul style="list-style-type: none"> ▪ Check Active filter module. (PARTS INFORMATION 6) <p>>>If Active filter module is abnormal, replace it.</p>



<p>Check Point 4 : Replace Main PCB</p>
<p>▶ If Check Point 1 - 3 do not improve the symptom, change Main PCB.</p>

Trouble shooting 12 OUTDOOR UNIT Error Method: IPM Error	Indicate or Display: Outdoor Unit : No indication Indoor Unit : Operation lamp: 6 time Flash, Timer lamp: 5 time Flash Economy lamp: Continuous flash. ERROR CODE : [E : 65]
---	--

Detective Actuators: Outdoor unit Main PCB Outdoor unit Transistor PCB (15RLS3H) Compressor	Detective details: ① When more than normal operating current to IPM in Main PCB flows, the compressor stops. ② After the compressor restarts, if the same operation is repeated within 40sec, the compressor stops again. ③ If ① and ② repeats 5 times, the compressor stops permanently.
---	---

Forecast of Cause : 1. Defective connection of electric components 2. Outdoor Fan Operation failure 3. Outdoor Heat Exchanger clogged 4. Compressor failure 5. Main PCB failure 6. Transistor PCB failure (For AOU15RLS3H)

Check Point 1 : Check connections of Outdoor Unit Electrical Components
<ul style="list-style-type: none"> • Check if the terminal connection is loose. • Check if connector is removed. • Check erroneous connection. • Check if cable is open. >> Upon correcting the removed connector or miss-wiring, reset the power.



Check Point 2 : Check Outdoor Fan, Heat Exchanger
<ul style="list-style-type: none"> • Is there anything obstructing the air distribution circuit? • Is there any clogging of Outdoor Heat Exchanger? • Is the Fan rotating by hand when operation is off ? >> If the Fan Motor is locked, replace it.



Check Point 3 : Check Outdoor Fan
<ul style="list-style-type: none"> • Check Outdoor Fan Motor. (Refer to Trouble shooting 19) >> If the Fan Motor is failure, replace it.



Check Point 4 : Check Compressor
<ul style="list-style-type: none"> • Check Compressor. (PARTS INFORMATION 2)



Check Point 5 : Check Transistor PCB (For AOU15RLS3 (H))
<ul style="list-style-type: none"> • Check Transistor PCB. (PARTS INFORMATION 7)



Check Point 6 : Replace Main PCB
▶ If Check Point 1 ~ 5 do not improve the symptom, change Main PCB.

Trouble shooting 13 OUTDOOR UNIT Error Method: Discharge Thermistor Error	Indicate or Display: Outdoor Unit : No indication Indoor Unit : Operation lamp: 7 time Flash, Timer lamp: 1 time Flash Economy lamp: Continuous flash. ERROR CODE : [E : 71]
--	--

Detective Actuators: Outdoor unit Main PCB Discharge pipe temperature thermistor	Detective details: When Discharge pipe temperature thermistor open or short-circuit is detected at power ON or while running the compressor.
---	--

Forecast of Cause :
1. Connector connection failure 2. Thermistor failure 3. Main PCB failure

Check Point 1 : Check connection of Connector

- Check if connector is removed.
- Check erroneous connection.
- Check if thermistor cable is open.

>>Upon correcting the removed connector or miss-wiring, reset the power.



Check Point 2 : Remove connector and check Thermistor resistance value

Ω

Thermistor Characteristics (Approx. value)

Temperature (°F)	14°F	23°F	32°F	41°F	50°F	68°F	86°F	104°F	122°F
Resistance Value (k Ω)	292.9	221.1	168.6	129.8	100.9	62.5	40.0	26.3	17.8

Temperature (°F)	140°F	158°F	176°F	194°F	212°F	230°F	248°F
Resistance Value (k Ω)	12.3	8.7	6.3	4.6	3.4	2.6	2.0

► If Thermistor is either open or shorted, replace it and reset the power.



Check Point 3 : Check voltage of Main PCB (DC5.0V)

DC

Make sure circuit diagram of outdoor unit and check terminal voltage at Thermistor (DC5.0V)

AOU9 / 12RLS3 (H)

AOU15RLS3 (H)

► If the voltage does not appear, replace Main PCB.

Trouble shooting 14 OUTDOOR UNIT Error Method: Heat Ex.(Pipe) Thermistor Error	Indicate or Display: Outdoor Unit : No indication Indoor Unit : Operation lamp: 7 time Flash, Timer lamp: 3 time Flash Economy lamp: Continuous flash. ERROR CODE : [E : 73]
---	--

Detective Actuators: Outdoor unit Main PCB Heat exchanger thermistor	Detective details: When Heat exchanger temperature thermistor open or short-circuit is detected at power ON or while running the compressor.
---	--

Forecast of Cause :
1. Connector connection failure 2. Thermistor failure 3. Main PCB failure

Check Point 1 : Check connection of Connector

- Check if connector is removed.
- Check erroneous connection.
- Check if thermistor cable is open.

>>Upon correcting the removed connector or miss-wiring, reset the power.



Check Point 2 : Remove connector and check Thermistor resistance value

Thermistor Characteristics (Approx. value)

Temperature (°F)	14°F	23°F	32°F	41°F	50°F	68°F	86°F	104°F	122°F
Resistance Value (kΩ)	27.8	21.0	16.1	12.4	9.6	6.0	3.8	2.5	1.7

Temperature (°F)	140°F	158°F	176°F
Resistance Value (kΩ)	1.2	0.8	0.6

► If Thermistor is either open or shorted, replace it and reset the power.



Check Point 3 : Check voltage of Main PCB (DC5.0V)

Make sure circuit diagram of outdoor unit and check terminal voltage at Thermistor (DC5.0V)

AOU9 / 12RLS3 (H)

AOU15RLS3 (H)

► If the voltage does not appear, replace Main PCB.

Trouble shooting 15 OUTDOOR UNIT Error Method: Outdoor Thermistor Error	Indicate or Display: Outdoor Unit : No indication Indoor Unit : Operation lamp: 7 time Flash, Timer lamp: 4 time Flash Economy lamp: Continuous flash. ERROR CODE : [E : 74]
--	--

Detective Actuators: Outdoor unit Main PCB Outdoor thermistor	Detective details: When Outdoor temperature thermistor open or short-circuit is detected at power ON or while running the compressor.
--	---

Forecast of Cause :
1. Connector connection failure 2. Thermistor failure 3. Main PCB failure

Check Point 1 : Check connection of Connector

- Check if connector is removed.
- Check erroneous connection.
- Check if thermistor cable is open.

>>Upon correcting the removed connector or miss-wiring, reset the power.



Check Point 2 : Remove connector and check Thermistor resistance value

Thermistor Characteristics (Approx. value)

Temperature (°F)	-4°F	5°F	14°F	23°F	32°F	41°F	50°F	68°F	86°F
Resistance Value (kΩ)	115.2	84.2	62.3	46.6	35.2	26.9	20.7	12.6	8.0

Temperature (°F)	95°F	104°F	113°F	122°F	131°F
Resistance Value (kΩ)	6.4	5.2	4.2	3.5	2.8

► If Thermistor is either open or shorted, replace it and reset the power.



Check Point 3 : Check voltage of Main PCB (DC5.0V)

Make sure circuit diagram of outdoor unit and check terminal voltage at Thermistor (DC5.0V)

AOU9 / 12RLS3 (H)


AOU15RLS3 (H)

► If the voltage does not appear, replace Main PCB.

Trouble shooting 16 OUTDOOR UNIT Error Method: Current Sensor Error	Indicate or Display: Outdoor Unit : No indication Indoor Unit : Operation lamp: 8 time Flash, Timer lamp: 4 time Flash Economy lamp: Continuous flash. ERROR CODE : [E : 84]
--	--

Detective Actuators: Outdoor unit Main PCB	Detective details: When Input Current Sensor has detected 0A, while Inverter Compressor is operating at higher than 56rps, after 1minute upon starting the Compressor. (Except during the defrost operation)
--	--

Forecast of Cause : 1. Defective connection of electric components 2. External cause 3. Main PCB failure
--

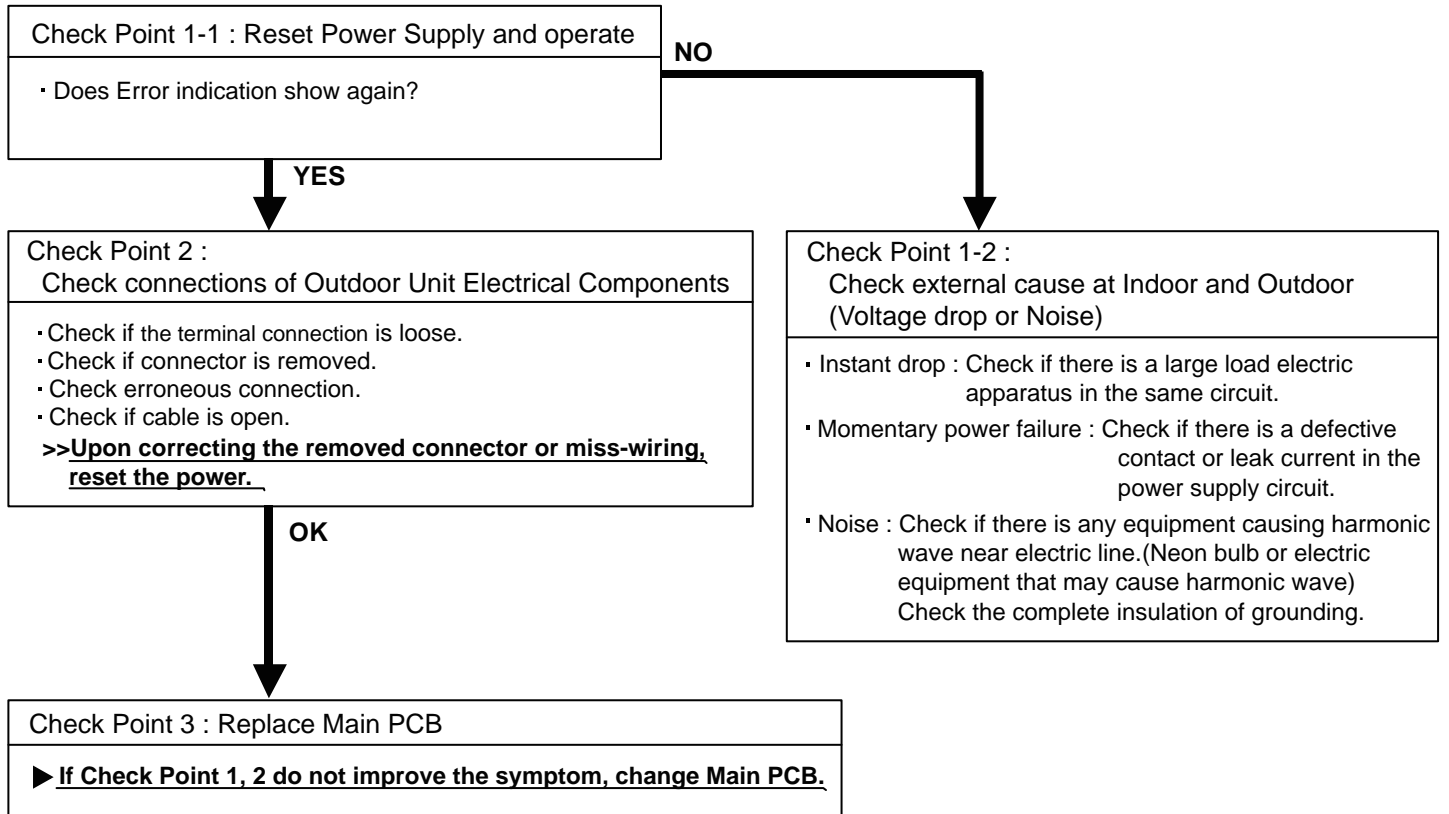

Trouble shooting 17 OUTDOOR UNIT Error Method: Trip Detection	Indicate or Display: Outdoor Unit : No indication Indoor Unit : Operation lamp: 9 time Flash, Timer lamp: 4 time Flash Economy lamp: Continuous flash. ERROR CODE : [E : 94]
--	--

Detective Actuators: Outdoor unit Main PCB Compressor	Detective details: <ul style="list-style-type: none"> ▪ "Protection stop by overcurrent generation after inverter compressor start processing completed" generated consecutively 10 times. * The number of generations is reset if the start-up of the compressor succeeds.
--	---

Forecast of Cause : <ol style="list-style-type: none"> 1. Outdoor unit fan operation defective, foreign matter on hear exchanger, excessive rise of ambient temperature 2. Main PCB failure 3. Compressor failure (lock, winding short)

Check Point 1 : Check the outdoor unit fan operation, heat exchanger, ambient temperature
<ul style="list-style-type: none"> ▪ No obstructions in air passages? ▪ Heat exchange fins clogged ▪ Outdoor unit fan motor check ▪ Ambient temperature not raised by the effect of other heat sources? ▪ Discharged air not sucked in?

↓ **OK**

Check Point 2 : Replace Main PCB
▶ <u>If Check Point 1 do not improve the symptom, change Main PCB.</u>

↓ **OK**

Check Point 3 : Replace Compressor
▶ <u>If Check Point 2 do not improve the symptom, change Compressor.</u>

Trouble shooting 18 <u>OUTDOOR UNIT Error Method:</u> Compressor Motor Control Error	<u>Indicate or Display:</u> Outdoor Unit : No indication Indoor Unit : Operation lamp: 9 time Flash, Timer lamp: 5 time Flash Economy lamp: Continuous flash. ERROR CODE : [E : 95]
---	---

<u>Detective Actuators:</u> Outdoor unit Main PCB Compressor	<u>Detective details:</u> ① If the detected rotor location is out of phase with actual rotor location more than 90°, the compressor stops. After the compressor restarts, if the same operation is repeated ② within 40sec, the compressor stops again. ③ If ① and ② repeats 5 times, the compressor stops permanently.
---	--

<u>Forecast of Cause :</u> 1. Defective connection of electric components 2. Main PCB failure 3. Compressor failure

Check Point 1 : Check Noise from Compressor
<ul style="list-style-type: none"> • Turn on Power and check operation noise. ▶ <u>If an abnormal noise show, replace Compressor.</u>



Check Point 2 : Check connection of around the Compressor components
For Compressor Terminal, Main PCB <ul style="list-style-type: none"> • Check if connector is removed. • Check erroneous connection. • Check if cable is open. (Refer to PARTS INFORMATION 2) >><u>Upon correcting the removed connector or miss-wiring, reset the power.</u>



Check Point 3 : Replace Main PCB
▶ <u>If Check Point 1,2 do not improve the symptom, change Main PCB.</u>



Check Point 4 : Replace Compressor
▶ <u>If Check Point 3 do not improve the symptom, change Compressor.</u>

Trouble shooting 19 OUTDOOR UNIT Error Method: Outdoor Unit Fan Motor Error	Indicate or Display: Outdoor Unit : No indication Indoor Unit : Operation lamp: 9 time Flash, Timer lamp: 7 time Flash Economy lamp: Continuous flash. ERROR CODE : [E : 97]
--	--

Detective Actuators: Outdoor unit Main PCB Outdoor unit Fan motor	Detective details: ① When outdoor fan rotation speed is less than 100rpm in 20 seconds after fan motor starts, fan motor stops. ② After fan motor restarts, if the same operation within 60sec is repeated 3 times in a row, compressor and fan motor stops. ③ If ① and ② repeats 5 times in a row, compressor and fan motor stops permanently.
--	---

Forecast of Cause: 1. Fan rotation failure 2. Motor protection by surrounding temperature rise 3. Main PCB failure 4. Outdoor unit fan motor

Check Point 1 : Check rotation of Fan
• Rotate the fan by hand when operation is off. (Check if fan is caught, dropped off or locked motor) >>If Fan or Bearing is abnormal, replace it.


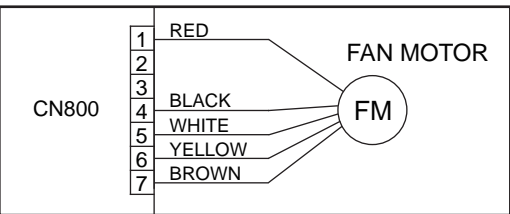
↓ **OK**

Check Point 2 : Check ambient temp. around motor
• Check excessively high temperature around the motor. (If there is any surrounding equipment that causes heat) >>Upon the temperature coming down, restart operation.

↓ **OK**

Check Point 3 : Check Outdoor unit fan motor
• Check Outdoor unit fan motor. (PARTS INFORMATION 5) >>If Outdoor unit fan motor is abnormal, replace Outdoor unit fan motor.

↓ **OK**

Check Point 4 : Check Output Voltage of Main PCB • Check outdoor unit circuit diagram and the voltage. (Measure at Main PCB side connector)	<div style="border: 1px solid black; padding: 5px; display: inline-block;"> DC  </div>						
	<table border="1" style="width: 100%;"> <thead> <tr> <th>Read wire</th> <th>DC voltage</th> </tr> </thead> <tbody> <tr> <td>Red - Black (Vm)</td> <td>240 - 400V</td> </tr> <tr> <td>White - Black (Vcc)</td> <td>13.5 - 16.5V</td> </tr> </tbody> </table>	Read wire	DC voltage	Red - Black (Vm)	240 - 400V	White - Black (Vcc)	13.5 - 16.5V
Read wire	DC voltage						
Red - Black (Vm)	240 - 400V						
White - Black (Vcc)	13.5 - 16.5V						
▶ If the voltage is not correct, replace Main PCB.							

Trouble shooting 20 <u>OUTDOOR UNIT Error Method:</u> 4-Way Valve Error	<u>Indicate or Display:</u> Outdoor Unit : No indication Indoor Unit : Operation lamp: 9 time Flash, Timer lamp: 9 time Flash Economy lamp: Continuous flash. ERROR CODE : [E : 99]
--	--

<u>Detective Actuators:</u> Indoor unit Controller PCB Heat Ex. temperature thermistor Room temperature thermistor 4-way valve Main PCB	<u>Detective details:</u> When the indoor heat exchanger temperature is compared with the room temperature, and either following condition is detected continuously two times, the compressor stops. <ul style="list-style-type: none"> ▪ Cooling or Dry operation [Indoor heat exchanger temp.] - [Room temp.] > 20°F(10°C) ▪ Heating operation [Indoor heat exchanger temp.] - [room temp.] < - 20°F(-10°C) If the same operation is repeated 5 times, the compressor stops permanently.
---	--

<u>Forecast of Cause :</u> 1. Connector connection failure 2. Thermistor failure 3. Coil failure 4. 4-way valve failure 5. Main PCB failure 6. Controller PCB failure
--

Check Point 1 : Check connection of Connector <ul style="list-style-type: none"> ▪ Check if connector is removed. ▪ Check erroneous connection. ▪ Check if thermistor cable is open. >> <u>Upon correcting the removed connector or mis-wiring, reset the power.</u>
--




Check Point 2 : Check each thermistor <ul style="list-style-type: none"> ▪ Isn't it fallen off the holder? ▪ Is there a cable pinched? >> <u>Check characteristics of thermistor (Refer to Trouble shooting 6, 7),</u> <u>If defective, replace the thermistor</u>



Check Point 3 : Check the solenoid coil and 4-way valve [Solenoid coil] <ul style="list-style-type: none"> ▪ Remove CN30 (For 9/12RLS3 (H)) and CN500 (For 15RLS3 (H)) from PCB and check the resistance value of coil. Resistance value is 1.88kΩ ~ 2.29kΩ at 68°F (20°C). >> <u>If it is Open or abnormal resistance value, replace Solenoid Coil.</u> [4-way valve] <ul style="list-style-type: none"> ▪ Check each piping temperature, and the location of the valve by the temperature difference. >> <u>If the value location is not proper, replace 4-way valve.</u>
--



Check Point 4 : Check the voltage of 4-way valve <ul style="list-style-type: none"> ▪ Check the voltage CN30 (For 9/12RLS3 (H)) or CN500 (For 15RLS3 (H)) of Main PCB. Check if AC187V(AC208V-10%) - 253V(AC230V+10%) appears at CN 30 or CN500 of Main PCB. [Heating operation] >> <u>If it is not voltage, Replace Main PCB.</u> [Cooling operation] >> <u>If it is voltage, Replace Main PCB.</u>	<div style="border: 1px solid black; padding: 5px; width: 40px; margin: 0 auto;"> AC  </div>
--	---




Check Point 5 : Replace Controller PCB ▶ <u>If Check Point 1- 4 do not improve the symptom, replace Controller PCB.</u>
--

Trouble shooting 21 OUTDOOR UNIT Error Method: Discharge Temperature Error	Indicate or Display: Outdoor Unit : No indication Indoor Unit : Operation lamp: 10 time Flash, Timer lamp: 1 time Flash Economy lamp: Continuous flash. ERROR CODE : [E : A1]
---	--

Detective Actuators: Outdoor unit Main PCB Discharge temperature thermistor	Detective details: <ul style="list-style-type: none"> "Protection stop by "discharge temperature $\geq 230^{\circ}\text{F}(110^{\circ}\text{C})$ during compressor operation"" generated 2 times within 24 hours.
--	---

Forecast of Cause : <ol style="list-style-type: none"> 3-way valve not opened EEV defective, strainer clogged Outdoor unit operation failure, foreign matter on heat exchanger Discharge temperature thermistor failure Insufficient refrigerant Main PCB failure
--

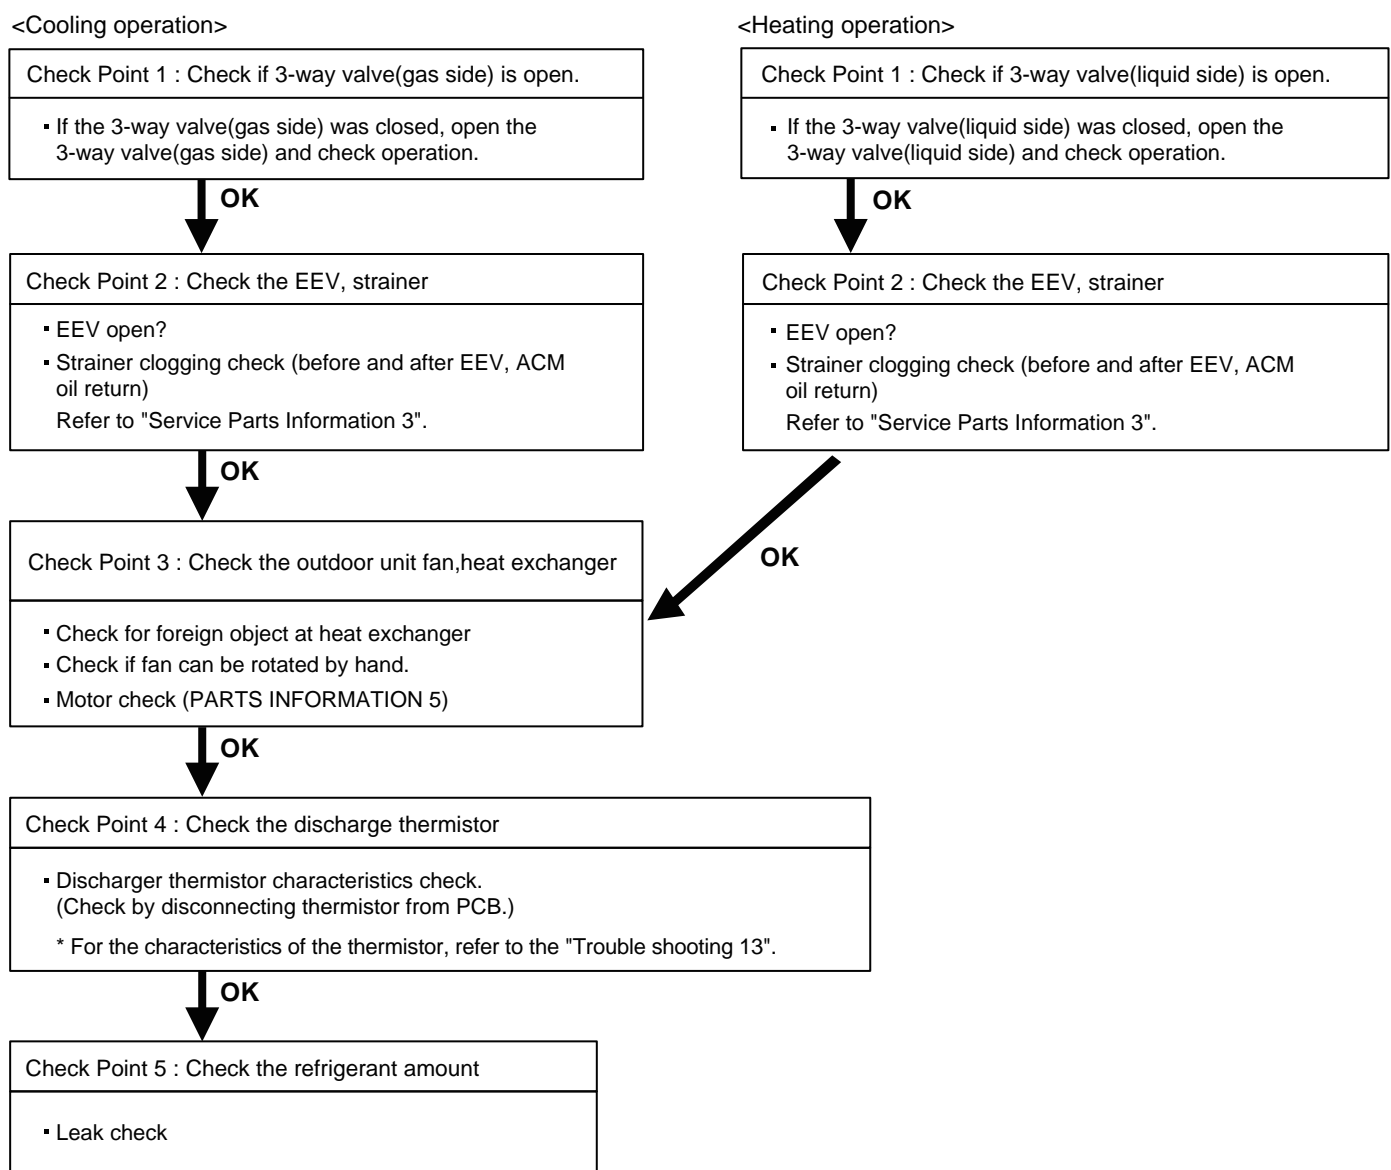

2-3 TROUBLE SHOOTING WITH NO ERROR CODE

Trouble shooting 22

Indoor Unit - No Power

Forecast of Cause:

1. Power supply failure
2. External cause
3. Electrical components defective

Check Point 1 : Check Installation Condition

- Isn't the breaker down?
- Check loose or removed connection cable.
- >> **If abnormal condition is found, correct it by referring to Installation Manual or Data & Technical Manual.**

↓
OK

Check Point 2 : Check external cause at Indoor and Outdoor (Voltage drop or Noise)

- Instant drop ----- Check if there is a large load electric apparatus in the same circuit.
- Momentary power failure ----- Check if there is a defective contact or leak current in the power supply circuit.
- Noise ----- Check if there is any equipment causing harmonic wave near electric line. (Neon bulb or electric equipment that may cause harmonic wave)
Check the complete insulation of grounding.

↓
OK

Check Point 3 : Check Electrical Components



- Check the voltage of power supply.
- >> **Check if AC187 - 253V appears at Outdoor Unit Terminal L - N.**

↓
YES

- Check Fuse in Main PCB.
>> **If Fuse is open, check if the wiring between Terminal and Main PCB is loose, and replace Fuse.**
- Check Varistor in Main PCB.
>> **If Varistor is defective, there is a possibility of an abnormal power supply. Check the correct power supply and replace Varistor. Upon checking the normal power supply, replace Varistor.**

Trouble shooting 23

Outdoor Unit - No Power

Forecast of Cause:

1. Power supply failure
2. External cause
3. Electrical Components defective

Check Point 1 : Check Installation Condition

- Isn't the breaker down?
- Check loose or removed connection cable.
- >>If abnormal condition is found, correct it by referring to Installation Manual or Data & Technical Manual.**

↓
OK

Check Point 2 : Check external cause at Indoor and Outdoor (Voltage drop or Noise)

- Instant drop ----- Check if there is a large load electric apparatus in the same circuit.
- Momentary power failure ----- Check if there is a defective contact or leak current in the power supply circuit.
- Noise ----- Check if there is any equipment causing harmonic wave near electric line.
(Neon bulb or electric equipment that may cause harmonic wave)
Check the complete insulation of grounding.

↓
OK

Check Point 3 : Check Electrical Components



- Check the voltage of power supply.
- >> Check if AC187 - 253V appears at Outdoor Unit Terminal L - N.**

↓
YES

- Check Fuse in Main PCB.
- >> If Fuse is open, check if the wiring between Terminal and Main PCB is loose, and replace Fuse.**
- Check Varistor in Main PCB.
- >> If Varistor is defective, there is a possibility of an abnormal power supply. Check the correct power supply and replace Varistor. Upon checking the normal power supply, replace Varistor.**

↓
OK

▶ **If the symptom does not change by above Check 3, replace Main PCB.**

Trouble shooting 24

No Operation (Power is ON)

Forecast of Cause:

1. Setting/ Connection failure
2. External cause
3. Electrical component defective

Check Point 1 : Check indoor and outdoor installation condition

- Indoor Unit - Check incorrect wiring between Indoor Unit - Remote Control.
Or, check if there is an open cable connection.
- Are these Indoor Unit, Outdoor Unit, and Remote Control suitable model numbers to connect?
>> If there is some abnormal condition, correct it by referring to Installation manual and Data & Technical Manual.

OK

Turn off Power and check/ correct followings.

- Is there loose or removed communication line of Indoor Unit and Outdoor Unit?

OK


Check Point 2 : Check external cause at Indoor and Outdoor (Voltage drop or Noise)

- Instant drop ----- Check if there is a large load electric apparatus in the same circuit.
- Momentary power failure ----- Check if there is a defective contact or leak current in the power supply circuit.
- Noise ----- Check if there is any equipment causing harmonic wave near electric line.
(Neon bulb or electric equipment that may cause harmonic wave)
Check the complete insulation of grounding.

OK

Check Point 3 : Check Electrical Components at Indoor and Outdoor

- Check Voltage at CN2 (terminal 1-3) of UTY-TWBXF1(Communication kit).
(Power supply to Remote Control)
 - >> If it is DC 5V, Remote Control is failure. (Controller PCB is normal) >> Replace Remote Control**
 - >> If it is DC 0V, Controller PCB is failure. (Check Remote Control once again)**
 - >> Check Indoor unit fan motor. (PARTS INFORMATION 4)**
 - If it is normal, replace Controller PCB.
 - If it is abnormal, replace Indoor unit fan motor and Controller PCB.
 - >> If the symptom does not change by above Check 1, 2, 3, replace Main PCB of Outdoor unit.**

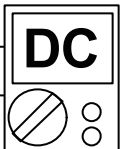

Trouble shooting 25

No Cooling / No Heating

Forecast of Cause:

1. Indoor Unit error
2. Outdoor Unit error
3. Effect by surrounding environment
4. Connection pipe / Connection wire failure
5. Refrigeration cycle failure

Check Point 1 : Check Indoor unit

- Does Indoor unit Fan run on High fan?
- Is Air filter dirty?
- Is Heat exchanger clogged?
- Check if Energy save function is operated.

↓ OK

Check Point 2 : Check Outdoor unit operation

- Check if Outdoor unit is operating
- Check any objects that obstruct the air flow route.
- Check clogged Heat Exchanger.
- Is the Valve open?

↓ OK

Check Point 3 : Check Site condition

- Is capacity of Indoor unit fitted to room size?
- Any windows open? or direct sunlight ?

↓ OK


Check Point 4 : Check Indoor / Outdoor installation condition

- Check connection pipe (specified pipe length & Pipe diameter?)
- Check any loose or removed communication line.
- >> **If there is an abnormal condition, correct it by referring to Installation Manual or Data & Technical Manual.**

↓ OK



Check Point 5 : Check Refrigeration cycle

- Check if Strainer is clogged (Refer to the figure at right).
- Measure Gas Pressure and if there is a leakage, correct it.
- >> **When recharging the refrigerant, make sure to perform vacuuming, and recharge the specified amount.**
- Check EEV (PARTS INFORMATION 3)
- Check Compressor (PARTS INFORMATION 1,2)
- Check Heater Unit (PARTS INFORMATION 8)



Attention

Strainer normally does not have temperature difference between inlet and outlet as shown in ①, but if there is a difference like shown in ②, there is a possibility of inside clogged. In this case, replace Strainer.

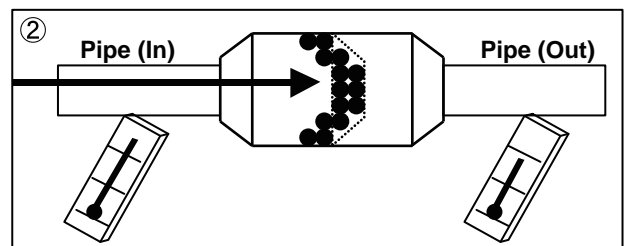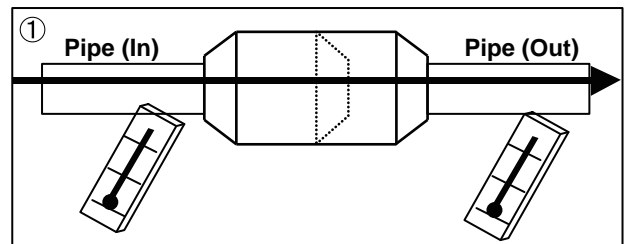

Trouble shooting 26

Abnormal Noise

Forecast of Cause :

1. Abnormal installation (Indoor/ Outdoor)
2. Fan failure (Indoor/ Outdoor)
3. Compressor failure (Outdoor)

Diagnosis method when abnormal noise is occurred

- Abnormal noise is coming from Indoor unit.
(Check and correct followings)

- Is Main unit installed in stable condition?
- Is the installation of air suction grille and front panel normal?

OK

- Is Fan broken or deformed?
- Is the screw of Fan loose?
- Is there any object which obstruct the Fan rotation?

- Abnormal noise is coming from Outdoor unit.
(Check and correct followings)

- Is Main unit installed in stable condition?
- Is Fan guard installed normally?

OK

- Is Fan broken or deformed?
- Is the screw of Fan loose?
- Is there any object which obstruct the Fan rotation?

OK

- Check if vibration noise by loose bolt or contact noise of piping is happening.

OK

- Is Compressor locked?
>> Check Compressor (PARTS INFORMATION 1,2)

Trouble shooting 27

Water Leaking

Forecast of Cause:

1. Erroneous installation
2. Drain hose failure

Diagnosis method when water leak occurs

- Is Main unit installed in stable condition?
- Is Main unit broken or deformed at the time of transportation or maintenance?

OK

- Is Drain hose connection loose?
- Is there a trap in Drain hose?
- Is Drain hose clogged?

OK


- Is Fan rotating?

Diagnosis method when water is spitting out.

- Is the filter clogged?

OK

- Check Gas pressure and correct it if there was a gas leak.

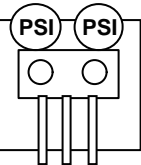

Trouble shooting 28

Too Warm

Forecast of Cause :

1. House insulation setting has not been changed.
2. Temperature sensing location has not been changed.
3. Installation location of the wired remote.
4. Function settings have not been changed.

Check Point 1 : Check insulation level of structure of house

Is insulation level greater than R-13.

YES

Check Point 1-1 : Check Function Setting

If insulation level is greater than R-13 set function 95 to 01. (Ref.)

Function Number	Setting Value	Setting Description
95	00	Standard insulation
	01	High insulation

※ Please reference the APPENDING DATA

OK

Check Point 1-2 : Check effects of Function Setting change

Is the space still too warm in relation to set point.

Too warm

NO

Check Point 2 : Verify room temperature sensing location

Do you want room temperature sensed at the wired remote controller (Wired remote sensor) or by they build in sensor inside the unit (Indoor unit sensor).


“Wired remote sensor”

TO NEXT PAGE

“Indoor unit sensor”

Check Point 3 : Check the remote controller display


Is the "Thermo Sensor Icon" displayed on the screen?

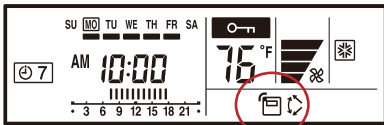

YES

Check Point 3-1 : Check the remote controller

Hold down the THERMO SENSOR button until the thermo sensor icon is turned off.

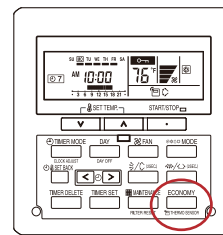

Too warm

NO

Check Point 4 : Check Function Settings

Using the table on the right adjust function 31. (Room Temperature Control for indoor unit sensor)


※ Please reference the APPENDING DATA

Ref.)

Function Number	Setting Value	Setting Description
31 (For heating)	00	Standard setting
	01	No correction 0.0°F (0.0°C)
	02	-1°F (-0.5°C)
	03	-2°F (-1.0°C)
	04	-3°F (-1.5°C)
	05	-4°F (-2.0°C)
	06	-5°F (-2.5°C)
	07	-6°F (-3.0°C)
	08	-7°F (-3.5°C)
	09	-8°F (-4.0°C)

Less Heating

“Wired remote sensor”

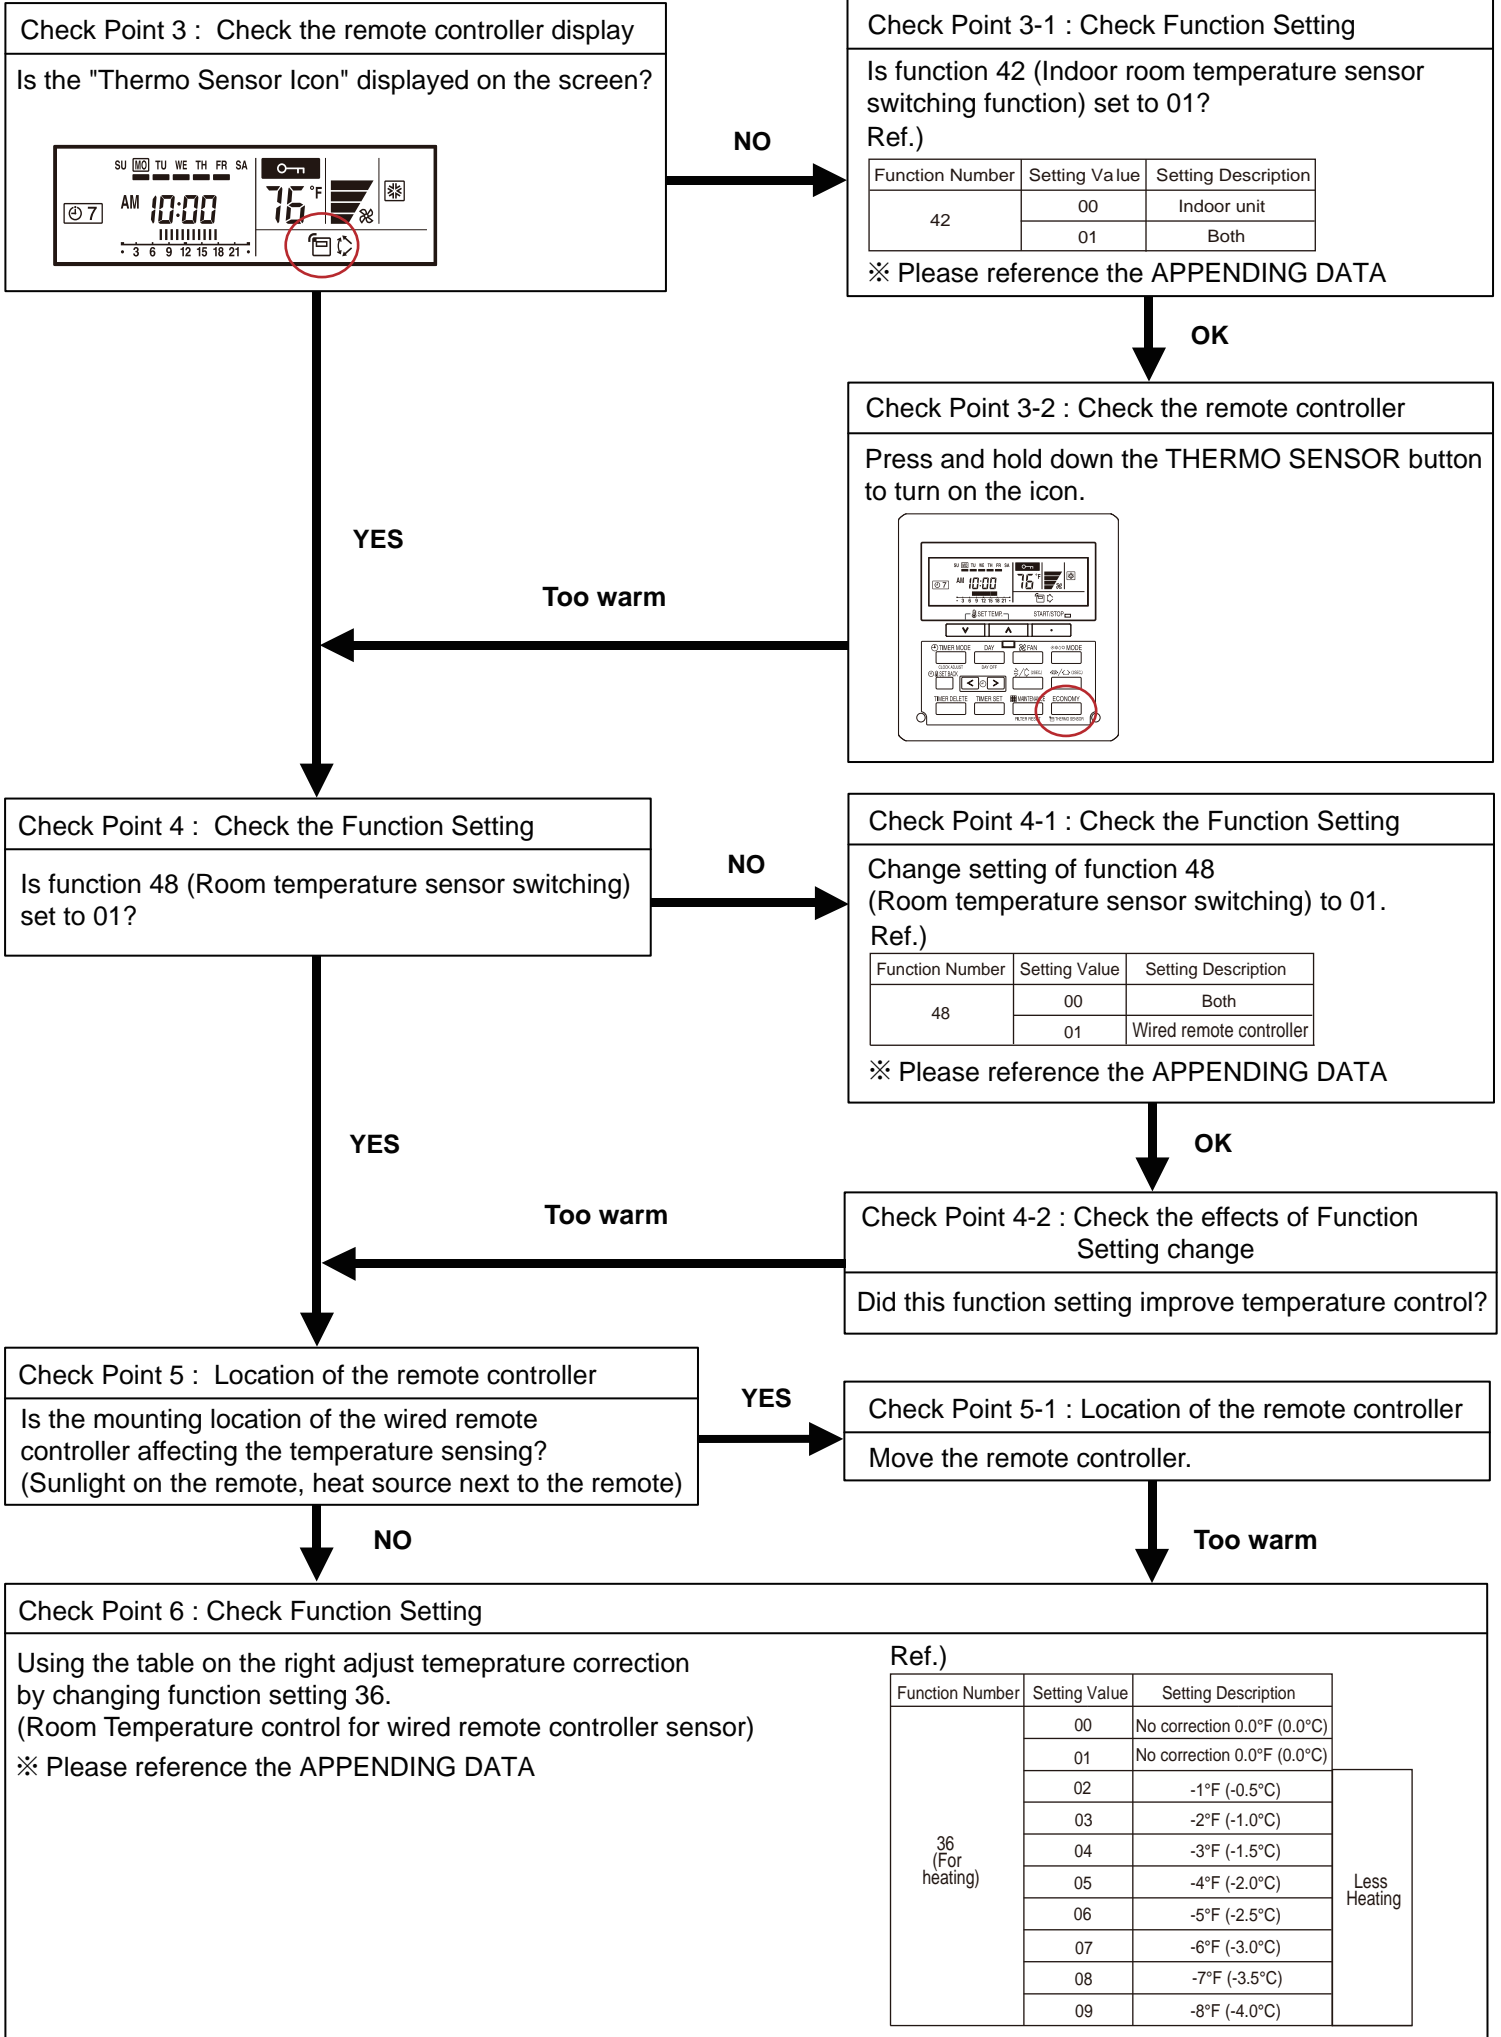

Trouble shooting 29

Too Cool

Forecast of Cause :

1. House insulation setting has not been changed.
2. Temperature sensing location has not been changed.
3. Installation location of the wired remote.
4. Function settings have not been changed.

Check Point 1 : Check insulation level of structure of house

Is insulation level greater than R-13.

YES

Check Point 1-1 : Check Function Setting

If insulation level is greater than R-13 set function 95 to 01. (Ref.)

Function Number	Setting Value	Setting Description
95	00	Standard insulation
	01	High insulation

※ Please reference the APPENDING DATA

OK

Check Point 1-2 : Check effects of Function Setting change

Is the space still too cool in relation to set point.

NO

Too cool

Check Point 2 : Verify room temperature sensing location

Do you want room temperature sensed at the wired remote controller (Wired remote sensor) or by they build in sensor inside the unit (Indoor unit sensor).


“Wired remote sensor”

TO NEXT PAGE

“Indoor unit sensor”

Check Point 3 : Check the remote controller display


Is the "Thermo Sensor Icon" displayed on the screen?

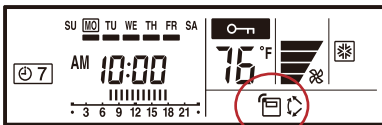

YES

Check Point 3-1 : Check the remote controller

Hold down the THERMO SENSOR button until the thermo sensor icon is turned off.

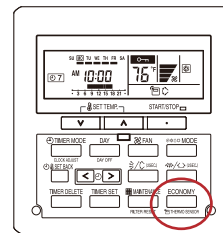

Too cool

NO

Check Point 4 : Check Function Settings

Using the table on the right adjust function 30. (Room Temperature Control for indoor unit sensor)


※ Please reference the APPENDING DATA

Ref.)

Function Number	Setting Value	Setting Description
30 (For cooling)	00	Standard setting
	01	No correction 0.0°F (0.0°C)
	10	+1°F (+0.5°C)
	11	+2°F (+1.0°C)
	12	+3°F (+1.5°C)
	13	+4°F (+2.0°C)
	14	+5°F (+2.5°C)
	15	+6°F (+3.0°C)
	16	+7°F (+3.5°C)
	17	+8°F (+4.0°C)


Less Cooling

“Wired remote sensor”

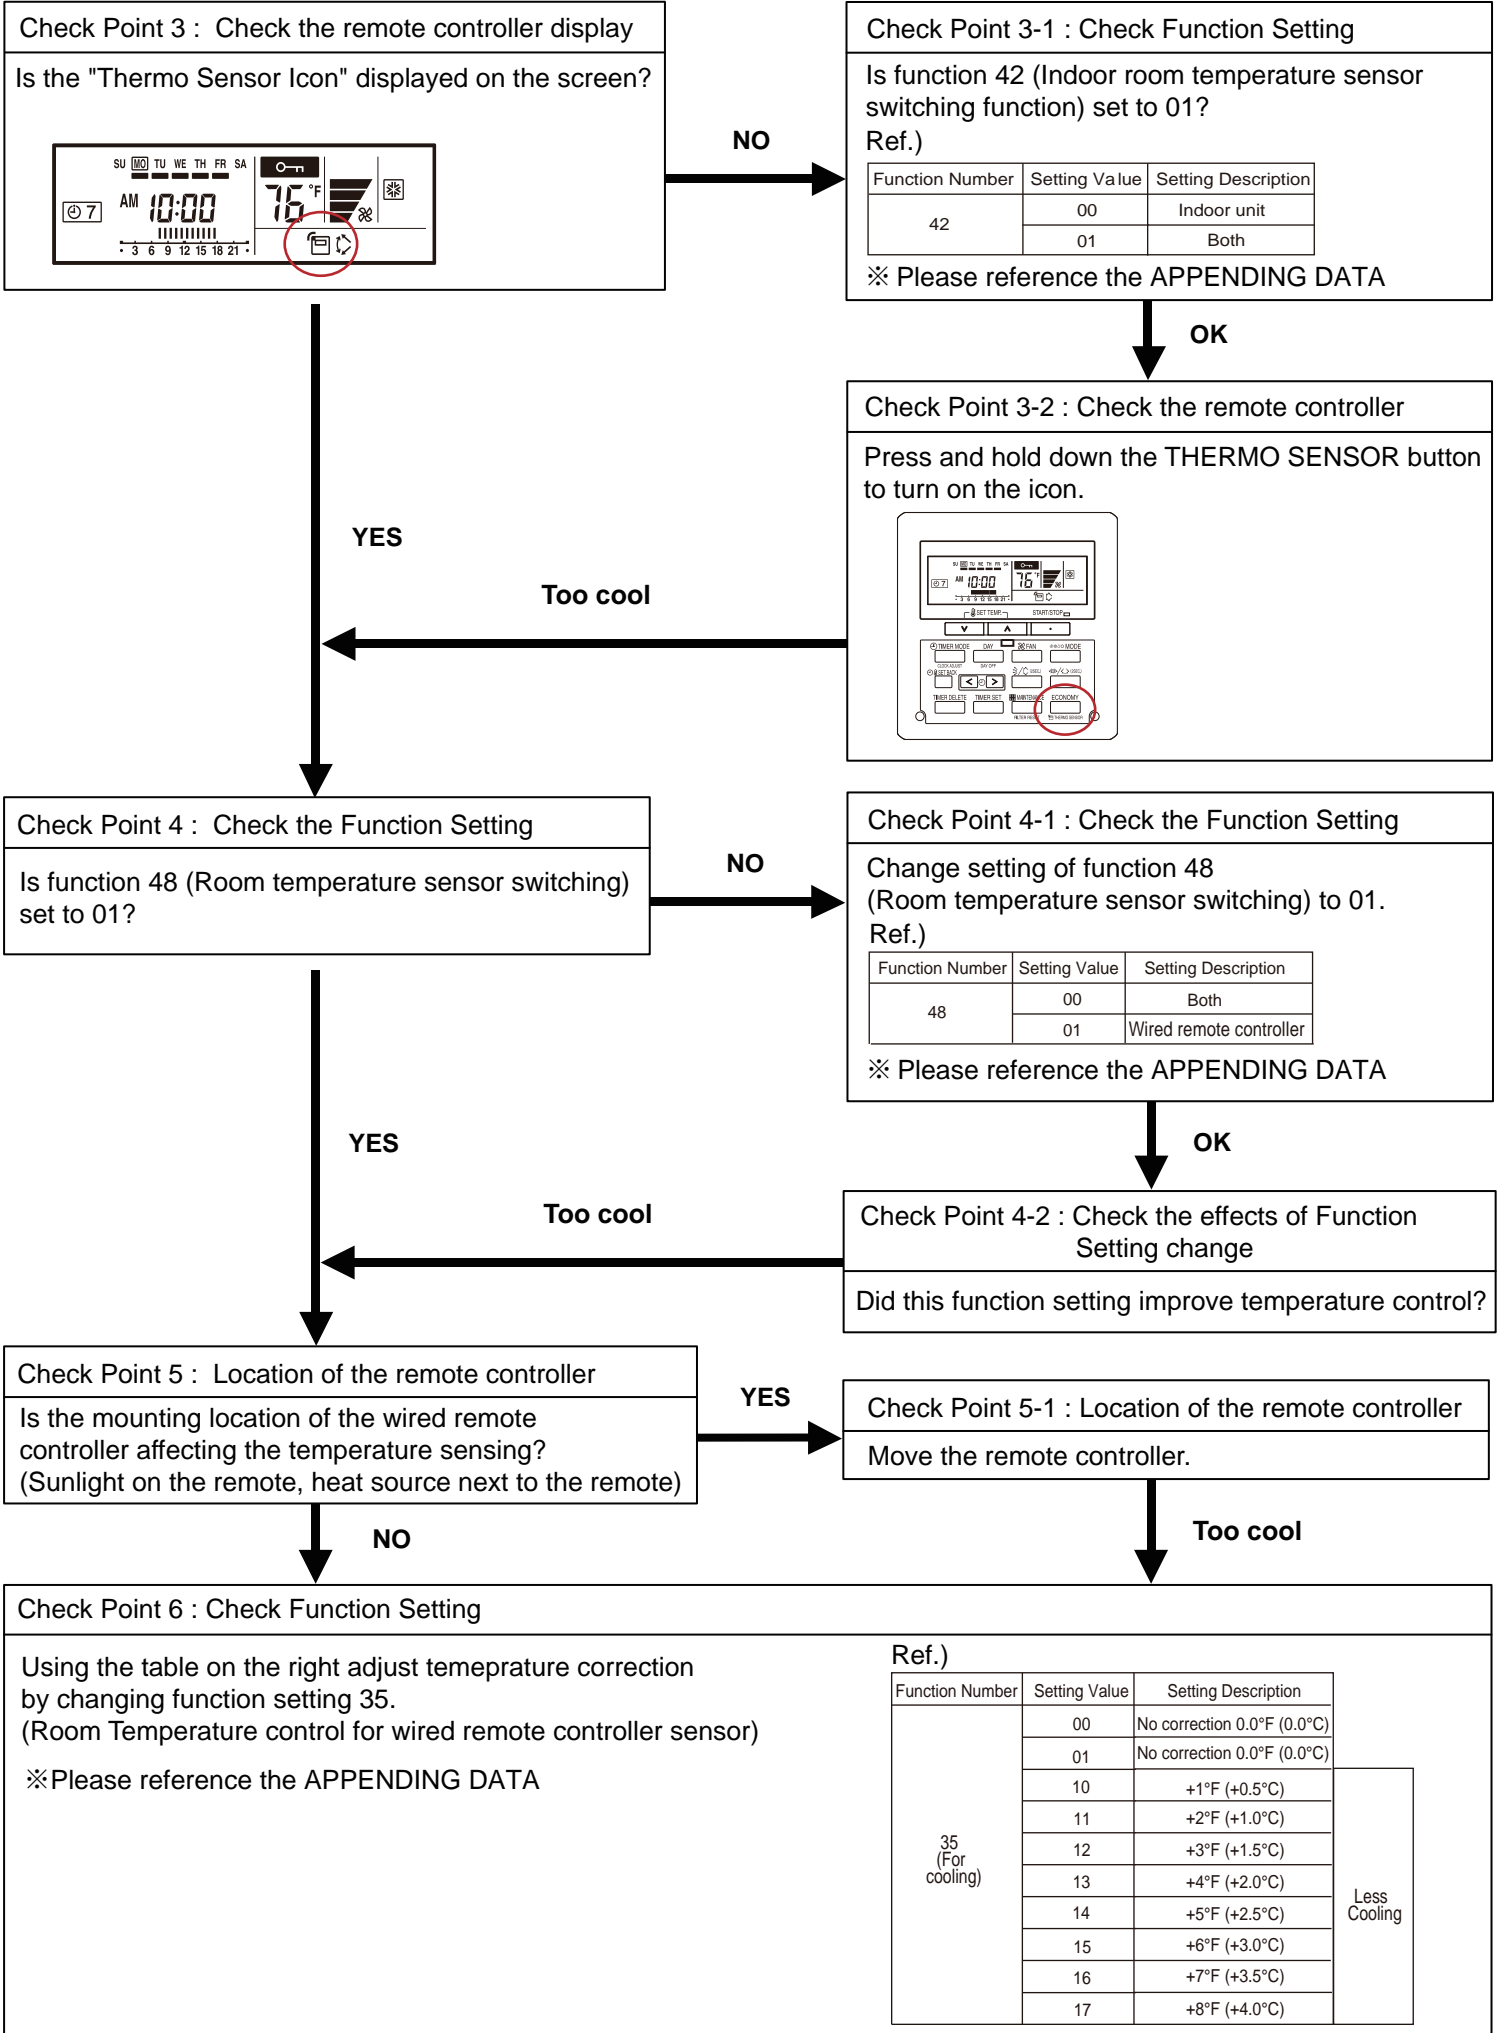

2-4 TROUBLE SHOOTING WITH ERROR CODE (For WIRELESS LAN ADAPTER)

<p>Trouble shooting 30 INDOOR UNIT Error Method: External Communication Error (Communication Error of between Indoor Unit to Wireless LAN adapter)</p>	<p>Indicate of Display:</p> <table border="0"> <tr> <td style="vertical-align: top;"> <p>Indoor Unit : Operation lamp : 1 times Flash, Timer lamp : 8 times Flash ERROR CODE : [18]</p> </td> <td style="vertical-align: top; border-left: 1px dashed black;"> <p>Wireless LAN adapter : LED 1 (Green) : Flashing Fast LED 2 (Orange) : ON</p> </td> </tr> </table>	<p>Indoor Unit : Operation lamp : 1 times Flash, Timer lamp : 8 times Flash ERROR CODE : [18]</p>	<p>Wireless LAN adapter : LED 1 (Green) : Flashing Fast LED 2 (Orange) : ON</p>
<p>Indoor Unit : Operation lamp : 1 times Flash, Timer lamp : 8 times Flash ERROR CODE : [18]</p>	<p>Wireless LAN adapter : LED 1 (Green) : Flashing Fast LED 2 (Orange) : ON</p>		
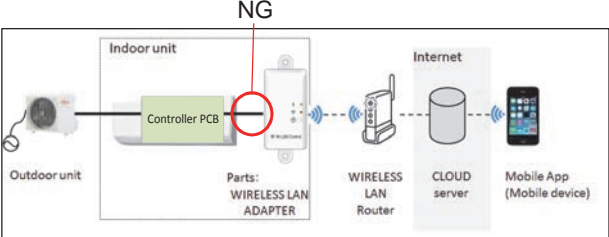
<p>Detective Actuators: Wireless LAN adapter PCB Controller PCB</p>	<p>Detective details: After receiving a signal from the wireless LAN adapter, the same a signal has not been received for 15sec.</p> <div style="text-align: center;">  </div>
--	--

<p>Forecast of Cause:</p> <ol style="list-style-type: none"> 1. Connection between A/C and Wireless LAN adapter failure 2. Wireless LAN adapter PCB failure 3. Controller PCB failure

<p>Check Point 1 : Cheak the connection</p> <ul style="list-style-type: none"> • Check any loose or removed connection of between the Wireless LAN adapter PCB and Controller PCB >If there is abnormal condition, correct it. <p>Check the connection condition on the Controller PCB >If there is loose connector, open cable or miswiring, correct it.</p>




<p>Check Point 2 : Replace wireless LAN adapter</p> <ul style="list-style-type: none"> ▶ If Check Point 1 do not improve the symptom, replace Wireless LAN adapter and <u>Please cancel the air conditioner of the registration on the Mobile App.</u> <u>After the replace adapter, Please perform the pairing on the app.</u> <p>>>Air conditioning unregistration method, refer to page "02 - 46" >>Pairing method, refer to page "02 - 47"</p>
--



<p>Check Point 3 : Replace Controller PCB</p> <ul style="list-style-type: none"> ▶ <u>If Check Point 2 do not improve the symptom, replace controller PCB.</u>
--

<p>Trouble shooting 31 <u>INDOOR UNIT Error Method:</u> Wireless LAN adapter Error</p>	<p><u>Indicate of Display:</u></p> <table border="0"> <tr> <td style="vertical-align: top;"> <p>Indoor Unit :</p> <p>Operation lamp: No indication</p> <p>Timer lamp : No indication</p> <p>ERROR CODE : [No indication]</p> </td> <td style="vertical-align: top; border-left: 1px dashed black;"> <p>Wireless LAN adapter :</p> <p>LED 1 (Green) : Flashing Fast</p> <p>LED 2 (Orange) : Flashing Fast</p> </td> </tr> </table>	<p>Indoor Unit :</p> <p>Operation lamp: No indication</p> <p>Timer lamp : No indication</p> <p>ERROR CODE : [No indication]</p>	<p>Wireless LAN adapter :</p> <p>LED 1 (Green) : Flashing Fast</p> <p>LED 2 (Orange) : Flashing Fast</p>
<p>Indoor Unit :</p> <p>Operation lamp: No indication</p> <p>Timer lamp : No indication</p> <p>ERROR CODE : [No indication]</p>	<p>Wireless LAN adapter :</p> <p>LED 1 (Green) : Flashing Fast</p> <p>LED 2 (Orange) : Flashing Fast</p>		

<p><u>Detective Actuators:</u></p> <p>Wireless LAN adapter setting button Wireless LAN adapter PCB</p>	<p><u>Detective details:</u></p> <p>When the Setting button becomes ON for consecutive 60 or more seconds.</p> <div style="text-align: right;">  </div>
--	---


<p><u>Forecast of Cause:</u></p> <ol style="list-style-type: none"> 1. Wireless LAN adapter setting button failure 2. Wireless LAN adapter PCB failure

<p>Check Point 1 : Check the setting button</p> <ul style="list-style-type: none"> • Check if Setting button is kept pressed. <ul style="list-style-type: none"> > If the Settings button is held down by the foreign matter, <u>Please remove the foreign matter or remove the cause of the button press.</u>
--



<p>Check Point 2 : Replace wireless LAN adapter</p> <ul style="list-style-type: none"> ▶ If Check Point 1 do not improve the symptom, replace Wireless LAN adapter and <u>Please cancel the air conditioner of the registration on the Mobile App.</u> <u>After the replace adapter, Please perform the pairing on the app.</u> <p>>>Air conditioning unregistration method, refer to page “02 - 46” >>Pairing method, refer to page “02 - 47”</p>
--


<p>Trouble shooting 32 INDOOR UNIT Error Method: Network Communication Error (Communication Error of between Wireless LAN Router to Wireless LAN adapter)</p>	<p>Indicate of Display:</p> <table border="0"> <tr> <td style="vertical-align: top;"> <p>Indoor Unit : Operation lamp: No indication Timer lamp : No indication ERROR CODE : [No indication]</p> </td> <td style="vertical-align: top;"> <p>Wireless LAN adapter : LED 1 (Green) : ON LED 2 (Orange) : Flashing Fast</p> </td> </tr> </table>	<p>Indoor Unit : Operation lamp: No indication Timer lamp : No indication ERROR CODE : [No indication]</p>	<p>Wireless LAN adapter : LED 1 (Green) : ON LED 2 (Orange) : Flashing Fast</p>
<p>Indoor Unit : Operation lamp: No indication Timer lamp : No indication ERROR CODE : [No indication]</p>	<p>Wireless LAN adapter : LED 1 (Green) : ON LED 2 (Orange) : Flashing Fast</p>		
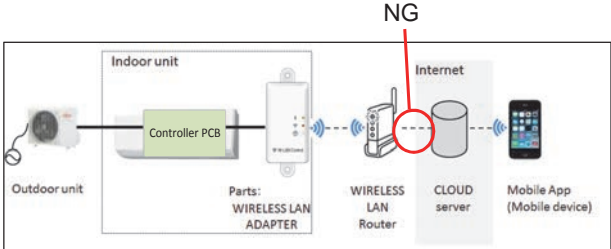
<p>Detective Actuators:</p> <p>Wireless LAN router Wireless LAN adapter PCB</p>	<p>Detective details:</p> <p>When the Not connection between Wireless LAN adapter and Wireless LAN router.</p> 
---	--

<p>Forecast of Cause:</p> <ol style="list-style-type: none"> 1. Connection cable failure of Wireless LAN ruter. 2. Connection between Wireless LAN adapter and Wireless LAN router failure 3. Wireless LAN router failure 4. Wireless LAN adapter PCB failure
--

<p>Check Point 1 : Check the connection cable</p> <ul style="list-style-type: none"> • Check the connection cable on the Wireless LAN ruter. >If there is loose connector, open cable or miswiring, correct it.

↓ **OK**

<p>Check Point 2-1 : Check the connection status</p> <ul style="list-style-type: none"> • Check the connection status to the Internet and Wireless LAN router. >If the Wireless LAN Router is not connected to the Internet, <u>Please check the transmission between</u> <u>"Wi-Fi products of other than Air conditioner" and "Wireless LAN ruter".</u> <div style="display: flex; align-items: center; justify-content: space-around;"> <div style="text-align: center;"> <p>Ex.) Wi-Fi products</p> <div style="border: 1px solid black; padding: 2px; display: inline-block;">PC</div> <div style="font-size: 2em; margin: 0 5px;">⊞</div> </div> <div style="text-align: center;">  <p>WIRELESS LAN Router</p> </div> </div> <div style="display: flex; align-items: center; justify-content: space-around; margin-top: 10px;"> <div style="text-align: center;"> <div style="border: 1px solid black; padding: 2px; display: inline-block;">GAME</div> <div style="font-size: 2em; margin: 0 5px;">⊞</div> </div> </div>

↓ **OK**

↓ **NO**


<p>Check Point 2-2 : Check the transmission state</p> <ul style="list-style-type: none"> • Check the Wireless transmission state of Wireless LAN router.(LED status) >If the wireless transmission from the Wireless LAN router has not been outgoing, <u>Please the inquiry to "Wireless LAN router maker".</u>

<p>Check Point 3 : Turn on power again of Air conditioner</p> <ul style="list-style-type: none"> ▶ If Check Point 1,2 do not improve the symptom, turn on power again of the Air conditioner, please wait 60 seconds.

↓ **OK**

<p>Check Point 4 : Replace Wireless LAN adapter</p> <ul style="list-style-type: none"> ▶ If Check Point 3 do not improve the symptom, replace Wireless LAN adapter and <u>Please cancel the air conditioner of the registration on the Mobile App.</u> <u>After the replace adapter, Please perform the pairing on the app.</u> <p>>>Air conditioning unregistration method, refer to page "02 - 46" >>Pairing method, refer to page "02 - 47"</p>


<p>Trouble shooting 33 INDOOR UNIT Error Method: Communication Error ("Trou. 30" and "Trou. 32" are simultaneous Error)</p>	<p>Indicate of Display: Indoor Unit : Operation lamp: 1 time Flash Timer lamp : 8 time Flash ERROR CODE : [18]</p> <p>Wireless LAN adapter : LED 1 (Green) : Flashing Fast LED 2 (Orange) : Flashing Fast</p>
--	---
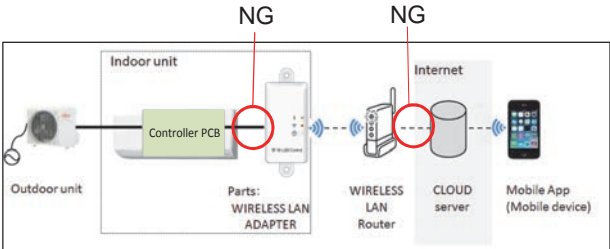
<p>Detective Actuators: Wireless LAN router Wireless LAN adapter PCB Indoor unit Controller PCB</p>	<p>Detective details: When the "External Communication Error" and "Network Communication Error" has occurred at the same time.</p> 
---	---

<p>Forecast of Cause:</p> <ol style="list-style-type: none"> 1. Connection cable failure of Wireless LAN ruter, 2. Wireless LAN router failure 3. Connection between A/C and Wireless LAN adapter failure 4. Connection between Wireless LAN adapter and Wireless LAN router failure 5. Wireless LAN adapter PCB failure, 6. Controller PCB failure
--

<p>Check Point 1 : Check the connection cable</p> <ul style="list-style-type: none"> • Check the connection cable on the Wireless LAN router. >If there is loose connector, open cable or miswiring, correct it.
--

OK
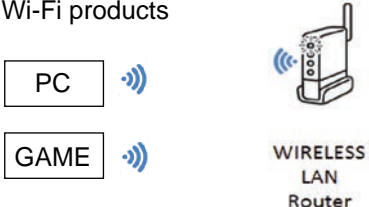
<p>Check Point 2 : Check the connection status and transmission state</p>	
<ul style="list-style-type: none"> • Check the connection status to the Internet and Wireless LAN router. >If the Wireless LAN Router is not connected to the Internet, <u>Please check the transmission between "Wi-Fi products of other than Air conditioner" and "Wireless LAN ruter".</u> > When there is no problem with Wi-Fi products >> <u>Refer to "Check Point 4".</u> 	<p>Ex.) Wi-Fi products</p> 
<ul style="list-style-type: none"> • Check the Wireless transmission state of Wireless LAN router.(LED status) >If the wireless transmission from the Wireless LAN Router has not been outgoing, <u>Please the inquiry to "Wireless LAN router maker".</u> <p>Did the display pattern will change?</p> <div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 0 auto;"> Wireless LAN adapter : LED 1 (Green) : Flashing Fast , LED 2 (Orange) :ON </div>	

YES

NO

<p>Check Point 3-1 : Turn on power again of Air conditioner</p> <ul style="list-style-type: none"> • If Check Point 1,2 do not improve the symptom, <u>turn on power again of the Air conditioner,please wait 60 seconds.</u> > When the flashing pattern of the LED 2(Orange) is "ON" >> <u>Refer to "Check Point 3-2".</u> > When the flashing pattern of the LED 2(Orange) is "Flashing Fast" >> <u>Refer to "Check Point 4".</u>

To NEXT PAGE

CONTINUATION

YES

Check Point 3-2 : Cheak the connection

- Check any loose or removed connection of between the Wireless LAN adapter PCB and Controller PCB
>If there is abnormal condition, correct it.
- Check the connection condition on the Controller PCB
>If there is loose connector, open cable or miswiring, correct it.

OK

Check Point 4 : Replace Wireless LAN adapter

- ▶ If Check Point 2,3 do not improve the symptom, replace Wireless LAN adapter and Please cancel the air conditioner of the registration on the Mobile App.
After the replace adapter, Please perform the pairing on the app.
>>Air conditioning unregistration method, refer to page "02 - 46"
>>Pairing method, refer to page "02 - 47"

OK


Check Point 5 : Replace Controller PCB

- ▶ If Check Point 4 do not improve the symptom, replace controller PCB.

Trouble shooting 34 <u>INDOOR UNIT Error Method:</u> Wireless LAN adapter Non-Energized	<u>Indicate of Display:</u> <table border="0"> <tr> <td style="vertical-align: top;"> Indoor Unit : Operation lamp: 1 time Flash Timer lamp : 8 time Flash ERROR CODE : [18] </td> <td style="vertical-align: top; border-left: 1px dashed black;"> Wireless LAN adapter : LED 1 (Green) : OFF LED 2 (Orange) : OFF </td> </tr> </table>	Indoor Unit : Operation lamp: 1 time Flash Timer lamp : 8 time Flash ERROR CODE : [18]	Wireless LAN adapter : LED 1 (Green) : OFF LED 2 (Orange) : OFF
Indoor Unit : Operation lamp: 1 time Flash Timer lamp : 8 time Flash ERROR CODE : [18]	Wireless LAN adapter : LED 1 (Green) : OFF LED 2 (Orange) : OFF		

<u>Detective Actuators:</u> Indoor unit Controller PCB Wireless LAN adapter PCB	<u>Detective details:</u> When the does not output the DC12 voltage from Controller PCB.
--	--

<u>Forecast of Cause:</u> <ol style="list-style-type: none"> 1. Indoor unit Controller PCB failure 2. Wireless LAN adapter PCB failure 3. Wiring connection failure
--

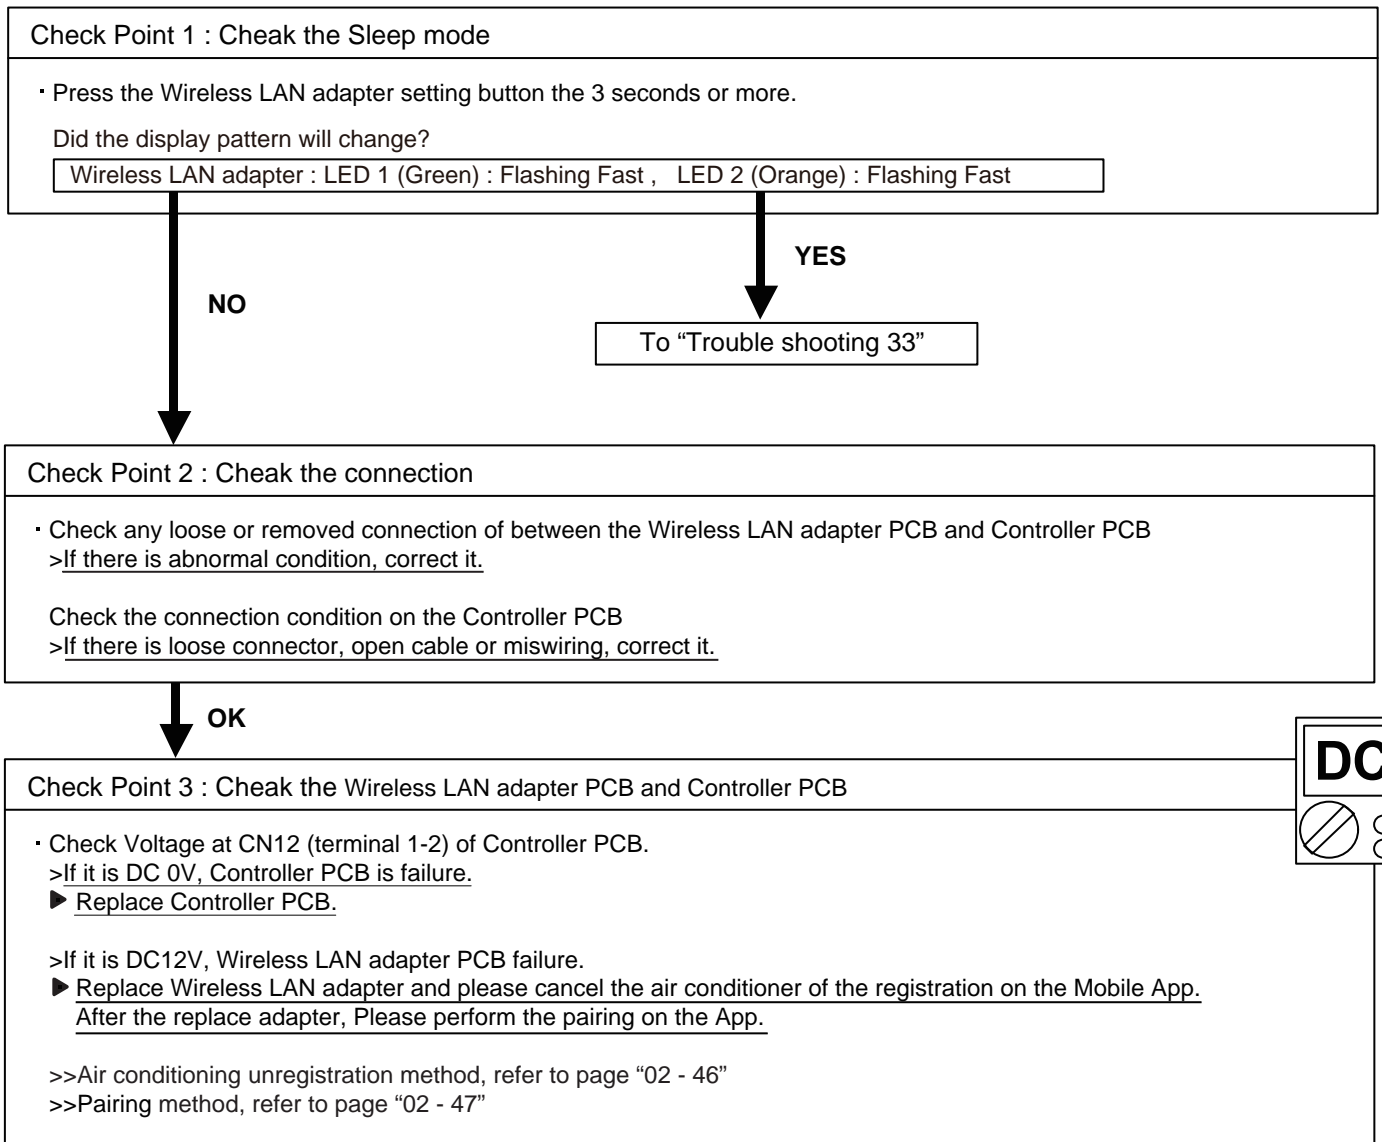


<p>Trouble shooting 35 <u>INDOOR UNIT Error Method:</u> Wireless LAN adapter Sleep mode</p>	<p><u>Indicate of Display:</u></p> <table border="0"> <tr> <td data-bbox="624 181 1018 302"> Indoor Unit : Operation lamp: No indication Timer lamp : No indication ERROR CODE : [No indication] </td> <td data-bbox="1034 181 1329 302"> Wireless LAN adapter : LED 1 (Green) : OFF LED 2 (Orange) : OFF </td> </tr> </table>	Indoor Unit : Operation lamp: No indication Timer lamp : No indication ERROR CODE : [No indication]	Wireless LAN adapter : LED 1 (Green) : OFF LED 2 (Orange) : OFF
Indoor Unit : Operation lamp: No indication Timer lamp : No indication ERROR CODE : [No indication]	Wireless LAN adapter : LED 1 (Green) : OFF LED 2 (Orange) : OFF		

<p><u>Detective Actuators:</u></p> <p>Sleep mode</p>	<p><u>Detective details:</u></p> <p>When the state in which fly a wireless(SSID) have passed 1 hour.</p>
---	---

<p><u>Forecast of Cause:</u></p> <p>1. Sleep mode</p>
--

<p>Check Point 1 : Cheak the sleep mode</p> <ul style="list-style-type: none"> • Press the Wireless LAN adapter setting button the 3 seconds or more. <p>Did the display pattern will change?</p> <p>Wireless LAN adapter : LED 1 (Green) : ON , LED 2 (Orange) : Flashing Fast</p>



To "Trouble shooting 32"

Air Conditioning Unregistration Method

If you replace the Wireless LAN adapter, it needs the unregster of air conditioner infomation on the App. Unregister method is as follows.


1 Launch the mobile app(FGL air).




2 Please long-push the registered "Dvice name" of Air Conditioner.



3 Then will display the "Unregister" button. Please tap the "Unregister" button.

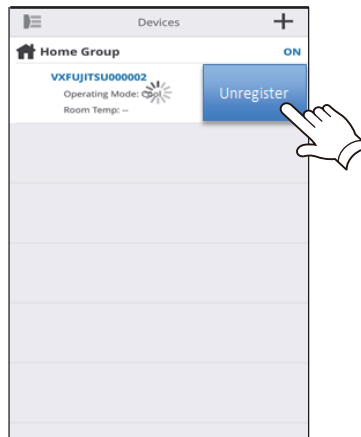

4 Please tap the "Yes" .

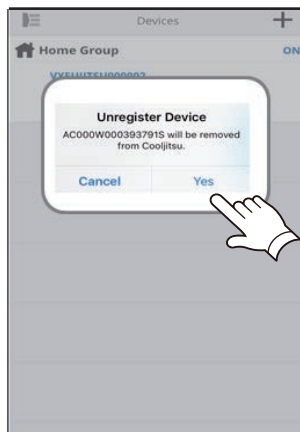

5 Air Conditiner Unregister is complete.

Air conditioner registration Pairing Method

Choose from the following modes to connect your Air conditioner to your Wireless LAN router.

Note:

- Before starting this setting, wait for **60 seconds** or more after the power supply is connected to the air conditioner (via breaker or plug).
- If both LED 1 and 2 are off, the WLAN adapter may be in Sleep mode. Be sure it is deactivated before setting up the wireless LAN. (Refer to "SETTING MANUAL")
- Check that the smartphone or tablet PC is linked to the wireless router you are connecting the air conditioner. The setting will not work if it is not connected to the same wireless router.
- The display screen design may differ depending on the version of the mobile app.
- To control 2 or more air conditioners with the same smartphone or tablet PC, repeat the setup of the chosen mode.

Button Mode

*Lighting pattern: ○ OFF ● ON ☼ Flashing


1 Launch the mobile app(FGL air).




2 Sign in with your Email address and password (as registered in "4.2. User registration") following the screen on the mobile app.



3 Press the [+] button to add a new air conditioner.

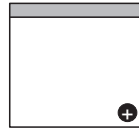

4 Confirm that LED 2 is flashing.(On/off at 2-second intervals.) Then select [Button mode] on the screen.
If LED 1 and 2 are off, push the Setting button once.
(Refer to "5. SLEEP MODE" SETTING MANUAL)

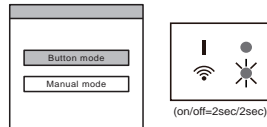


5 Press the WPS button on the wireless router that you are connecting to.


Refer to the operating manual of the wireless router for the location of the button and how to press it.



6 Confirm that LED 2 is flashing.(On/off at 2-second intervals.) Then press and hold the Setting button on the WLAN adapter for 3 seconds.





LED 2 lighting will change.
(on/off: 2sec/2sec → 2sec/0.5sec)

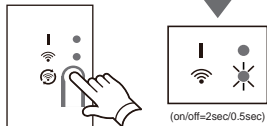


Confirm that the LED 1 and 2 is both on to proceed.



7 Press [Register] to start the connection with the wireless router.

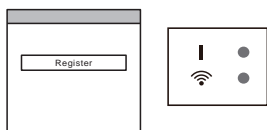

LED 1 and 2 will both flash 2 times, and a message will appear when setup is complete.

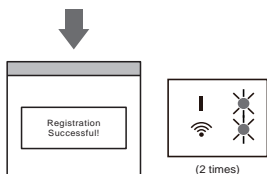


Manual mode

*Lighting pattern: ○ OFF ● ON ☼ Flashing

1~3 See steps 1 to 3 in "4.3.1. Button mode"


4 Select [Manual mode].

If LED 1 and 2 are off, push the Setting button once. (Refer to "5. SLEEP MODE".)

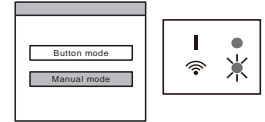


[For Android]


5 Select the SSID of the air conditioner you are connecting to.

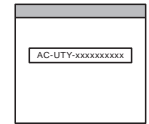

6 Select the SSID of the wireless router you are connecting to. Input the wireless router (WLAN access point) password then press [Connect device].

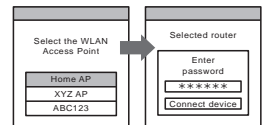


7 LED 1 and 2 will both flash 2 times, and a message will appear when setup is complete.

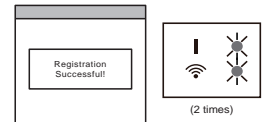


[For iOS]


5 Select [Open W-LAN setting] or activate the wireless LAN by pressing the Home button -> [Setting] -> [Wi-fi]. Select the SSID of the air conditioner you are connecting to.

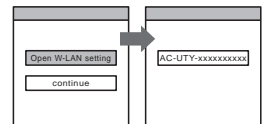


6 Select the SSID of the wireless router you are connecting to. Input the wireless router (WLAN Access Point) password then press [Connect device].

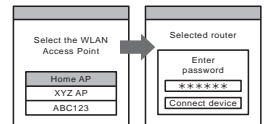


7 When [Connection complete] is displayed, press [Done]. After returning to the [Wi-fi] screen, wait a few seconds until the connected device changes from the A/C to the wireless router.

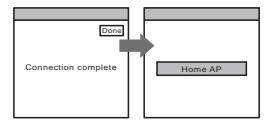

8 Press [Return] to mobile app. or close the screen and reactivate the mobile app. When the following screen appears, select [continue].

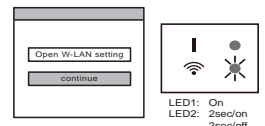

LED 1 and 2 will both flash 2 times, and a message will appear when setup is complete.

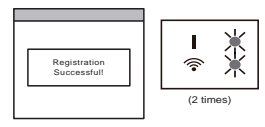


2-5 SERVICE PARTS INFORMATION

SERVICE PARTS INFORMATION 1

Compressor

Diagnosis method of Compressor (If Outdoor Unit LED displays Error, refer to Trouble shooting)

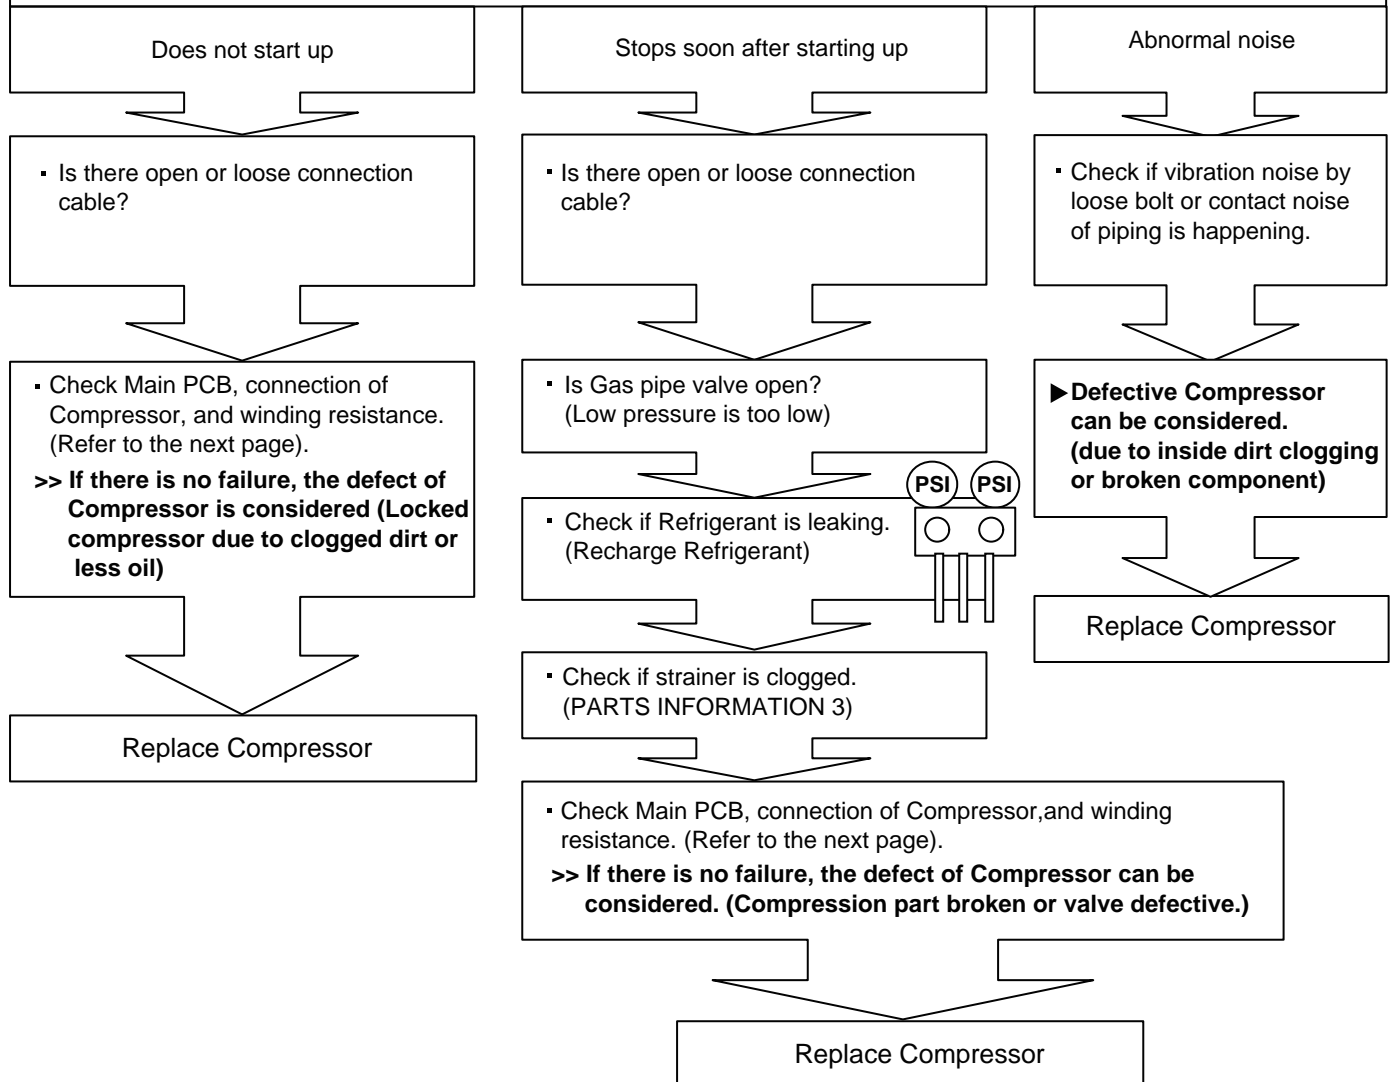


SERVICE PARTS INFORMATION 2

Compressor

Check Point 1 : Check Connection



- Check terminal connection of Compressor (loose or incorrect wiring)

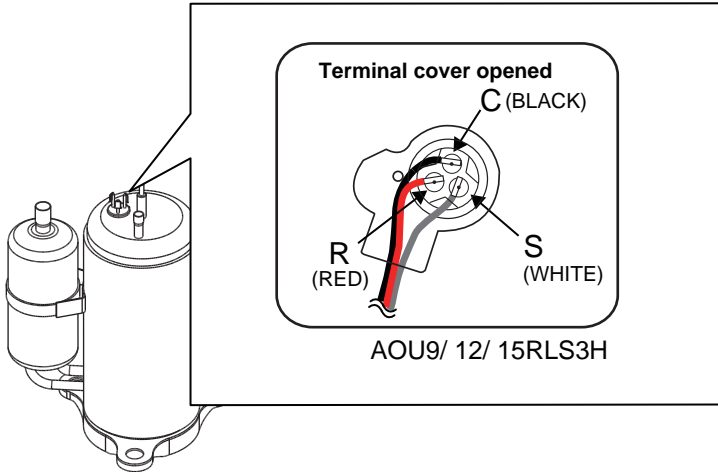

Check Point 2 : Check Winding Resistance

- Check winding resistance of each terminal

► **If the resistance value is 0Ω or infinite, replace Compressor.**

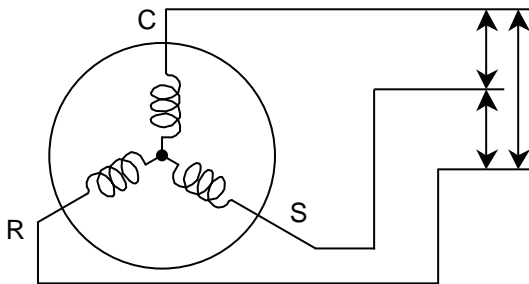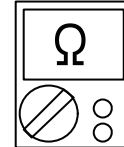

- **AOU9 / 12RLS3H**
Resistance Value :
1.4Ω at 77°F(25°C)
- **AOU15RLS3H**
Resistance Value :
0.7Ω at 77°F(25°C)

Check Point 3 : Replace Main PCB


► **If the symptom does not change with above Check 1, 2, replace Main PCB.**

SERVICE PARTS INFORMATION 3

Outdoor unit Electronic Expansion Valve (EEV)

Check Point 1 : Check Connections

- Check connection of connector (CN40 or CN700) (Loose connector or open cable)

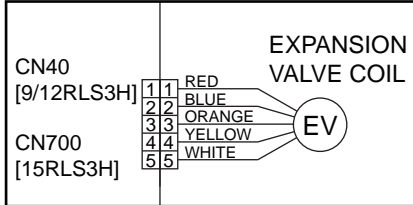

Check Point 2 : Check Coil of EEV

- Remove connector, check each winding resistance of Coil.

Read wire	Resistance value
White - Red	$46 \Omega \pm 4 \Omega$ at 68°F(20°C)
Yellow - Red	
Orange - Red	
Blue - Red	

► **If Resistance value is abnormal, replace EEV.**

Check Point 3 : Check Voltage from Main PCB.

- Remove Connector and check Voltage (DC12V)

► **If it does not appear, replace Main PCB.**



Check Point 4 : Check Noise at start up

- Turn on Power and check operation noise.


► **If an abnormal noise does not show, replace Main PCB.**

Check Point 5 : Check Opening and Closing Operation of Valve

When Valve is closed, it has a temp. difference between Inlet and Outlet.

CLOSE
Example : Hot Gas


Pipe (In)
Hi TEMP.

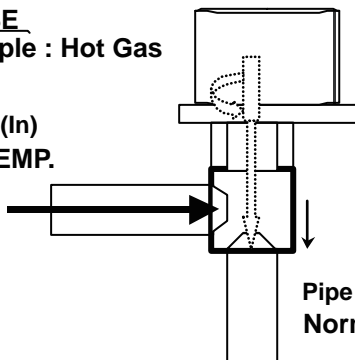

If it is open, it has no temp. difference between Inlet and Outlet.



OPEN
Example : Hot Gas

Pipe (In)
Hi TEMP.

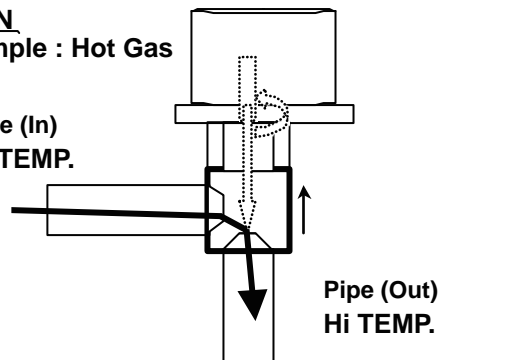

Check Point 6 : Check Strainer

Strainer normally does not have temperature difference between inlet and outlet as shown in ①, but if there is a difference as shown in ②, there is a possibility of inside clogged. In this case, replace Strainer.

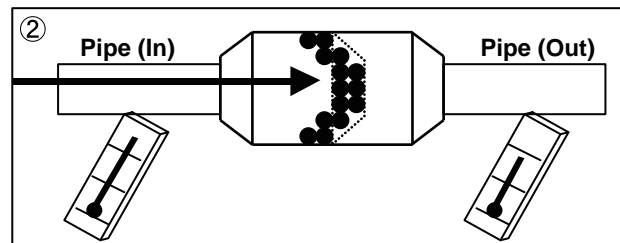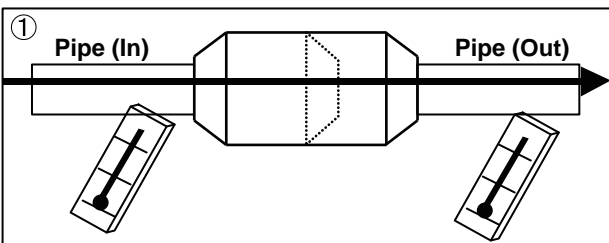

SERVICE PARTS INFORMATION 4

Indoor unit fan motor

Check Point 1 : Check rotation of Fan

- Rotate the fan by hand when operation is off.
(Check if fan is caught, dropped off or locked motor)
- >>If Fan or Bearing is abnormal, replace it.**

Check Point 2 : Check resistance of Indoor Fan Motor

- Refer to below. Circuit-test "Vm" and "GND" terminal.
(Vm: DC voltage, GND: Earth terminal)
- >>If they are short-circuited (below 300 k Ω), replace Indoor fan motor and Controller PCB.**

Pin number (wire color)	Terminal function (symbol)
1 (Blue)	Feed back (FG)
2 (Yellow)	Speed command (Vsp)
3 (White)	Control voltage (Vcc)
4 (Black)	Earth terminal (GND)
5	No function
6 (Red)	DC voltage (Vm)

SERVICE PARTS INFORMATION 5

Outdoor unit fan motor

Check Point 1 : Check rotation of Fan

- Rotate the fan by hand when operation is off.
(Check if fan is caught, dropped off or locked motor)
- >>If Fan or Bearing is abnormal, replace it.**

Check Point 2 : Check resistance of Outdoor Fan Motor

- Refer to below. Circuit-test "Vm" and "GND" terminal.
(Vm: DC voltage, GND: Earth terminal)
- >>If they are short-circuited (below 300 k Ω), replace Outdoor fan motor and Main PCB.**


Pin number (wire color)	Terminal function (symbol)
1 (Red)	DC voltage (Vm)
2	No function
3	No function
4 (Black)	Earth terminal (GND)
5 (White)	Control voltage (Vcc)
6 (Yellow)	Speed command (Vsp)
7 (Brown)	Feed back (FG)

For AOU15RLS3 (H)

SERVICE PARTS INFORMATION 6

Active filter module

Check Point 1 : Check Open or Short-circuit and Diode (D1)



• Remove connector, check the open or short-circuit and the diode in the module

Check the open or short-circuit

Table.1 Each type standard value

Terminal		Resistance value	
		Type A	Type B
multimeter (+)	multimeter (-)	SACT32010 [HITACHI] LACT33020 [HITACHI]	PM-604 [FGEL] PM-703 [FGEL]
		PM-601 [FGEL] LOT No. - 1302931395	PM-601 [FGEL] LOT No. 1302931396 -
+ (+IN)*	- (-IN)*	360kΩ ± 20%	360kΩ ± 20%
- (-IN)*	N1 (N)*	0 Ω	0 Ω
※ P	+ (+IN)*	720kΩ ± 20%	900kΩ ± 20%
L1	L2	1.01MΩ / 0.76MΩ (Ref. value 1) (Ref. value 2)	1.01MΩ / 0.76MΩ (Ref. value 1) (Ref. value 2)
P	N1 (N)*	360kΩ ± 20%	540kΩ ± 20%
L1 , L2	Control Box	∞ Ω	∞ Ω
※ L2	N1 (N)*	1.65MΩ / 1.14MΩ (Ref. value 1) (Ref. value 2)	1.65MΩ / 1.14MΩ (Ref. value 1) (Ref. value 2)

* () is FGEL terminal name.

Table.2 Standard value is changed by the tool specification
(Type A and B are the same value)

Terminal		Resistance value
multimeter (+)	multimeter (-)	
※ L2	P	1.32MΩ / 0.66MΩ (Ref. value 1) (Ref. value 2)
※ P	L2	1.01MΩ / 0.76MΩ (Ref. value 1) (Ref. value 2)

※ By kind of multimeter , the value may change significantly.

Ref. value 1



Specifications for Multimeter
Manufacturer : FLUKE
Model name : FLUKE11
Power source : DC9V.

Ref. value 2

Specifications for Multimeter
Manufacturer : SANWA
Model name : PM3
Power source : DC3V.

► **If it is abnormal,replace ACTIVE FILTER MODULE**

LOT No. of PM-601 [FGEL] type

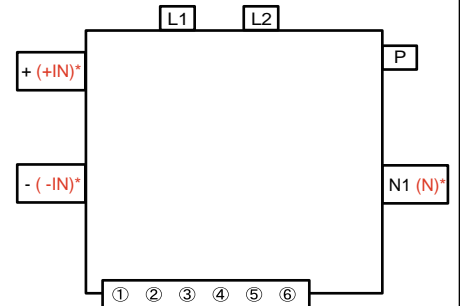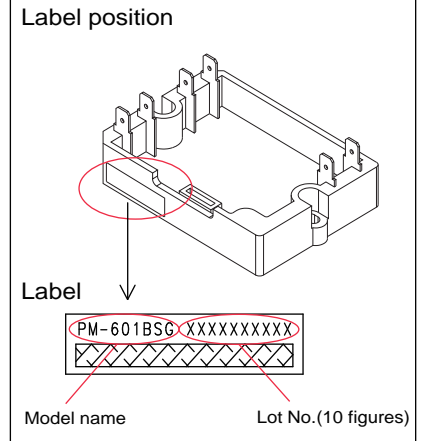

Check Point 2 : Check the Output DC voltage (between P and N)



• Check the Output DC voltage (between P and N) of compressor stopping and operating.

>> If the output voltage of compressor operating is less than the output voltage of compressor stopping, Active Filter Module is defective. >> **Replace Active Filter Module**


For AOU15RLS3 (H)

SERVICE PARTS INFORMATION 7

IPM

(Mounted on Transistor PCB)

Check Point 1 : Check the Transistor of PCB (for Resistance)




① Disconnect the connection wires between the Transistor PCB - Capacitor PCB and Transistor PCB - Inverter Compressor.

② Set the tester to the "Resistance" mode, and measure the resistance between the following terminals.


TM301 (P) - TM305(U) / TM304(V) / TM303(W)
TM302 (N) - TM305(U) / TM304(V) / TM303(W)

③ Judge the result of ② as follows:

Terminal		Resistance value
Tester(+)	Tester(-)	
P	U	Over 2kΩ (Including ∞Ω)
P	V	
P	W	
U	P	Over 20kΩ (Including ∞Ω)
V	P	
W	P	
N	U	Over 2kΩ (Including ∞Ω)
N	V	
N	W	
U	N	Over 2kΩ (Including ∞Ω)
V	N	
W	N	

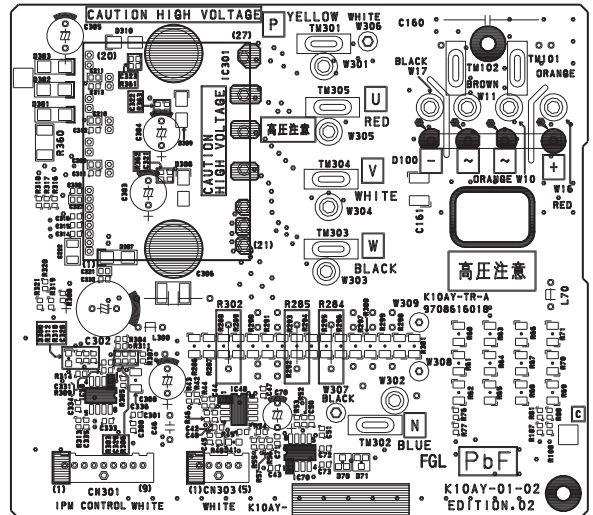

Check Point 2 : Check the Transistor of PCB (for Diode)



④ Set the tester to the "Diode" mode, and measure the voltage value between the following terminals.

⑤ Judge the result of ④ as follows:

Terminal		Tester display
Tester(+)	Tester(-)	
P	U	∞
P	V	
P	W	
U	P	0.3V~0.7V
V	P	
W	P	
N	U	∞
N	V	
N	W	
U	N	∞
V	N	
W	N	

WALL MOUNTED type INVERTER

3 . APPENDING DATA

3-1. FUNCTION SETTING

3-1-1 INDOOR UNIT

- Follow the instructions in the Local Setup Procedure, which is supplied with the remote control, in accordance with the installed condition.
After the power is turned on, perform the Function Setting on the remote control.
- The settings may be selected between the following two: Function Number or Setting Value.
- Settings will not be changed if invalid numbers or setting values are selected.

Function Details

1-1. Setting the Filter sign

Select appropriate intervals for displaying the filter sign on the indoor unit according to the estimated amount of dust in the air of the room.
If the indication is not required, select "No indication" (03).

(◆ . . . Factory setting)

Function Number	Setting Value	Setting Description
11	00	Standard (400 hours)
	01	Long interval (1000 hours)
	02	Short interval (200 hours)
	03	No indication

1-2. Setting the Auto restart

Enable or disable automatic restart after a power interruption.

(◆ . . . Factory setting)

Function Number	Setting Value	Setting Description
40	00	Enable
	01	Disable

Auto restart is an emergency function such as for power outage etc.
Do not attempt to use this function in normal operation.
Be sure to operate the unit by remote controller or external device.

1-3. Setting the Room temperature sensor switching (Only for Wired remote controller)

When using the Wired remote controller temperature sensor, change the setting to "Both" (01).

(◆ . . . Factory setting)

Function Number	Setting Value	Setting Description
42	00	Indoor unit
	01	Both

00: Sensor on the indoor unit is active.

01: Sensors on both indoor unit and wired remote controller are active.

- Remote controller sensor must be turned on by using the remote controller.

1-4. Setting the Remote controller custom code

(Only for wireless remote controller)

The indoor unit custom code can be changed.
Select the appropriate custom code.

(◆ . . .Factory setting)

Function Number	Setting Value	Setting Description
44	00	A
	01	B
	02	C
	03	D

1-5. Setting the External input control

"Operation / Stop" mode or "Forced stop" mode can be selected.

(◆ . . .Factory setting)

Function Number	Setting Value	Setting Description
46	00	Operation / Stop mode
	01	(Setting prohibited)
	02	Forced stop mode

1-6. Setting the Room temperature sensor switching (Aux.)

To use the temperature sensor on the wired remote controller only,
change the setting to "Wired remote controller" (01).

This function will only work if the function setting 42 is set at "Both" (01)

When the setting value is set to "both" (00), more suitable control of the room temperature
by setting function setting 30 and 31 too.

(◆ . . .Factory setting)

Function Number	Setting Value	Setting Description
48	00	Both
	01	Wired remote controller

1-7. Setting the Indoor unit fan control for energy saving for cooling

Enables or disables the power-saving function by controlling the indoor unit fan rotation
when the outdoor unit is stopped during cooling operation.

(◆ . . .Factory setting)

Function Number	Setting Value	Setting Description
49	00	Disable
	01	Enable
	02	Remote controller

00: When the outdoor unit is stopped, the indoor unit fan operates continuously following
the setting on the remote controller.

01: When the outdoor unit is stopped, the indoor unit fan operates intermittently at a very low speed.

02: Enable or disable this function by remote controller setting.

*When using a wired remote controller without indoor unit fan control for energy saving for cooling function,
or when connecting a single split converter, the setting cannot be made by using the remote controller.
Set to "00" or "01".

To confirm if the remote controller has this function, refer to the operating manual of each remote controller.

Temperature Correction

When changing Function 95, perform this setting before other Room temp. control settings (Function 30, 31, 35, 36).

If Function 95 is not set first, Room temperature control settings (Function 30, 31, 35, 36) will be reset and you must redo them again.

1-8. Setting the Heat Insulation condition (building insulation)

Heat insulation conditions differ according to the installed environment.

Standard insulation "00" allows system to rapidly respond to the cooling or heating load changes.

High insulation "01" is when the heat insulation structure of the building is high and does not require system to rapidly respond to cooling or heating load changes. When High insulation "01" is selected;

- Overheating (overcooling) is prevented at the start-up.
- All room temp. control settings (Function 30, 31, 35, 36) will reset to No correction [0.0°F (0.0°C)].

◆ . . . Factory setting)

Function Number	Setting Value	Setting Description
95	00	Standard insulation ◆
	01	High insulation

1-9. Setting the Room temperature control for indoor unit sensor

Depending on the installed environment, correction of the room temperature sensor may be required.

Select the appropriate control setting according to the installed environment.

The temperature correction values show the difference from the Standard setting "00" (manufacturer's recommended value).

- When Function 95-01(High insulation) is set, the Standard setting "00" will be the same as No correction "01" [0.0°F(0.0°C)].

◆ . . . Factory setting)

Function Number	Setting Value	Setting Description		
30 (For cooling)	31 (For heating)	00	Standard setting ◆	
		01	No correction 0.0°F (0.0°C)	
		02	-1°F (-0.5°C)	More Cooling Less Heating
		03	-2°F (-1.0°C)	
		04	-3°F (-1.5°C)	
		05	-4°F (-2.0°C)	
		06	-5°F (-2.5°C)	
		07	-6°F (-3.0°C)	
		08	-7°F (-3.5°C)	
		09	-8°F (-4.0°C)	Less Cooling More Heating
		10	+1°F (+0.5°C)	
		11	+2°F (+1.0°C)	
		12	+3°F (+1.5°C)	
		13	+4°F (+2.0°C)	
		14	+5°F (+2.5°C)	
		15	+6°F (+3.0°C)	
		16	+7°F (+3.5°C)	
17	+8°F (+4.0°C)			

1-10. Setting the Room temperature control for wired remote controller sensor

Depending on the installed environment, correction of the wire remote temperature sensor may be required. Select the appropriate control setting according to the installed environment. To change this setting, set Function 42 to Both "01". Ensure that the Thermo Sensor icon is displayed on the remote controller screen.

(◆ . . . Factory setting)


Function Number		Setting Value	Setting Description	
35 (For cooling)	36 (For heating)	00	No correction 0.0°F (0.0°C)	◆
		01	No correction 0.0°F (0.0°C)	
		02	-1°F (-0.5°C)	More Cooling Less Heating
		03	-2°F (-1.0°C)	
		04	-3°F (-1.5°C)	
		05	-4°F (-2.0°C)	
		06	-5°F (-2.5°C)	
		07	-6°F (-3.0°C)	
		08	-7°F (-3.5°C)	
		09	-8°F (-4.0°C)	
		10	+1°F (+0.5°C)	Less Cooling More Heating
		11	+2°F (+1.0°C)	
		12	+3°F (+1.5°C)	
		13	+4°F (+2.0°C)	
		14	+5°F (+2.5°C)	
		15	+6°F (+3.0°C)	
		16	+7°F (+3.5°C)	
		17	+8°F (+4.0°C)	

3-1-2 PROCEDURES TO CHANGE THE FUNCTION SETTING FOR WIRELESS RC

- This procedure changes to the function settings used to control the indoor unit according to the installation conditions. Incorrect settings can cause the indoor unit malfunction.
- After perform the "FUNCTION SETTING" according to the installation conditions using the remote controller.
- Settings will not be changed if invalid numbers or setting values are selected.


Entering the Function Setting Mode

- While pressing the POWERFUL button and SET TEMP.(^) button simultaneously, press the RESET button to enter the function setting mode.

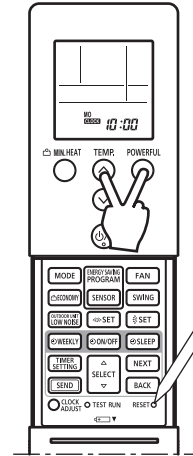


Selecting the Function Number and Setting Value


- (1) Press the SET TEMP.(^)(v) buttons to select the function number.
(Press the MIN. HEAT button to switch between the left and right digits.)

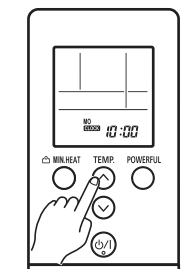


- (2) Press the POWERFUL button to proceed to setting the value.
(Press the POWERFUL button again to return to the function number selection.)
- (3) Press the SET TEMP.(^)(v) buttons to select the setting value.
(Press the MIN. HEAT button to switch between the left and right digits.)

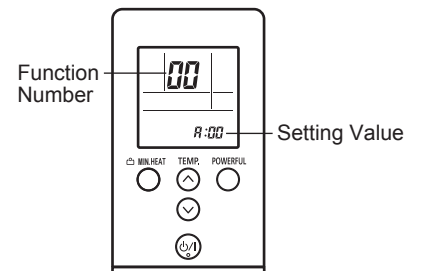

- (4) Press the MODE button, in the order listed to confirm the setting.
Please confirm that the beep sounds.
- (5) Next, please press the START/STOP(⏻/⏹) button.
Please confirm that the beep sounds.

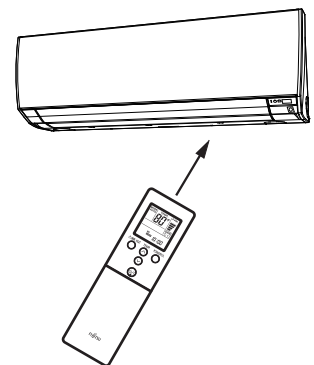

- (6) Press the RESET button to cancel the function setting mode.
- (7) After completing the FUNCTION SETTING, be sure to disconnect the power and connect it again.

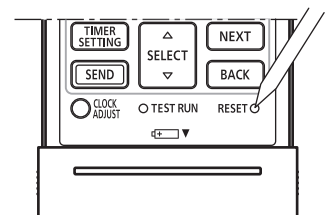


⚠ CAUTION

After disconnect the power, wait 10 seconds or more before connect it again.
The FUNCTION SETTING doesn't become active unless the power is disconnect the reconnected again.

Selecting the Remote Controller Signal Code

- (1) Press the START/STOP(⏻/⏪) button until only the clock is displayed on the remote controller display.
- (2) Press the MODE button for at least 5 seconds to display the current signal code. (initially set to A).
- (3) Press the SET TEMP.(^)(v) buttons to change the signal code between A→b→c→d.
Match the code on the display to the air conditioner signal code.
- (4) Press the MODE button again to return to the clock display.
The signal code will be changed.

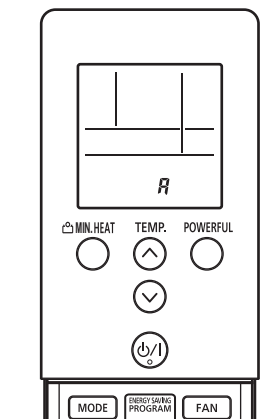

CAUTION

- If no buttons are pressed within 30 seconds after the signal code is displayed, the system returns to the original clock display.
- In this case, start again from step 1.
The air conditioner signal code is set to A prior to shipment.

3-2. THERMISTOR RESISTANCE VALUES

3-2-1 INDOOR UNIT

Room temperature thermistor		
Temp °F(°C)	Resistance(k Ω)	Voltage(V)
14 (-10)	58.2	0.73
23 (-5)	44.0	0.93
32 (0)	33.6	1.15
41 (5)	25.9	1.39
50 (10)	20.2	1.66
59 (15)	15.8	1.94
68 (20)	12.5	2.22
77 (25)	10.0	2.50
86 (30)	8.0	2.77
95 (35)	6.5	3.03
104 (40)	5.3	3.27
113 (45)	4.4	3.49


Indoor heat exchanger thermistor		
Temp°F(°C)	Resistance(k Ω)	Voltage(V)
-22 (-30)	1131.9	0.21
-13 (-25)	804.5	0.29
-4 (-20)	579.6	0.40
5 (-15)	422.9	0.53
14 (-10)	312.3	0.69
23 (-5)	233.2	0.88
32 (0)	176.0	1.10
41 (5)	134.2	1.36
50 (10)	103.3	1.63
59 (15)	80.3	1.92
68 (20)	62.9	2.21
77 (25)	49.7	2.51
86 (30)	39.6	2.79
95 (35)	31.7	3.06
104 (40)	25.6	3.30
113 (45)	20.8	3.53
122 (50)	17.1	3.73
131 (55)	14.1	3.90
140 (60)	11.6	4.05
149 (65)	10.4	4.14

3-2-2 OUTDOOR UNIT

Discharge thermistor		
Temp°F(°C)	Resistance(k Ω)	Voltage(V)
-22 (-30)	1013.1	0.06
-12 (-25)	729.1	0.09
-4 (-20)	531.6	0.12
5 (-15)	392.3	0.16
14 (-10)	292.9	0.21
23 (-5)	221.1	0.28
32 (0)	168.6	0.36
41 (5)	129.8	0.46
50 (10)	100.9	0.57
59 (15)	79.1	0.71
68 (20)	62.5	0.86
77 (25)	49.8	1.03
86 (30)	40.0	1.23
95 (35)	32.4	1.43
104 (40)	26.3	1.65
113 (45)	21.6	1.88
122 (50)	17.8	2.11
131 (55)	14.8	2.34
140 (60)	12.3	2.57
149 (65)	10.3	2.79
158 (70)	8.7	3.00
167 (75)	7.4	3.19
176 (80)	6.3	3.37
185 (85)	5.4	3.54
194 (90)	4.6	3.69
203 (95)	4.0	3.83
212 (100)	3.4	3.96
221 (105)	3.0	4.07
230 (110)	2.6	4.17
239 (115)	2.3	4.26
248 (120)	2.0	4.33

Outdoor heat exchanger thermistor		
Temp°F(°C)	Resistance(k Ω)	Voltage(V)
-22 (-30)	95.6	0.24
-12 (-25)	68.9	0.32
-4 (-20)	50.3	0.43
5 (-15)	37.2	0.57
14 (-10)	27.8	0.73
23 (-5)	21.0	0.92
32 (0)	16.1	1.14
41 (5)	12.4	1.39
50 (10)	9.6	1.65
59 (15)	7.6	1.93
68 (20)	6.0	2.21
77 (25)	4.8	2.49
86 (30)	3.8	2.77
95 (35)	3.1	3.02
104 (40)	2.5	3.26
113 (45)	2.1	3.48
122 (50)	1.7	3.68
131 (55)	1.4	3.85
140 (60)	1.2	4.00
149 (65)	1.0	4.13
158 (70)	0.8	4.25
167 (75)	0.7	4.35
176 (80)	0.6	4.43

Outdoor temperature thermistor		
Temp°F(°C)	Resistance(k Ω)	Voltage(V)
-22 (-30)	224.3	0.73
-12 (-25)	159.7	0.97
-4 (-20)	115.2	1.25
5 (-15)	84.2	1.56
14 (-10)	62.3	1.90
23 (-5)	46.6	2.26
32 (0)	35.2	2.61
41 (5)	26.9	2.94
50 (10)	20.7	3.25
59 (15)	16.1	3.52
68 (20)	12.6	3.76
77 (25)	10.0	3.97
86 (30)	8.0	4.14
95 (35)	6.4	4.28
104 (40)	5.2	4.41
113 (45)	4.2	4.51
122 (50)	3.5	4.59
131 (55)	2.8	4.65

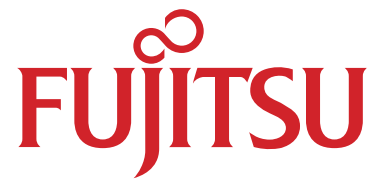

FUJITSU GENERAL LIMITED

3-3-17, Suenaga, Takatsu-ku, Kawasaki 213-8502, Japan